

MPROVE BUILDING AUTOMATION SYSTEM

DEPARTMENT OF VETERANS AFFAIRS MEDICAL CENTER 4100 WEST THIRD STREET DAYTON, OHIO 45428

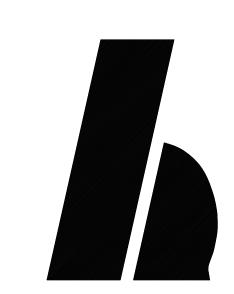

VA Project No: 552-15-207 Heapy Project No: 2013-04011


Firm License: 01528

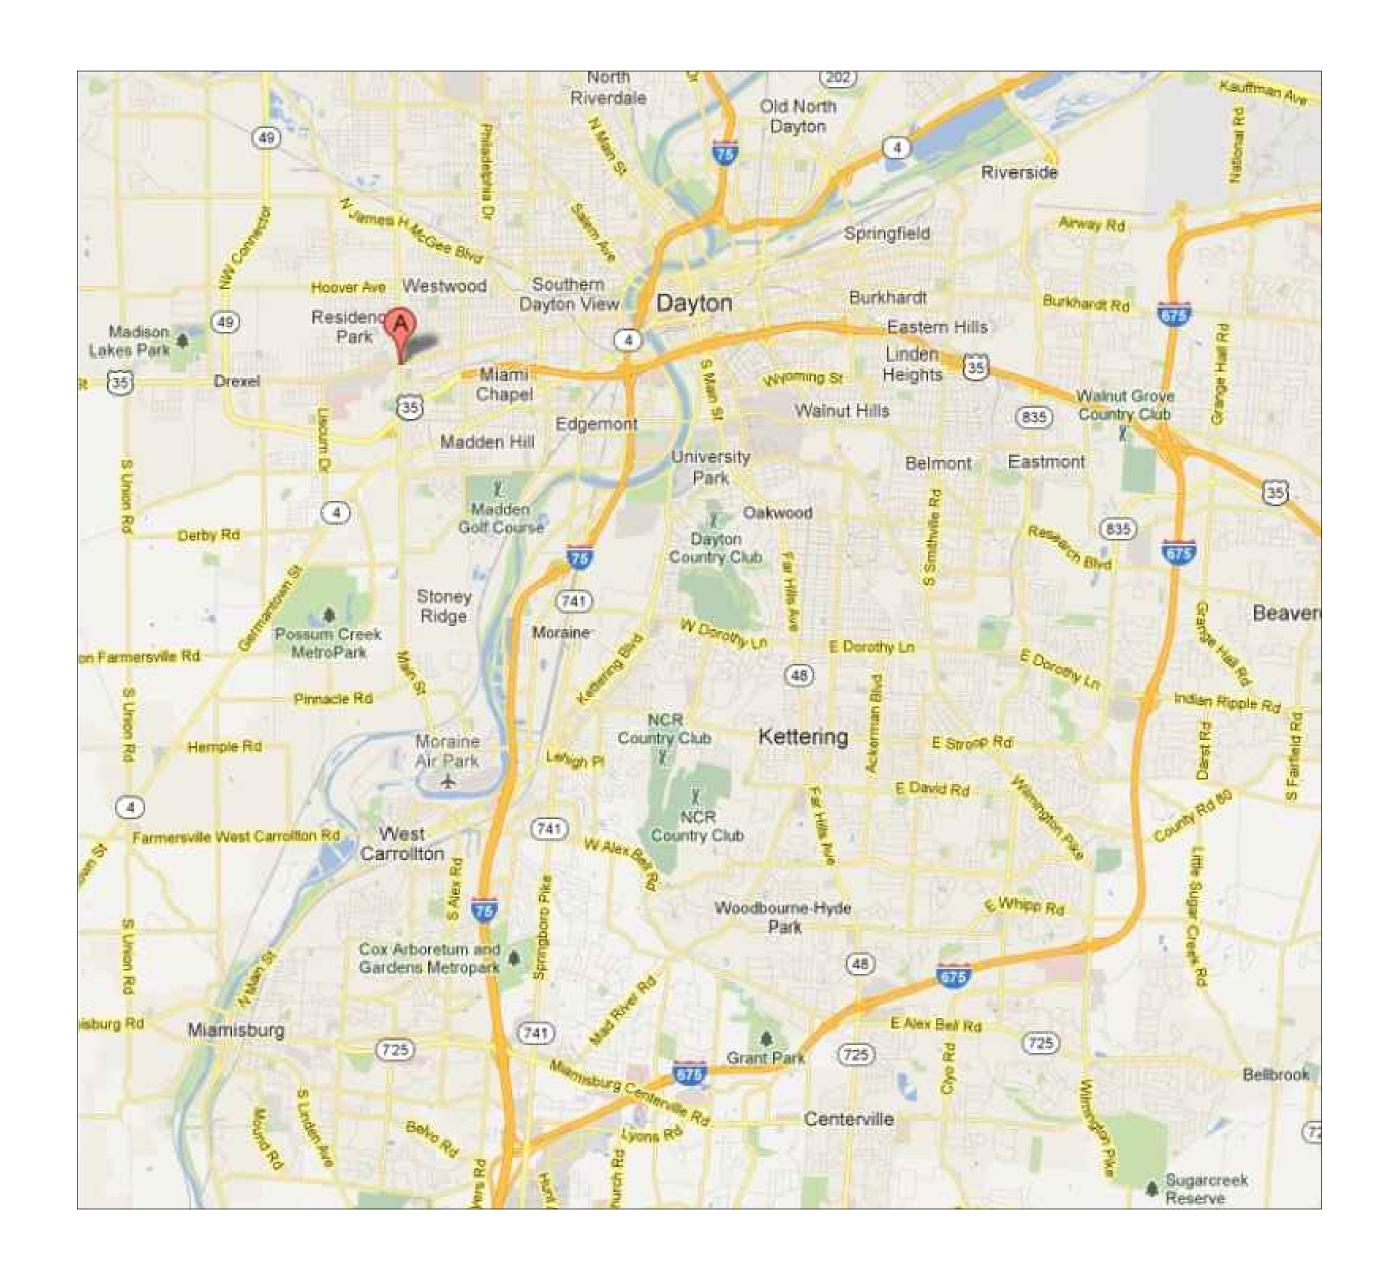



	INDEX OF DRAWINGS
SHEET	DESCRIPTION
C001	COVER SHEET
M001	LEGEND, ABBREVIATIONS, AND GENERAL NOTES
MS	SITE PLAN
MF126	BUILDING 126 FLOOR PLANS
MC126	BUILDING 126 CONTROLS AND AUTOMATION
MF147	BUILDING 147 FLOOR PLANS
MF307	BUILDING 307 FLOOR PLANS
MC307A	BUILDING 307 CONTROLS AND AUTOMATION
MC307B	BUILDING 307 CONTROLS AND AUTOMATION
MC307C	BUILDING 307 CONTROLS AND AUTOMATION
M310	BUILDING 310 FLOOR PLANS, CONTROLS AND AUTOMATION
MC310	BUILDING 310 CONTROLS AND AUTOMATION
M320	BUILDING 320 FLOOR PLANS, CONTROLS AND AUTOMATION
M330	BUILDING 330 FLOOR PLANS, CONTROLS AND AUTOMATION






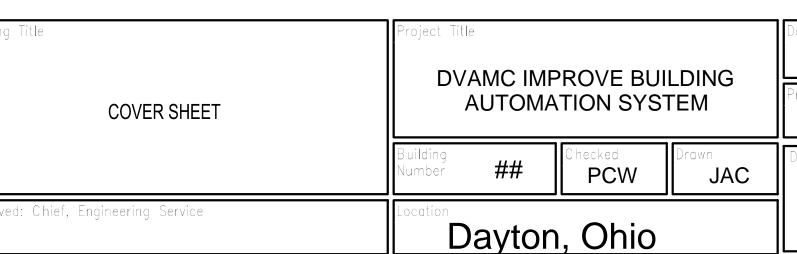

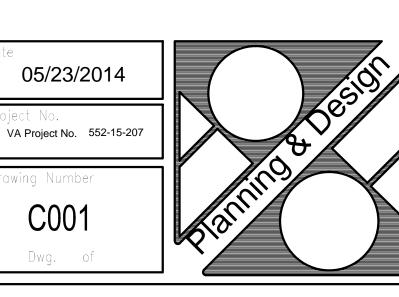

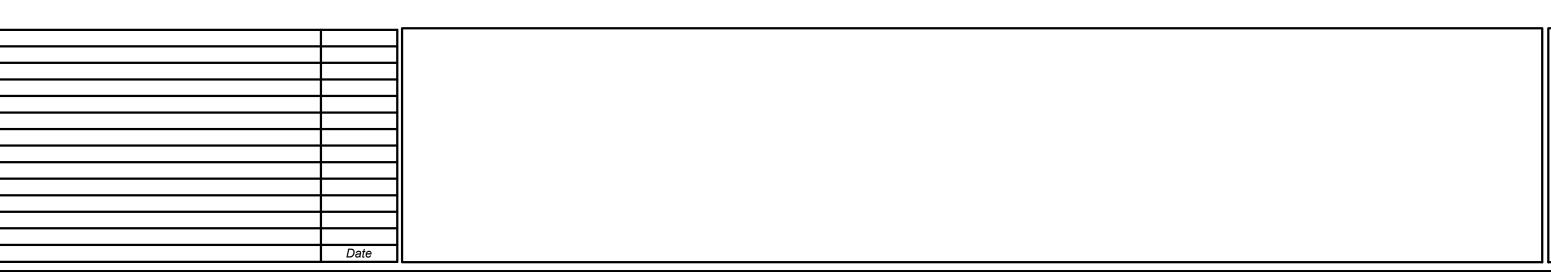

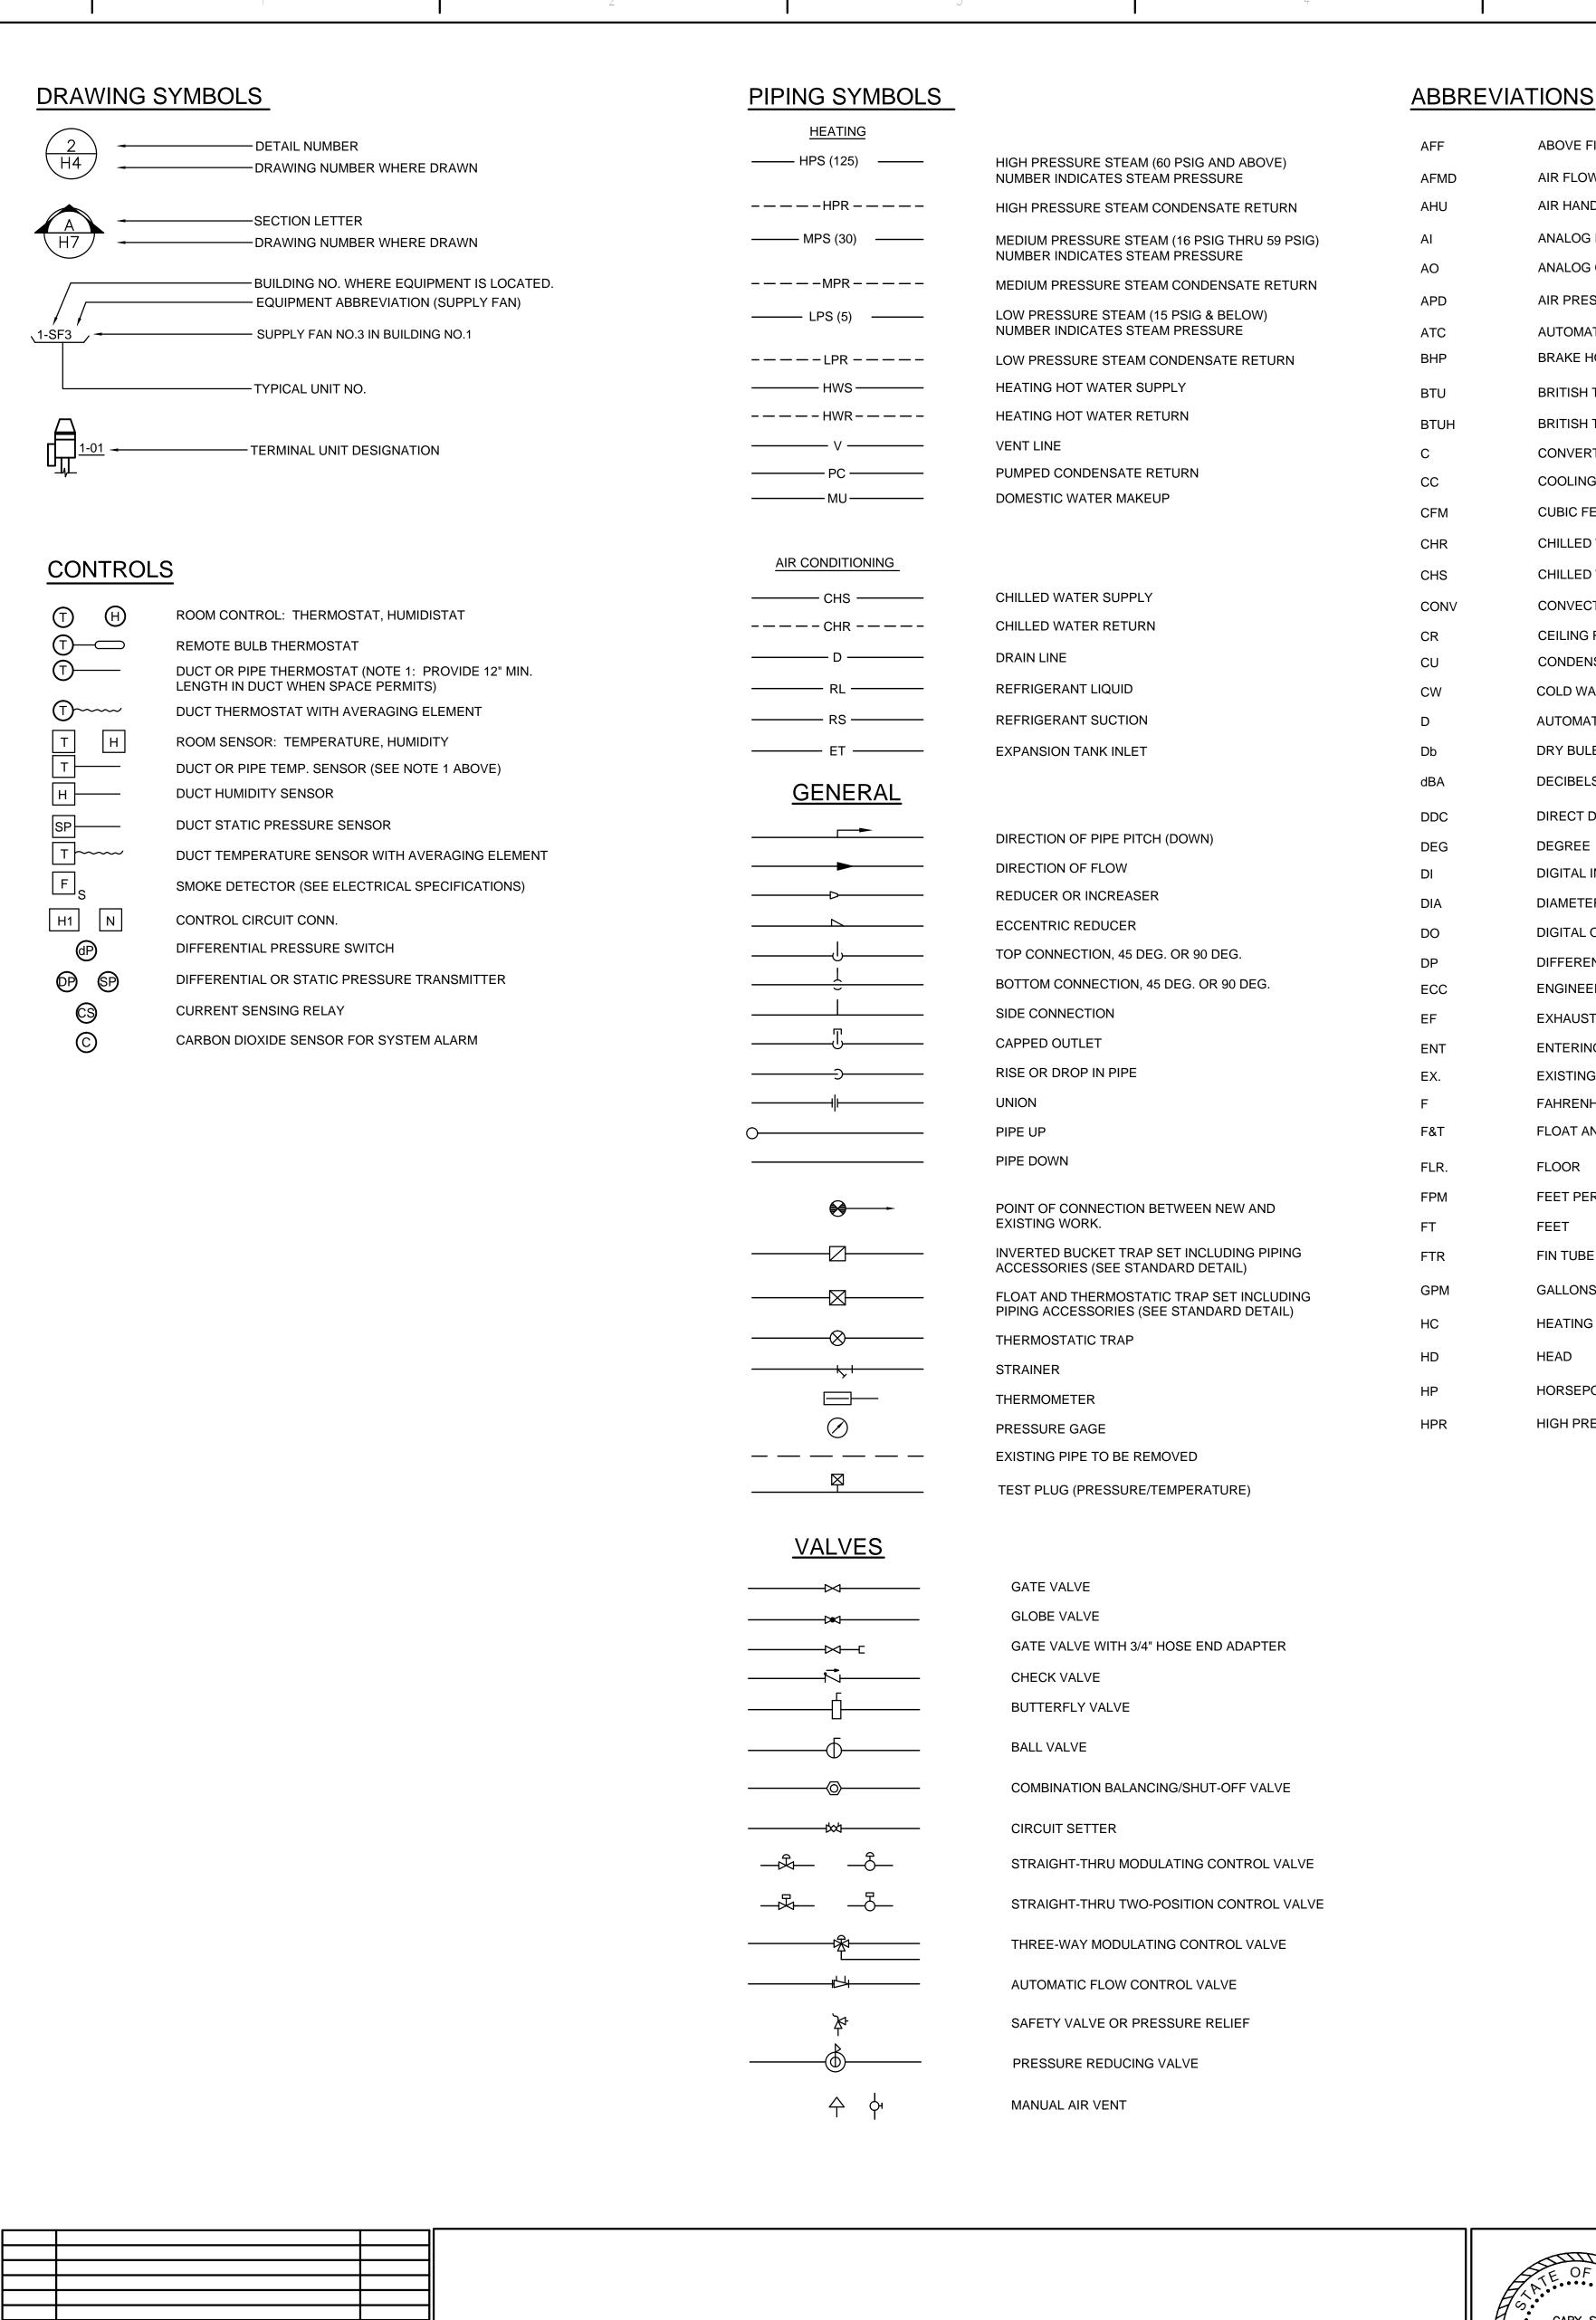

TIONS	ABBRE	VIATIONS
ABOVE FINISHED FLOOR	HPS	HIGH PRESSURE STEAM SUPPLY (60 PSIG & ABOVE)
AIR FLOW MEASURING DEVICE	HWR	HEATING HOT WATER RETURN
AIR HANDLING UNIT	HWS	HEATING HOT WATER SUPPLY
ANALOG INPUT	IFB	INTEGRAL FACE & BYPASS
ANALOG OUTPUT	HWR	HEATING HOT WATER RETURN
AIR PRESSURE DROP	HWS	HEATING HOT WATER SUPPLY
AUTOMATIC TEMPERATURE CONTROLS	IFB	INTEGRAL FACE & BYPASS
BRAKE HORSEPOWER	IN	INCHES
BRITISH THERMAL UNIT	IN WC	INCHES WATER COLUMN
BRITISH THERMAL UNIT PER HOUR	IN WG	INCHES WATER GAUGE
CONVERTOR	LAT	LEAVING AIR TEMPERATURE
COOLING COIL	LBS/HR	POUNDS PER HOUR
CUBIC FEET PER MINUTE	LPR	LOW PRESSURE STEAM CONDENSATE RETURN
CHILLED WATER RETURN	LPS	LOW PRESSURE STEAM SUPPLY (15 PSIG & BELOW)
CHILLED WATER SUPPLY	LTCP	LOCAL TEMPERATURE CONTROL PANEL
CONVECTOR	LVG	LEAVING
CEILING REGISTER	MAX	MAXIMUM
CONDENSING UNIT	MBH	1000 BTUH
COLD WATER (POTABLE)	MIN	MINIMUM
AUTOMATIC CONTROL DAMPER	MPR	MEDIUM PRESSURE STEAM CONDENSATE RETURN
DRY BULB TEMPERATURE, DEG. F DECIBELS	MPS	MEDIUM PRESSURE STEAM SUPPLY (16 PSIG THRU 59 PSIG)
DIRECT DIGITAL CONTROLS	NC	NOISE CRITERIA
DEGREE	NOM	NOMINAL
DIGITAL INPUT	O.A.	OUTSIDE AIR
DIAMETER	PD	PRESSURE DROP (FEET OF WATER)
DIGITAL OUTPUT	PF	PRE-FILTER
DIFFERENTIAL PRESSURE SENSOR	PH	PREHEAT COIL
ENGINEERING CONTROL CENTER	POD	POWER OPERATED, OPPOSED BLADE DAMPER
EXHAUST FAN	PPD	POWER OPERATED, PARALLEL BLADE DAMPER
FNTERING	Rh	RELATIVE HUMIDITY

REVOLUTIONS PER MINUTE

SMOKE DAMPER (RETURN)

SMOKE DAMPER (SUPPLY)

STATIC PRESSURE SENSOR

VARIABLE FREQUENCY DRIVE

WET BULB TEMPERATURE, DEG. F

STATIC PRESSURE (INCHES OF WATER)

SUPPLY FAN

UNIT HEATER

VALVE

STEAM HUMIDIFIER

VARIABLE AIR VOLUME

GENERAL NOTES:

1. THESE NOTES APPLY EQUALLY TO THE FULL SET OF DOCUMENTS.

INSULATE DUCTWORK AND PIPING WHERE EXISTING INSULATION HAS BEEN DAMAGED AND/OR REMOVED IN THE PERFORMANCE OF WORK IN THIS PROJECT.

THE CONTRACTORS SHALL REFER TO ALL SPECIFICATION SECTIONS AND THESE DRAWINGS FOR DETAILS OF BUILDING CONSTRUCTION TO ENSURE SPACE AND SATISFACTORY ARRANGEMENT FOR THEIR WORK. THE VARIOUS DRAWINGS COMPRISING THE SET ARE INTERDEPENDENT AND MUST BE USED JOINTLY AT ALL TIMES. EACH CONTRACTOR SHALL REFER TO THE GENERAL REQUIREMENTS OF THE CONTRACT. THE NOTES AND SYMBOLS INDICATED ON THE DRAWINGS ARE FOR THE GUIDANCE OF ALL TRADES INVOLVED IN THE PROJECT AND MUST BE FOLLOWED TO EXECUTE THE WORK AS INTENDED. IF DISCREPANCIES OCCUR, CONTACT THE VA COR THRU THE CONTRACTING OFFICER FOR CLARIFICATION BEFORE PROCEEDING.

EACH CONTRACTOR SHALL COORDINATE HIS WORK WITH THE WORK OF OTHERS. HE SHALL KEEP HIMSELF INFORMED OF THE PROGRESS AND DETAIL DEVELOPMENT OF THE WORK OF OTHERS AND SHALL BE RESPONSIBLE FOR COORDINATING AND EXPEDITING HIS WORK WITH OTHERS SO THAT THE PROGRESS OF THE TOTAL WORK SHALL BE KEPT ON SCHEDULE.

ALL WORK SHALL BE PERFORMED IN COMPLETE COMPLIANCE WITH ALL GOVERNING CODES AND STANDARDS.

EXISTING CONDITIONS SHOWN MAY BE AT VARIANCE WITH ACTUAL WORK IN PLACE. THE CONTRACTOR SHALL TAKE ALL NECESSARY FIELD MEASUREMENTS AND FIELD VERIFY ALL CONDITIONS AFFECTING THE EXECUTION OF THE WORK. ANY DISCREPANCIES BETWEEN EXISTING CONDITIONS AND THE WORK SHOWN ON THE CONTRACT DOCUMENTS WHICH MAY IMPACT THE PROGRESS OF THE WORK SHALL BE BROUGHT TO THE ATTENTION OF THE CONTRACTING OFFICER IN WRITING FOR RESOLUTION BEFORE PROCEEDING WITH THE WORK.

EACH CONTRACTOR AND/OR TRADE, FITTING OR PLACING HIS WORK INTO OR ON THE WORK OF OTHERS DOES SO WITH THE UNDERSTANDING THAT THE INSTALLATION OF HIS WORK CONSTITUTES HIS ACCEPTANCE OF THE SUITABILITY OF THE WORK IN PLACE. IF THE WORK OF OTHERS IS NOT ACCEPTABLE, HE SHALL NOTIFY THE VA COR AND SUCH WORK SHALL BE CORRECTED. ANY NEW WORK INSTALLED IN UNSUITABLE EXISTING WORK SHALL BE THE RESPONSIBILITY OF THE CONTRACTOR OR TRADE INSTALLING THE NEW WORK. NO CLAIMS FOR ADDITIONAL COMPENSATION FOR CORRECTING WORK INSTALLED IN UNSUITABLE EXISTING CONDITIONS WILL BE CONSIDERED.

ALL PENETRATIONS THROUGH EXISTING FIRE-RATED ASSEMBLIES SHALL BE PROTECTED AND/OR FIRE-STOPPED AS REQUIRED TO MAINTAIN FIRE-RATINGS INDICATED. COORDINATE WITH ALL TRADES TO ENSURE FIRE-RATED PENETRATION REQUIREMENTS AND DETAILS ARE MET.

ANNULAR SPACE OF ALL PIPE, CONDUIT, & OTHER SIMILAR PENETRATIONS OF FIRE RATED ASSEMBLIES SHALL BE FIRESTOPPED. IN ADDITION, PENETRATIONS THROUGH 0-HOUR RATED WALLS & FLOORS SHALL BE FIRESTOPPED TO RETARD PASSAGE OF FIRE & SMOKE.

10. ACCESS PANELS IN NON ACCESSIBLE SUSPENDED CEILINGS SHALL BE PROVIDED FOR ALL VALVES, TRAPS, DAMPERS, CLEANOUTS, FLOW METERS, CONTROLS, ETC.

11. WHERE DUCTS OR PIPES ARE REMOVED THRU WALL/FLOOR/ROOF THAT IS TO REMAIN, PATCH WALL/FLOOR/ROOF OPENING TO MATCH EXISTING WHERE OPENING IS NOT RE-USED.

12. ALL CUTTING AND PATCHING REQUIRED FOR THIS PROJECT SHALL BE INCLUDED IN THE CONTRACT. REFINISH ANY SURFACE DISTURBED UNDER THIS WORK TO MATCH EXISTING.

13. ANY REMOVED EQUIPMENT SHALL BE TURNED OVER TO THE VA. ITEMS NOT DESIRED BY THE VA SHALL BE

REMOVED FROM THE PREMISES AND DISPOSED OF PROPERLY BY THE CONTRACTOR.

14. THE CONTRACT DRAWINGS ARE NOT INTENDED TO SHOW EVERY VERTICAL OR HORIZONTAL OFFSET WHICH MAY BE NECESSARY TO COMPLETE THE SYSTEMS. COORDINATE WORK IN ADVANCE WITH ALL OTHER TRADES AND REPORT IMMEDIATELY ANY DIFFICULTIES WHICH CAN BE ANTICIPATED.

15. WHERE CONTROL DEVICES ARE REMOVED, PNEUMATIC LINES SHALL BE REMOVED BACK TO POINT OF ACTIVE MAIN AND CAPPED; AND CONTROL WIRING AND CONDUIT SHALL BE REMOVED BACK TO SOURCE.

16. ALL EXISTING PIPING, EQUIPMENT, CONTROLS, ETC. SHOWN DASHED SHALL BE REMOVED. THE MAJORITY OF WORK TO BE REMOVED IS SHOWN. REMOVE ALL INCIDENTAL AND/OR ABANDONED EQUIPMENT, DUCTWORK, PIPING, ETC. THAT MAY NOT BE SHOWN BUT IS ASSOCIATED WITH THE REMOVAL WORK.

17. WHERE EXISTING HVAC UTILITIES IN SERVICE WILL BE DISRUPTED DURING THE CONSTRUCTION OF THIS PROJECT, THIS WORK SHALL BE PERFORMED ON WEEKENDS OR WEEK NIGHTS, IF REQUIRED BY THE VA COR. DOWNTIME SHALL BE KEPT TO A MINIMUM, AND SHALL BE COORDINATED AND SCHEDULED WELL IN ADVANCE (MINIMUM 15 WORKING DAYS) WITH THE VA COR.

GARY S. EODICE E-52755

ENTERING

EXISTING

FLOOR

FEET

HEAD

FAHRENHEIT

FEET PER MINUTE

FIN TUBE RADIATION

GALLONS PER MINUTE

HIGH PRESSURE STEAM CONDENSATE RETURN

HEATING COIL


HORSEPOWER


FLOAT AND THERMOSTATIC



DVAMC IMPROVE BUILDING **AUTOMATION SYSTEM**

05/23/2014 VA Project No. 552-15-207

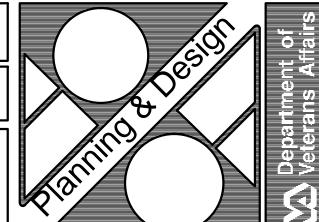


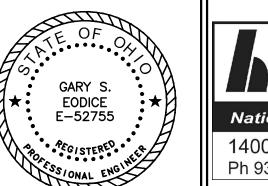


LEGEND, ABBREVIATIONS, AND GENERAL NOTES

ed: Chief, Engineering Service

Dayton, Ohio

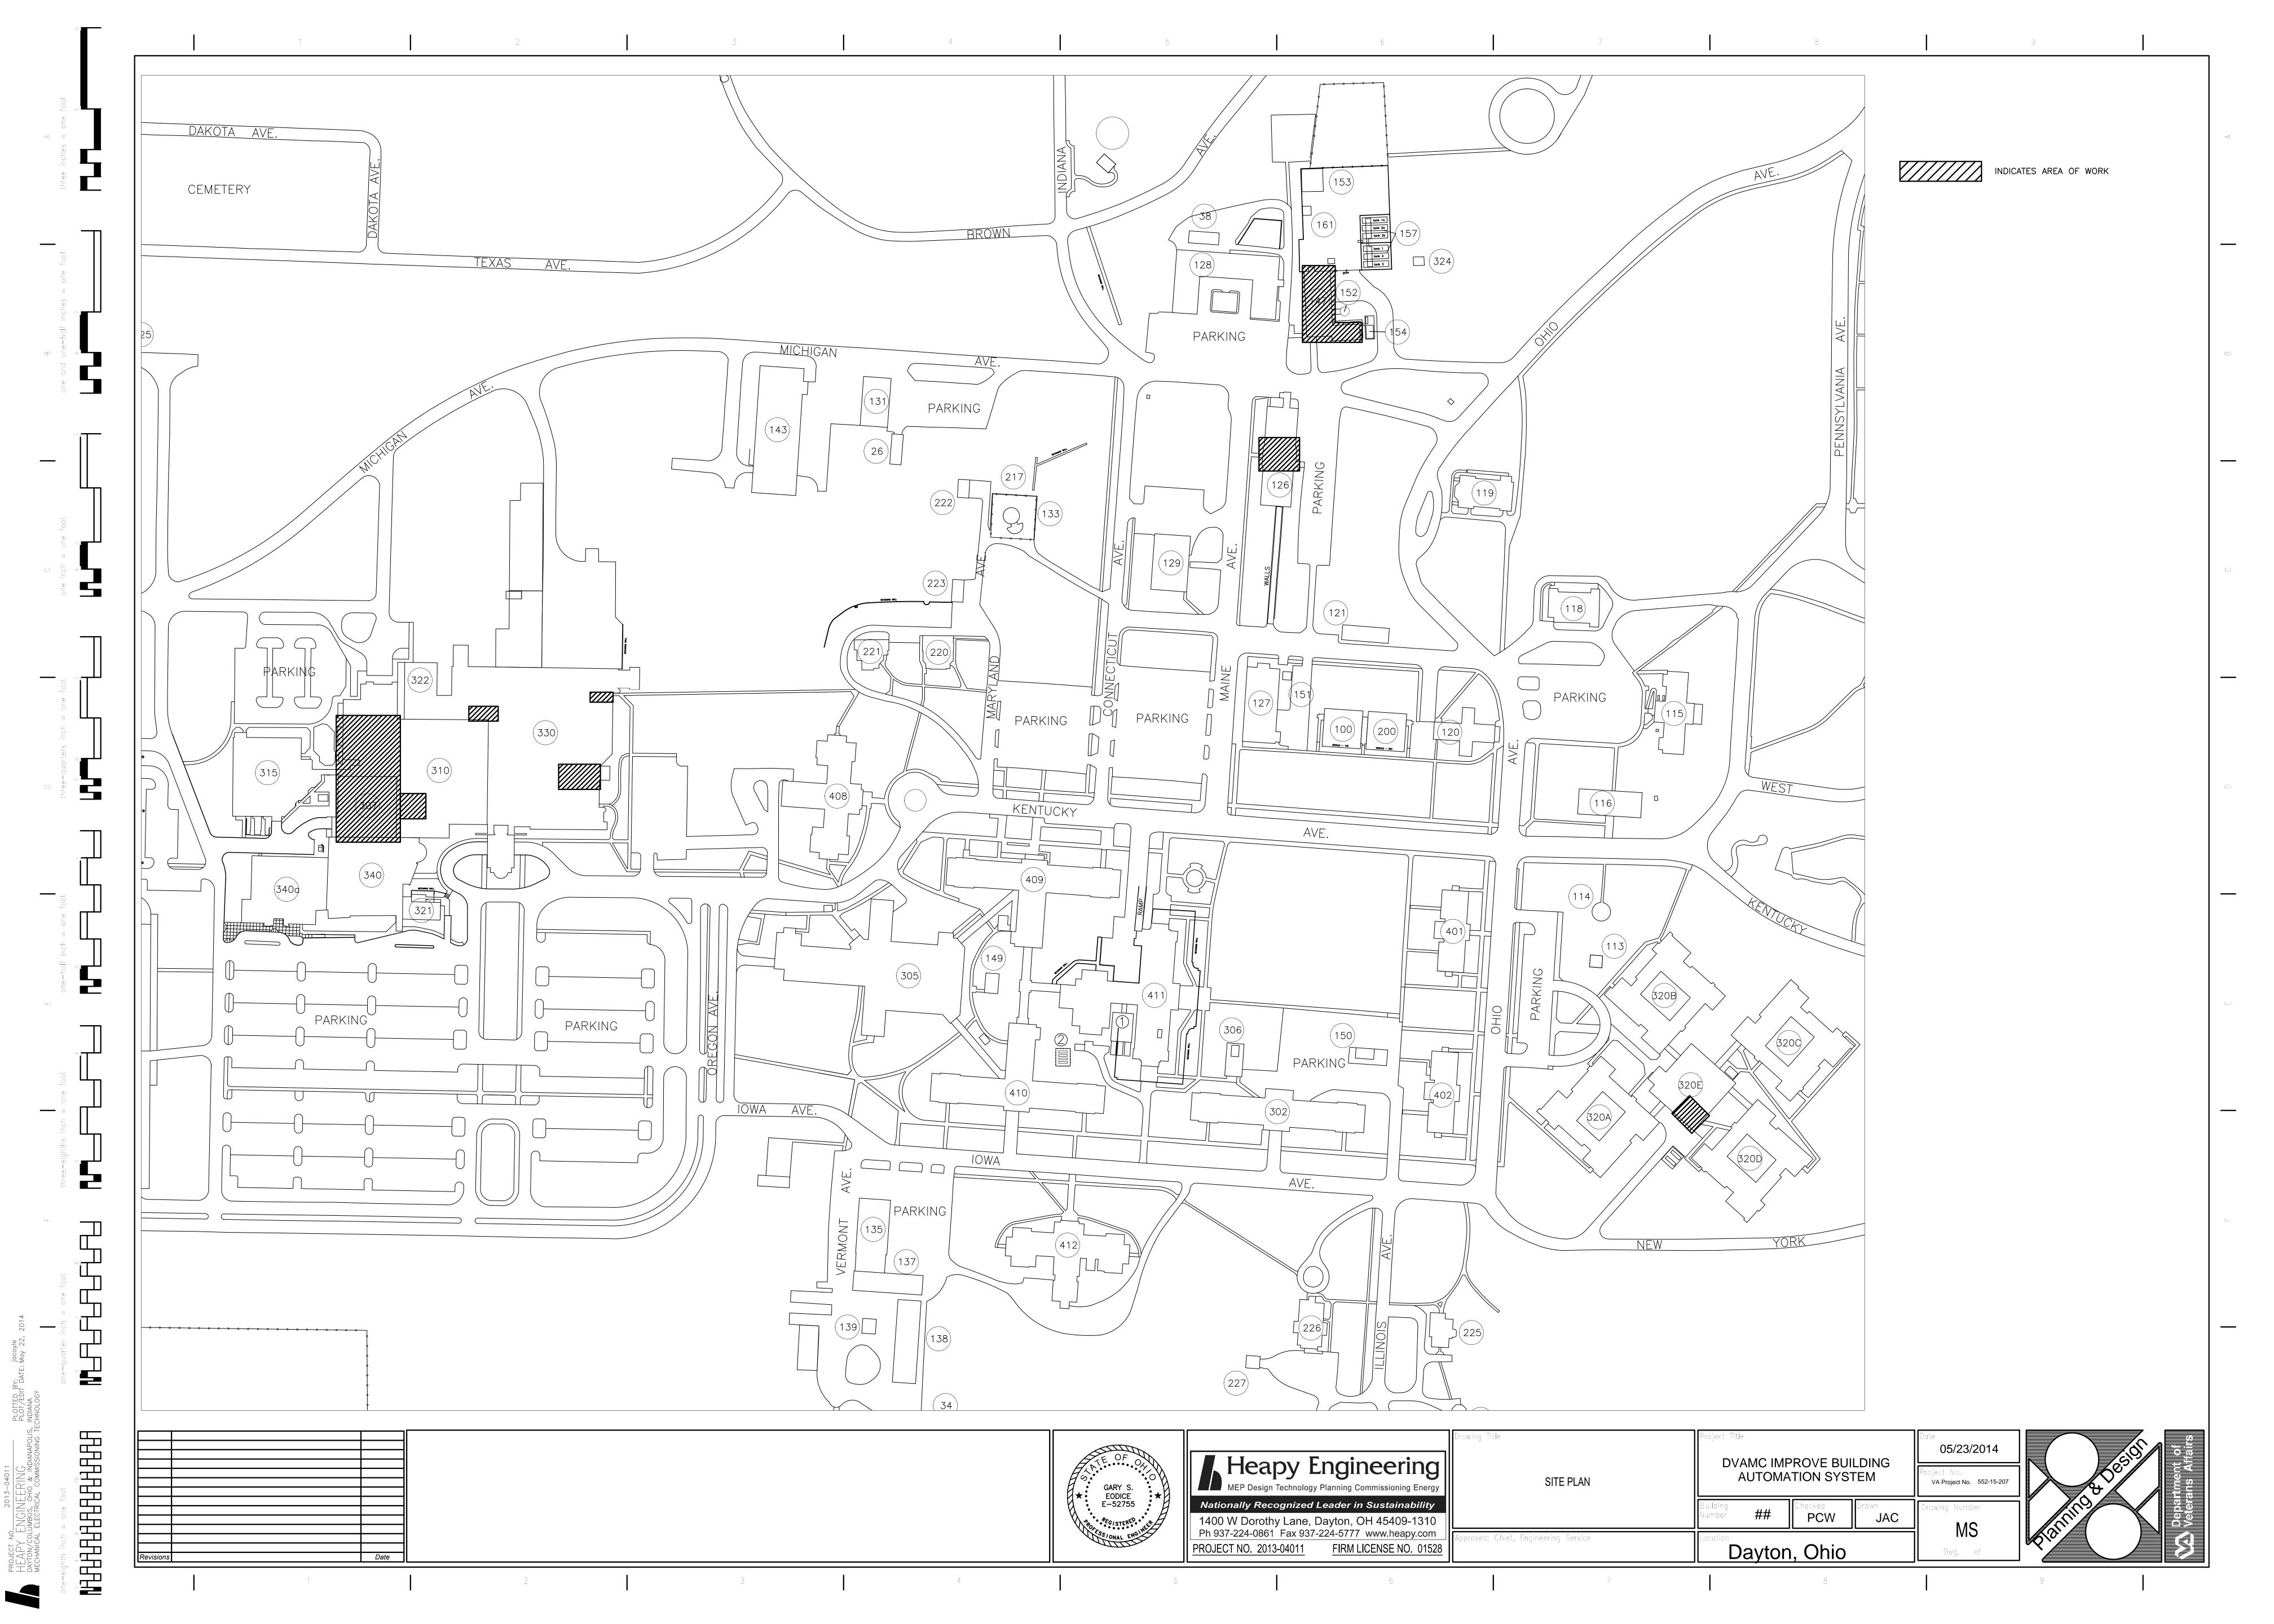

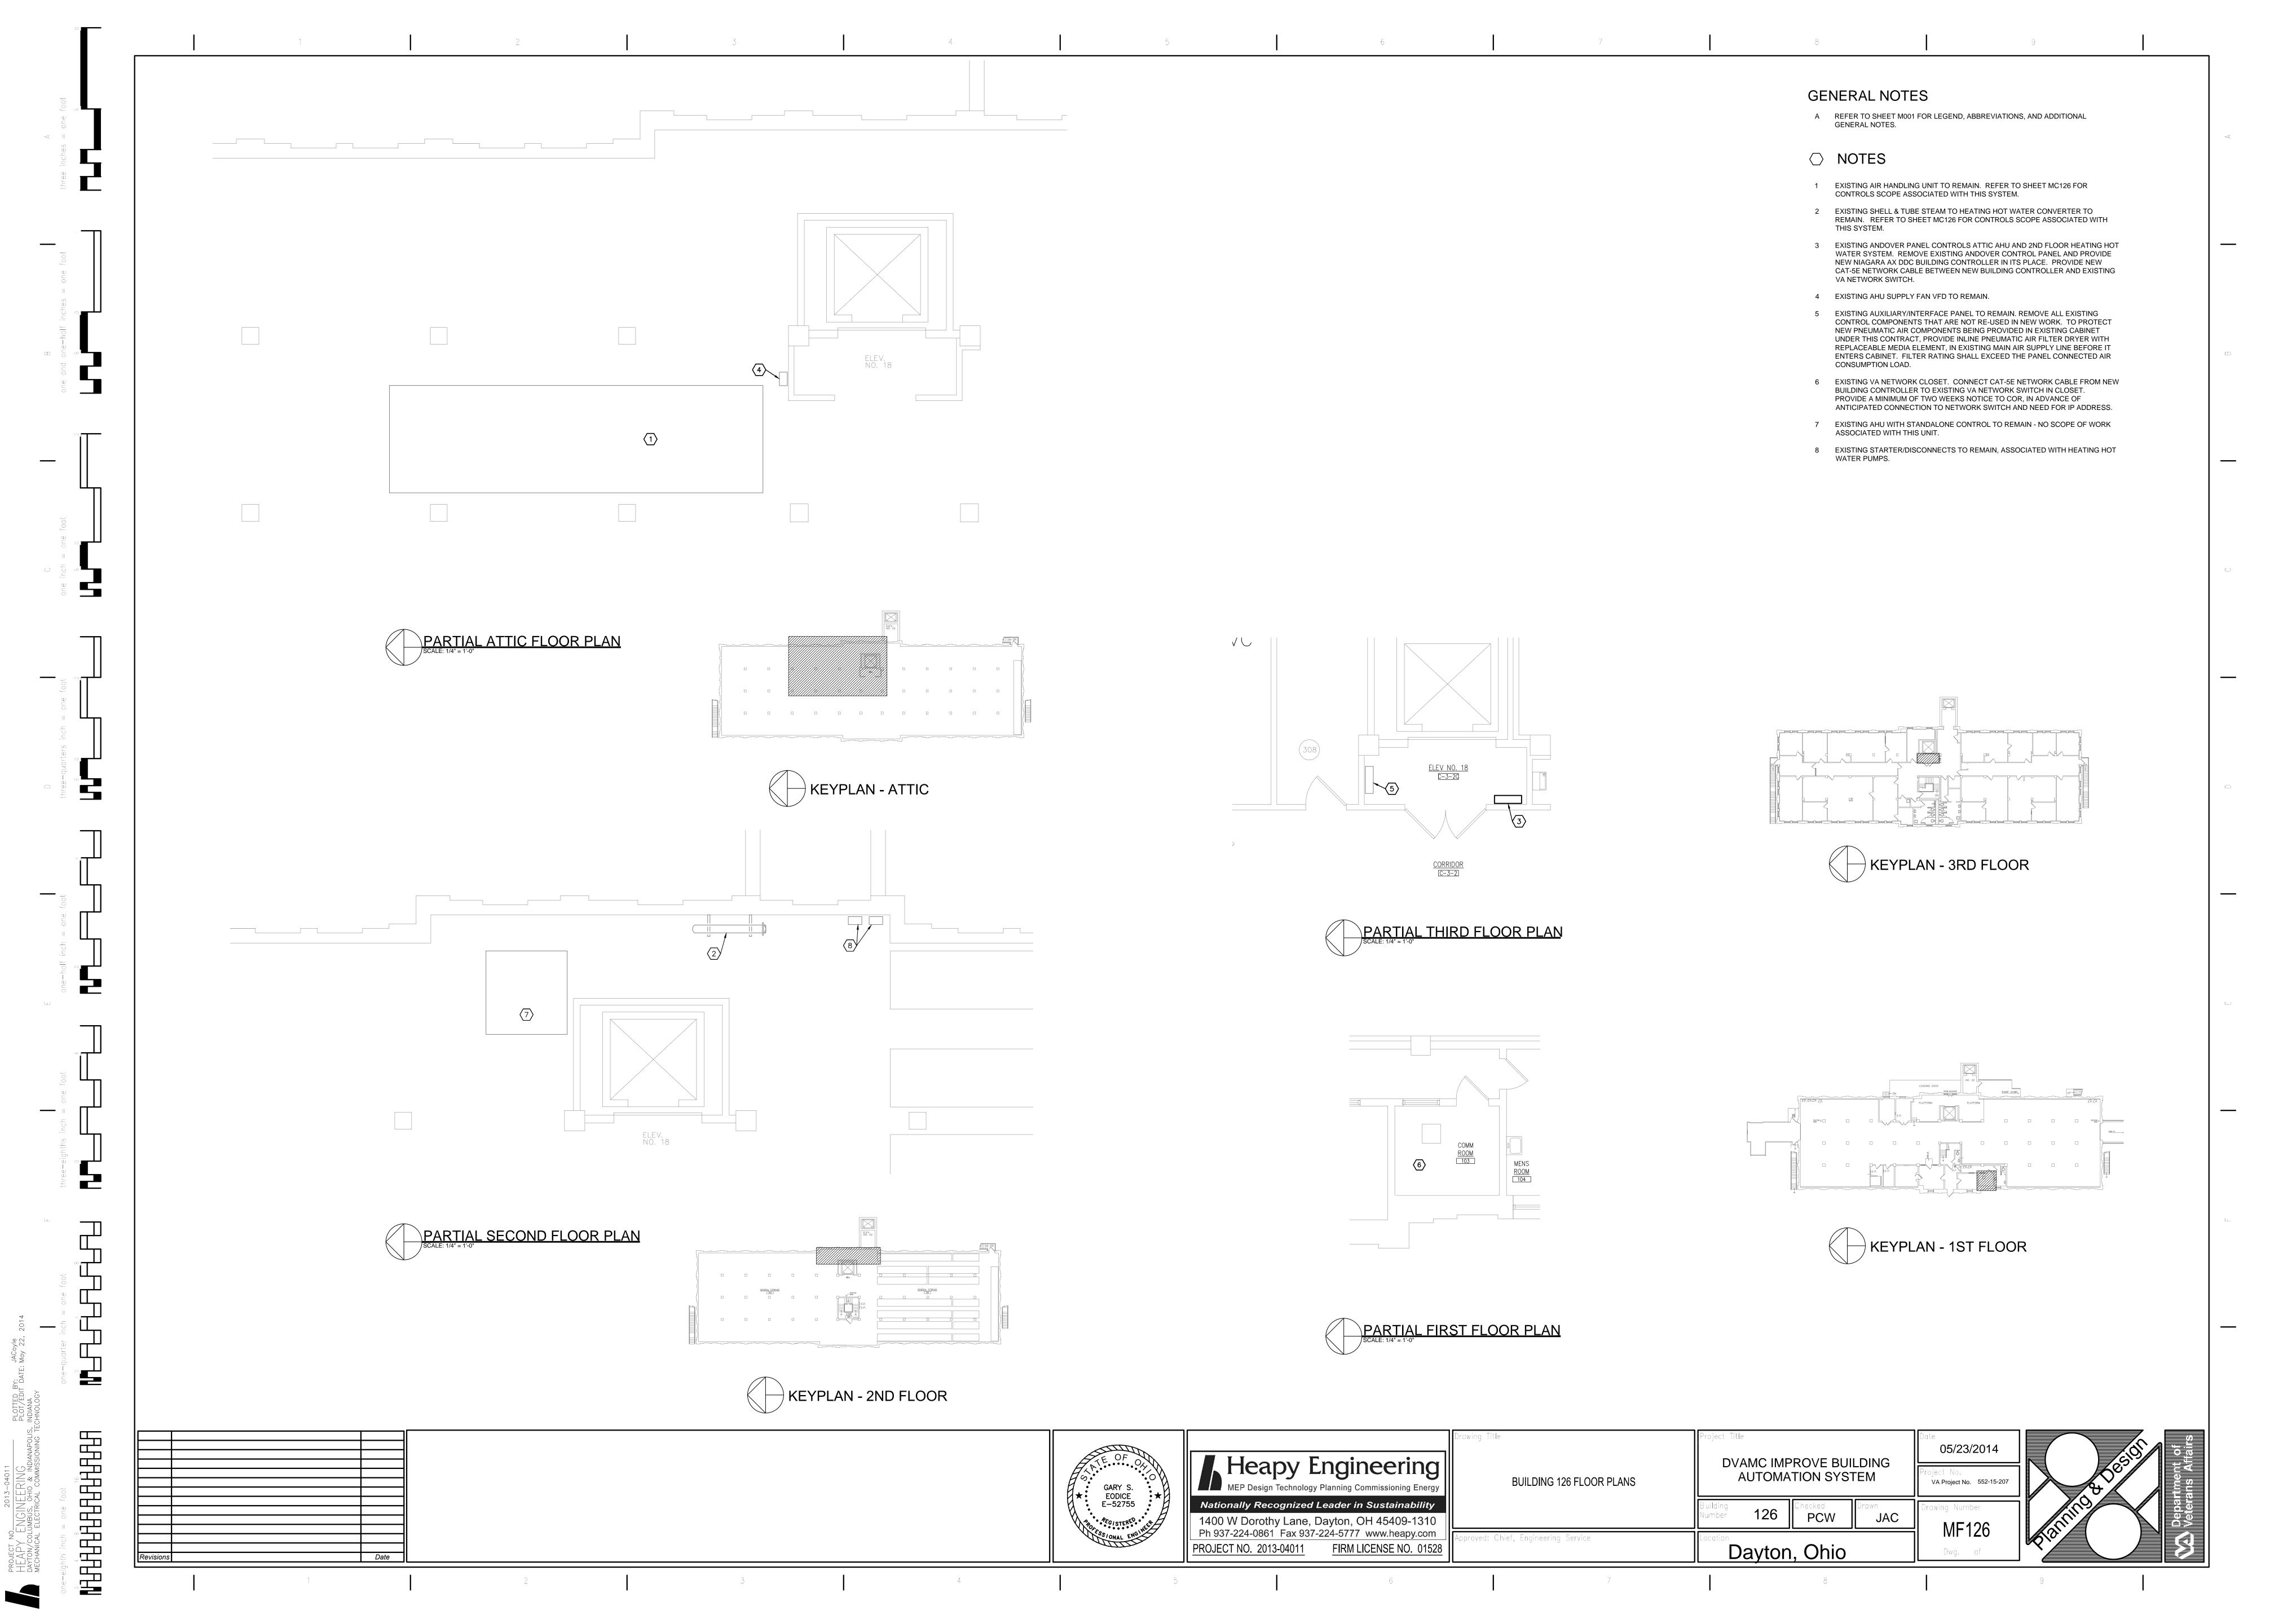

HOT WATER CONVERTERS AND CIRCULATING PUMPS

HOT WATER CONVERTER AND PUMP CONTROL SEQUENCE

- 1.1 SEQUENCE SHALL HAVE THE ABILITY TO BE INITIATED BY THE DCP OR REMOTELY AT THE ECC. EACH CONVERTER AND PUMP IS SIZED FOR 100% OF THE REQUIRED LOAD. 2 HOT WATER CIRCULATING PUMPS
- 2.1 THE LEAD HOT WATER PUMP 126-P1 OR STANDBY HOT WATER PUMP 126-P2 SHALL RUN CONTINUOUSLY IN CONJUNCTION WITH HOT WATER CONVERTER 126-C1 TO PROVIDE YEAR-ROUND HOT WATER FOR SPACE TEMPERATURE CONTROL. START STANDBY PUMP 126-P2 UPON FAILURE OF LEAD PUMP. A SEQUENCE PROGRAM SHALL REVERSE THE LEAD AND STANDBY PUMPS EVERY 200 HOURS.
- 2.2 EACH PUMP HAS AN EXISTING CURRENT SENSING RELAY WHICH SHALL BE UTILIZED TO INDICATE PUMP STATUS.


3 HOT WATER CONVERTER

3.1 MODULATING STEAM CONTROL VALVES V-5 AND V-6 (SIZED FOR 1/3 AND 2/3 LOAD) ARE ASSOCIATED WITH THE HOT WATER HEATING SYSTEM. THE STEAM CONTROL VALVES SHALL FAIL CLOSED. VALVES V-5 AND V-6 (SMALLER VALVE TO BE THE LEAD VALVE) SHALL BE CONTROLLED FROM OUTDOOR AIR TEMPERATURE AND LEAVING WATER TEMPERATURE SENSOR T-7 TO DELIVER SUPPLY WATER VARYING AS FOLLOWS:

OUTDOOR AIR TEMP 60 DEG. F


180 DEG. F 100 DEG. F.

3.2 CONTROL SEQUENCE, BASED ON VALVES V-5 AND V-6, SHALL BE AS FOLLOWS: MODULATE VALVE V-5 IN RESPONSE TO DCP. ONCE VALVE IS FULL OPEN, MODULATE VALVE V-6 OPEN AND CLOSE VALVE V-5. ONCE VALVE V-6 IS FULL OPEN, AGAIN MODULATE VALVE V-5 IN RESPONSE TO ADDITIONAL STEAM REQUIREMENT. REVERSE CONTROL SEQUENCE ON A DROP IN STEAM CONSUMPTION. VALVES SHALL BE SEPARATE CONTROL POINTS OF THE DCP.

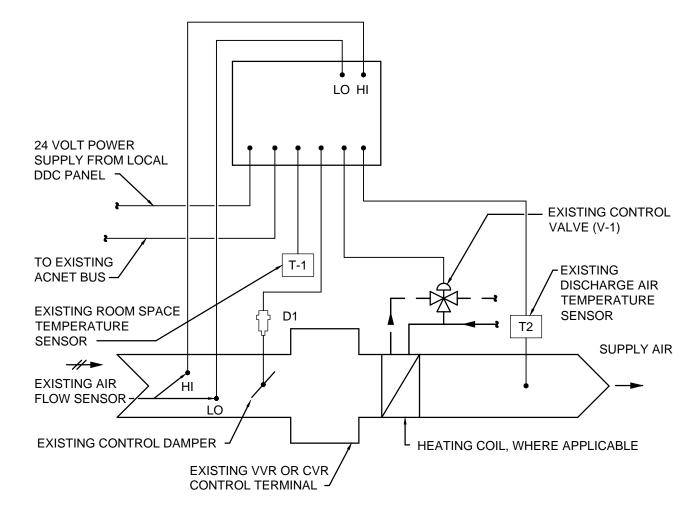

VVR AND CVR TERMINAL CONTROLS

EXISTING VAV AND CAV REHEAT AIR TERMINAL UNITS: EXISTING PRESSURE INDEPENDENT CAV AND VAV RH ATU WITH ANDOVER LTU3 DIRECT DIGITAL CONTROLLERS AND A ROOM TEMPERATURE SENSOR (THERMOSTAT) TO REMAIN (QTY. 21). INTEGRATE EXISTING ATU CONTROLLERS INTO NEW TRIDIUM JACE. PROVIDE JACE WITH ANDOVER DRIVER AS REQUIRED FOR THIS INTEGRATION. COORDINATE DRIVER REQUIREMENTS WITH ENGINEER PRIOR TO ORDERING

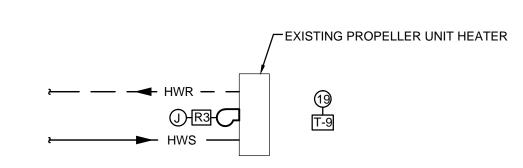

PROPELLER UNIT HEATER CONTROL

UPON A DROP IN THIRD FLOOR CEILING PLENUM TEMPERATURE BELOW SETPOINT AS SENSED BY EXISTING PLENUM TEMPERATURE SENSOR T-9 THE DDC SYSTEM SHALL START UNIT HEATER FANS THROUGH EXISTING RELAY. REFER TO AHU SEQUENCES FOR ADDITIONAL INFORMATION.

GENERAL NOTES

LEGEND (APPLIES TO AIR HANDLING UNIT 126-AH1)

C CURRENT SENSING RELAY

DP-1 DIFFERENTIAL PRESSURE SENSOR

MODULATING RELIEF AIR

MODULATING RETURN AIR

MODULATING OUTSIDE AIR

ECC ENGINEERING CONTROL CENTER

SPS-1 SUPPLY DUCT STATIC PRESSURE

STATIC PRESSURE SENSOR

STATIC PRESSURE SENSOR

SUPPLY AIR TEMPERATURE

OUTSIDE AIR TEMPERATURE

PREHEAT COIL LEAVING AIR

TEMPERATURE SENSOR

TEMPERATURE SENSOR

MIXED AIR TEMPERATURE

HEATING HOT WATER SUPPLY

HEATING HOT WATER RETURN

FIRST FLOOR CEILING PLENUM

TEMPERATURE SENSOR

TEMPERATURE SENSOR

TEMPERATURE SENSOR

T-10 COOLING COIL LEAVING

CONTROL VALVE

CONTROL VALVE

AIR TEMPERTURE

MODULATING 1/3 STEAM

MODULATING 2/3 STEAM

DX COOLING COIL CIRCUIT

MODULATING 1/3 STEAM

MODULATING 2/3 STEAM

CONTROLLER WITH MOTOR

SOLENOID VALVES

CONTROL VALVE

CONTROL VALVE

VSMC VARIABLE SPEED MOTOR

STARTER

SPS-2 BUILDING STATIC PRESSURE

SPS-3 SUPPLY DUCT HIGH LIMIT

SPS-4 RETURN DUCT HIGH LIMIT

SENSOR

SENSOR

SENSOR

RETURN AIR

SENSOR

T-6 FREEZESTAT

T-3

FAN/PUMP START-STOP RELAYS

DAMPER

DSD DUCT SMOKE DETECTORS

DIRECT DIGITAL CONTROL PANEL

- A COMPLETE SYSTEM OF AUTOMATIC TEMPERATURE CONTROLS SHALL BE INSTALLED UNDER THIS CONTRACT AS REQUIRED TO ACCOMPLISH THE SEQUENCE OF CONTROL FOR VARIOUS ITEMS OF EQUIPMENT AND SYSTEMS AS DESCRIBED HEREINAFTER. THE SYSTEM SHALL BE A DIRECT DIGITAL CONTROL SYSTEM UTILIZING PNEUMATIC
- ALL CONTROL POWER SOURCES REQUIRED SHALL BE PROVIDED UNDER THE ATC WORK. THIS WORK SHALL INCLUDE BUT NOT BE LIMITED TO WIRING, CONDUIT, TRANSFORMERS, RELAYS AND FUSES.
- POINTS LIST IS SHOWN AS AN AID TO THE CONTRACTOR INDICATING THE MINIMUM POINTS REQUIRED FOR CONTROL AND MONITORING. ALL INPUT AND OUTPUT POINTS, AND THEIR REQUIRED INTERFACE AND ACCESSORY HARDWARE, SHALL BE PROVIDED FOR A COMPLETE AND FUNCTIONAL CONTROL SYSTEM. IF OR WHEN ADDITIONAL POINTS ARE REQUIRED TO ACCOMPLISH THE SEQUENCES OF CONTROL SPECIFIED, THESE POINTS, ALONG WITH ADDITIONAL DIRECT DIGITAL CONTROL PANEL(S) (IF REQUIRED), SHALL ALSO BE PROVIDED.

TRANSMITS MOTOR CURRENT TO

TRANSMITS DIFFERENTIAL PRESSURE

DCP TO INDICATE STATUS OF

TO DCP TO INDICATE FILTER

CONTROLS OPERATION OF AIR

HANDLING UNIT IN ACCORDANCE WITH THE SEQUENCE OF OPERATION

PROPORTIONS FLOW OF RELIEF

CLOSES WHEN SUPPLY FAN STOPS

PROPORTIONS FLOW OF RETURN

OPENS WHEN SUPPLY FAN STOPS

PROPORTIONS FLOW OF OUTSIDE

CLOSES WHEN SUPPLY FAN STOPS

LOCATED IN BUILDING 310 MEZZANINE FOR

ENABLES/DISABLES HEATING HOT WATER

MONITORING OF SYSTEM OPERATIONS

SENSES AND TRANSMITS DUCT STATIC

PRESSURE TO DCP FOR CONTROL AND

SENSES AND TRANSMITS BUILDING STATIC

PRESSURE TO DCP FOR CONTROL AND

SENSES AND TRANSMITS DUCT

SENSES AND TRANSMITS DUCT

STATIC PRESSURE UPSTREAM OF

SENSES AND TRANSMITS SUPPLY AIR DRY BULB TEMPERATURE TO

DCP FOR CONTROL AND INDICATION

DCP FOR CONTROL AND INDICATION

DCP FOR CONTROL AND INDICATION

SENSES AND TRANSMITS RETURN

DCP FOR CONTROL AND INDICATION

DCP FOR CONTROL AND INDICATION

SENSES AND TRANSMITS HEATING HOT

WATER SUPPLY TEMPERATURE TO

DCP FOR CONTROL AND INDICATION

WATER RETURN TEMPERATURE TO

SENSES AND TRANSMITS CEILING

SENSES AND TRANSMITS COOLING

TO DCP FOR INDICATION ONLY

PROPORTIONS FLOW OF STEAM

TO PREHEAT COIL IN RESPONSE

PROPORTIONS FLOW OF STEAM

TO PREHEAT COIL IN RESPONSE

COOLING IN RESPONSE TO DCP

PROPORTIONS FLOW OF STEAM

PROPORTIONS FLOW OF STEAM

CONTROLS START-STOP AND SPEED OF

SUPPLY FAN MOTOR IN RESPONSE TO DCP

TO CONVERTER IN RESPONSE

TO CONVERTER IN RESPONSE

ENABLES/DISABLES STAGES OF DX

COIL DISCHARGE AIR TEMPERATURE

PLENUM TEMPERATURE TO DCP FOR

SENSES AND TRANSMITS HEATING HOT

AIR DRY BULB TEMPERATURE TO

SENSES AND TRANSMITS MIXED

AIR DRY BULB TEMPERATURE TO

SHUTS DOWN SUPPLY FAN UPON

SENSING FREEZE CONDITION.

DCP FOR INDICATION ONLY

CONTROL AND INDICATION

SENSES AND TRANSMITS OUTSIDE

AIR DRY BULB TEMPERATURE TO

SENSES AND TRANSMITS PREHEAT

AIR DRY BULB TEMPERATURE TO

SUPPLY FAN TO DCP

SUPPLY FAN TO DCP

STATIC PRESSURE DOWNSTREAM OF

PUMPS AND UNIT HEATER FANS IN

PROVIDE SMOKE SIGNAL TO DCP

AIR IN RESPONSE TO DCP AND

AIR IN RESPONSE TO DCP AND

AIR IN RESPONSE TO DCP AND

FANS/PUMPS.

CONDITION

INDICATION

AIR HANDLING UNIT SEQUENCE OF OPERATIONS

A EXTEND AND MODIFY EXISTING CONTROLS AND PROVIDE NEW COMPONENTS AND CONTROLS AS REQUIRED TO ACCOMPLISH THE FOLLOWING CONTROL SEQUENCES.

RELIEF AIR 5

LOCATED AT

RELIEF AIR -

OUTSIDE AIR -

RETURN AIR

D M N.O.

B 126-AH1

- 1 ALL TEMPERATURE CONTROL FUNCTIONS LISTED ARE CURRENTLY CONTROLLED BY EXISTING ANDOVER CONTROL SYSTEM. ANDOVER SYSTEM SHALL BE REMOVED, AND ALL CONTROL FUNCTIONS SHALL BE CONTROLLED BY THE NEW TRIDIUM SYSTEM, AS AN EXTENSION OF THE EXISTING CAMPUS CONTROLS
- 2 THE NEW TRIDIUM CONTROLS SHALL PROVIDE THE FOLLOWING CONTROL FUNCTIONS: A. PREHEAT COIL (1/3 VALVE, AND 2/3 VALVE)
- B. COOLING COIL VALVE CONTROL
- C. VARIABLE SPEED DRIVE CONTROL
- D. OCCUPIED/UNOCCUPIED CONTROL
- E. SAFETIES AND SHUTDOWN

A. AIR HANDLER OCCUPIED MODE

WHEN THE OUTSIDE AIR CONDITIONS ARE ABLE TO PRODUCE A MIXED AIR TEMPERATURE OF 55 DEGREES F. THE RETURN AIR DAMPER AND OUTSIDE AIR DAMPER SHALL MODULATE TO MAINTAIN A 55 DEGREE F. DISCHARGE AIR TEMPERATURE. THE FAN SPEED SHALL BE MODULATED TO MAINTAIN A MINIMUM DUCT STATIC PRESSURE AS SENSED BY NEW DUCT MOUNTED STATIC SENSOR IN THE NORTH MAIN DUCT. THE REMOTE RELIEF AIR DAMPER SHALL BE MODULATED TO MAINTAIN A BUILDING POSITIVE STATIC PRESSURE RELATIVE TO OUTDOOR PRESSURE AS SENSED BY EXISTING SPACE PRESSURE SENSOR ABOVE THE 3RD FLOOR CEILING. WHEN OUTDOOR AIR CONDITIONS ARE SUCH THAT THE MIXED AIR TEMPERATURE CANNOT BE HELD BELOW 60 DEGREES F. THE CONTROLS SHALL ENABLE THE DX CONDENSING UNIT, THE CONDENSING UNIT SHALL BE CYCLED IN RESPONSE TO THE RETURN AIR TEMPERATURE. WHEN THE MECHANICAL COOLING IS ENABLED, THE OUTSIDE AIR DAMPER SHALL BE SET AT ITS MINIMUM POSITION AND THE RELIEF AIR DAMPER SHALL BE MODULATED TO MAINTAIN A POSITIVE BUILDING STATIC PRESSURE AS PREVIOUSLY DESCRIBED. WHEN THE MIXED AIR TEMPERATURE DROPS BELOW 55 DEGREES F, THE 1/3 AND 2/3 STEAM CONTROL VALVES SHALL OPERATE AS TABLED BELOW TO MAINTAIN A 55 DEGREE F UNIT DISCHARGE TEMPERATURE. WHEN THE MIXED AIR TEMPERATURE DROPS BELOW 40 DEGREES F, THE 2/3 VALVE SHALL BE FULL OPEN AND THE 1/3 VALVE SHALL MODULATE TO MAINTAIN A PREHEAT DISCHARGE TEMPERATURE OF 55 DEGREES F

	PREHEAT DISC	CHARGE TEMP	
BELOW S	SETPOINT	ABOVE S	ETPOINT
1/3 VALVE	2/3 VALVE	1/3 VALVE	2/3 VALVE
0-90%	CLOSED	70 - 0%	CLOSED
CLOSED	45-100%	CLOSED	100 - 35%
0-100%	100% OPEN	100 - 0%	100% OPEN

B. AIR HANDLER UNOCCUPIED MODE

WHEN THE CONTROL SYSTEM DICTATES THAT THE BUILDING IS IN THE UNOCCUPIED TIME MODE, THE AH UNIT WILL BE STOPPED WITH THE OUTSIDE DAMPERS CLOSED, THE RELIEF DAMPERS CLOSED AND THE RETURN DAMPERS OPENED. IF THE SPACE TEMPERATURE IN ANY ROOM GOES ABOVE 80 DEGREES F. THE UNIT FAN WILL RUN AND THE ECONOMIZER WILL BE USED IN AN ATTEMPT TO MAINTAIN A TEMPERATURE BELOW 85 DEGREES F. AND ABOVE 75 DEGREES F. IF THE TEMPERATURE RISES ABOVE 85 DEGREES F. FOR MORE THAN 1 HOUR OR HIGHER THAN 87 DEGREES F. AT ANY TIME, THE UNIT SHALL THEN BE CONTROLLED IN THE OCCUPIED MODE UNTIL SPACE TEMPERATURES ARE BROUGHT BACK TO 75 DEGREES F. THE ABOVE DESCRIBED SEQUENCE IS ONLY APPLICABLE WHEN OUTDOOR AIR TEMPERATURES ARE ABOVE 55 DEGREES F. DURING UNOCCUPIED MODE AND WHEN OUTDOOR TEMPERATURES ARE BELOW 55 DEGREES F. THE CONTROL SYSTEM SHALL OPERATE THE UNIT HEATERS ABOVE THE THIRD FLOOR CEILING AND MAINTAIN A 65 DEGREES F. TEMPERATURE ABOVE THE THIRD FLOOR CEILING. IF ANY SPACE TEMPERATURE FALLS BELOW 60 DEGREES F, THE UNIT FAN SHALL OPERATE AND BOTH THE PREHEAT COIL VALVES SHALL OPERATE AT FULL OPEN TO RAISE THE TEMPERATURE OF THE SPACES ABOVE 65 DEGREES F.

C. AIR HANDLER SMOKE CONTROL

- UPON SENSING SMOKE AT EITHER OF THE EXISTING DUCT MOUNTED SMOKE DETECTORS LOCATED IN THE SUPPLY AND RETURN AIR STREAM, THE FOLLOWING SHALL OCCUR:
 - THE SUPPLY FAN DE-ENERGIZES;
 - THE OUTDOOR AIR DAMPER CLOSES; 3. THE RETURN AIR DAMPER OPENS;
- 4. THE RELIEF AIR DAMPER CLOSES.

D. SAFETIES - SHUTDOWN

THE EXISTING SAFETIES AND OVERRIDES FOR FREEZESTATS AND SMOKE DETECTORS SHALL BE FULLY FUNCTIONAL. ALL SAFETIES SHALL FUNCTION IN THE HAND, OFF OR AUTO POSITIONS.

EXISTING "ACNET" BUS FROM ANDOVER TERMINAL UNITS (NOTE 6)

RETURN AIR

AIR HANDLING UNIT 126-AH1

NEW DISTRIBUTED CONTROL PANEL (DCP/DDC)

—SUPPLY AIR TO **TERMINAL UNITS**


3RD FLOOR OUTDOORS

INDOORS

CONTROL PANEL 126-AH1

			CONTROL PANEL 126-AH1 POINTS LIST	1.	OINT		
	POINT ID	DEVICE TAG	DEVICE DESCRIPTION		DO	1	1
IOTE 5)	1	DSD-2	RETURN AIR DUCT SMOKE DETECTOR (FIRE SYSTEM SHUTDOWN)	Х			T
IOTE 5)	2	T-6	FREEZESTAT	Х			Ī
IOTE 5)	3	DSD-1	SUPPLY AIR DUCT SMOKE DETECTOR (FIRE SYSTEM SHUTDOWN)	Х			Г
IOTE 1)	4	T-4	RETURN AIR TEMPERATURE SENSOR			Х	
OTE 1)	5	T-2	OUTSIDE AIR TEMPERATURE SENSOR (GLOBAL POINT)			Х	Г
OTE 1)	6	T-5	MIXED AIR TEMPERATURE SENSOR			Х	
OTE 5)	7	T-3	PREHEAT COIL LEAVING AIR TEMPERATURE SENSOR			Х	
OTE 5)	8	С	SUPPLY FAN STATUS CURRENT SWITCH	Х		Г	Ī
OTE 1)	9	T-1	SUPPLY AIR TEMPERATURE SENSOR			Х	T
OTE 1)	10	SPS-3	SUPPLY DUCT HIGH STATIC SAFETY	Х			T
OTE 1)	11	SPS-4	RETURN DUCT HIGH STATIC SAFETY	Х			l
OTE 1)	12	SPS-1	SUPPLY DUCT STATIC PRESSURE SENSOR			Х	T
OTE 1)	13	SPS-2	BUILDING STATIC PRESSURE SENSOR			Х	T
OTE 5)	14	T-7	HEATING HOT WATER SYSTEM SUPPLY TEMPERATURE			Х	T
OTE 5)	15	С	HOT WATER PUMP 126-P1 STATUS CURRENT SWITCH	Х			Ħ
OTE 5)	16	С	HOT WATER PUMP 126-P2 STATUS CURRENT SWITCH	Х			r
OTE 4)	17	DP-1	PRE-FILTER PRESSURE DROP			Х	r
OTE 5)	18	T-8	HEATING HOT WATER SYSTEM RETURN TEMPERATURE			Х	r
TE 5)	19	T-9	THIRD FLOOR CEILING PLENUM TEMPERATURE SENSOR			Х	T
OTE 4)	20	T-10	COOLING COIL LEAVING AIR TEMPERATURE SENSOR			Х	F
OTE 3)	A	VSMC	SUPPLY FAN START-STOP		X	\vdash	\vdash
OTE 5)	В	VSMC	SUPPLY FAN VARIABLE SPEED MOTOR CONTROLLER				X
OTE 2)	С	D-1	MODULATING RELIEF AIR DAMPER				Х
OTE 2)	D	D-2	MODULATING RETURN AIR DAMPER				\rightarrow
OTE 2)	Е	D-3	MODULATING OUTSIDE AIR DAMPER				>
OTE 2)	F	V-1	MODULATING 1/3 STEAM PREHEAT COIL VALVE				>
OTE 2)	G	V-2	MODULATING 2/3 STEAM PREHEAT COIL VALVE				>
OTE 3)	Н	V-3	COOLING COIL CIRCUIT #1 SOLENOID VALVE (FIRST STAGE OF DX COOLING)		Х		
OTE 3)	I	V-4	COOLING COIL CIRCUIT #2 SOLENOID VALVE (SECOND STAGE OF DX COOLING)		Х		
OTE 3)	J	R3	THIRD FLOOR CEILING PLENUM PROPELLER UNIT HEATERS - FAN START-STOP		Х		
OTE 2)	K	V-5	CONVERTER 126-C1-1/3 STEAM CONTROL VALVE				7
OTE 2)	L	V-6	CONVERTER 126-C1-2/3 STEAM CONTROL VALVE				>
OTE 3)	М	R1	HOT WATER PUMP 126-P1 START/STOP RELAY		Х		
OTE 3)	N	R2	HOT WATER PUMP 126-P2 START/STOP RELAY		X		


- REMOVE EXISTING ELECTRONIC SENSOR AND REPLACE WITH NEW. REFER TO 23 09 23 FOR NEW SENSOR SPECS. RE-USE EXISTING WIRING BETWEEN SENSOR LOCATION AND NEW BUILDING CONTROLLER.
- EXISTING SYSTEM LEVEL PNEUMATIC CONTROL DEVICE TO REMAIN. PROVIDE NEW E/P TRANSDUCER WITHIN NEW CONTROL CABINET, TO REPLACE EXISTING TRANSDUCER, AND RE-PIPE EXISTING PNEUMATIC DEVICE TO NEW E/P
- 3 EXISTING ELECTRONIC RELAY TO REMAIN, SHALL BE RE-USED.
- 4 POINT DOES NOT CURRENTLY EXIST. PROVIDE POINT AS PART OF THIS PROJECT.
- 5 EXISTING ELECTRONIC SENSOR/DEVICE TO REMAIN, SHALL BE RE-USED.
- 6 DDC ZONE CONTROL IS EXISTING ANDOVER TERMINAL UNIT CONTROLLERS REFER TO VVR AND CVR CONTROL TERMINAL DIAGRAM ON THIS SHEET. INTEGRATE EXISTING ANDOVER ZONE CONTROLS INTO NEW DDC BUILDING CONTROLLER, PROVIDE EQUIPMENT AND FLOOR PLAN GRAPHICS AT ECC.

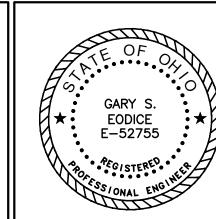





DVAMC IMPROVE BUILDING **AUTOMATION SYSTEM BUILDING 126 CONTROLS AND AUTOMATION** 126 ed: Chief, Engineering Service Dayton, Ohio


05/23/2014 VA Project No. 552-15-207

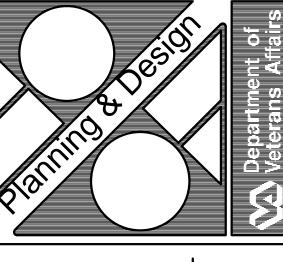

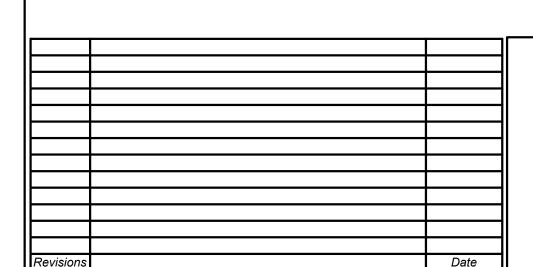

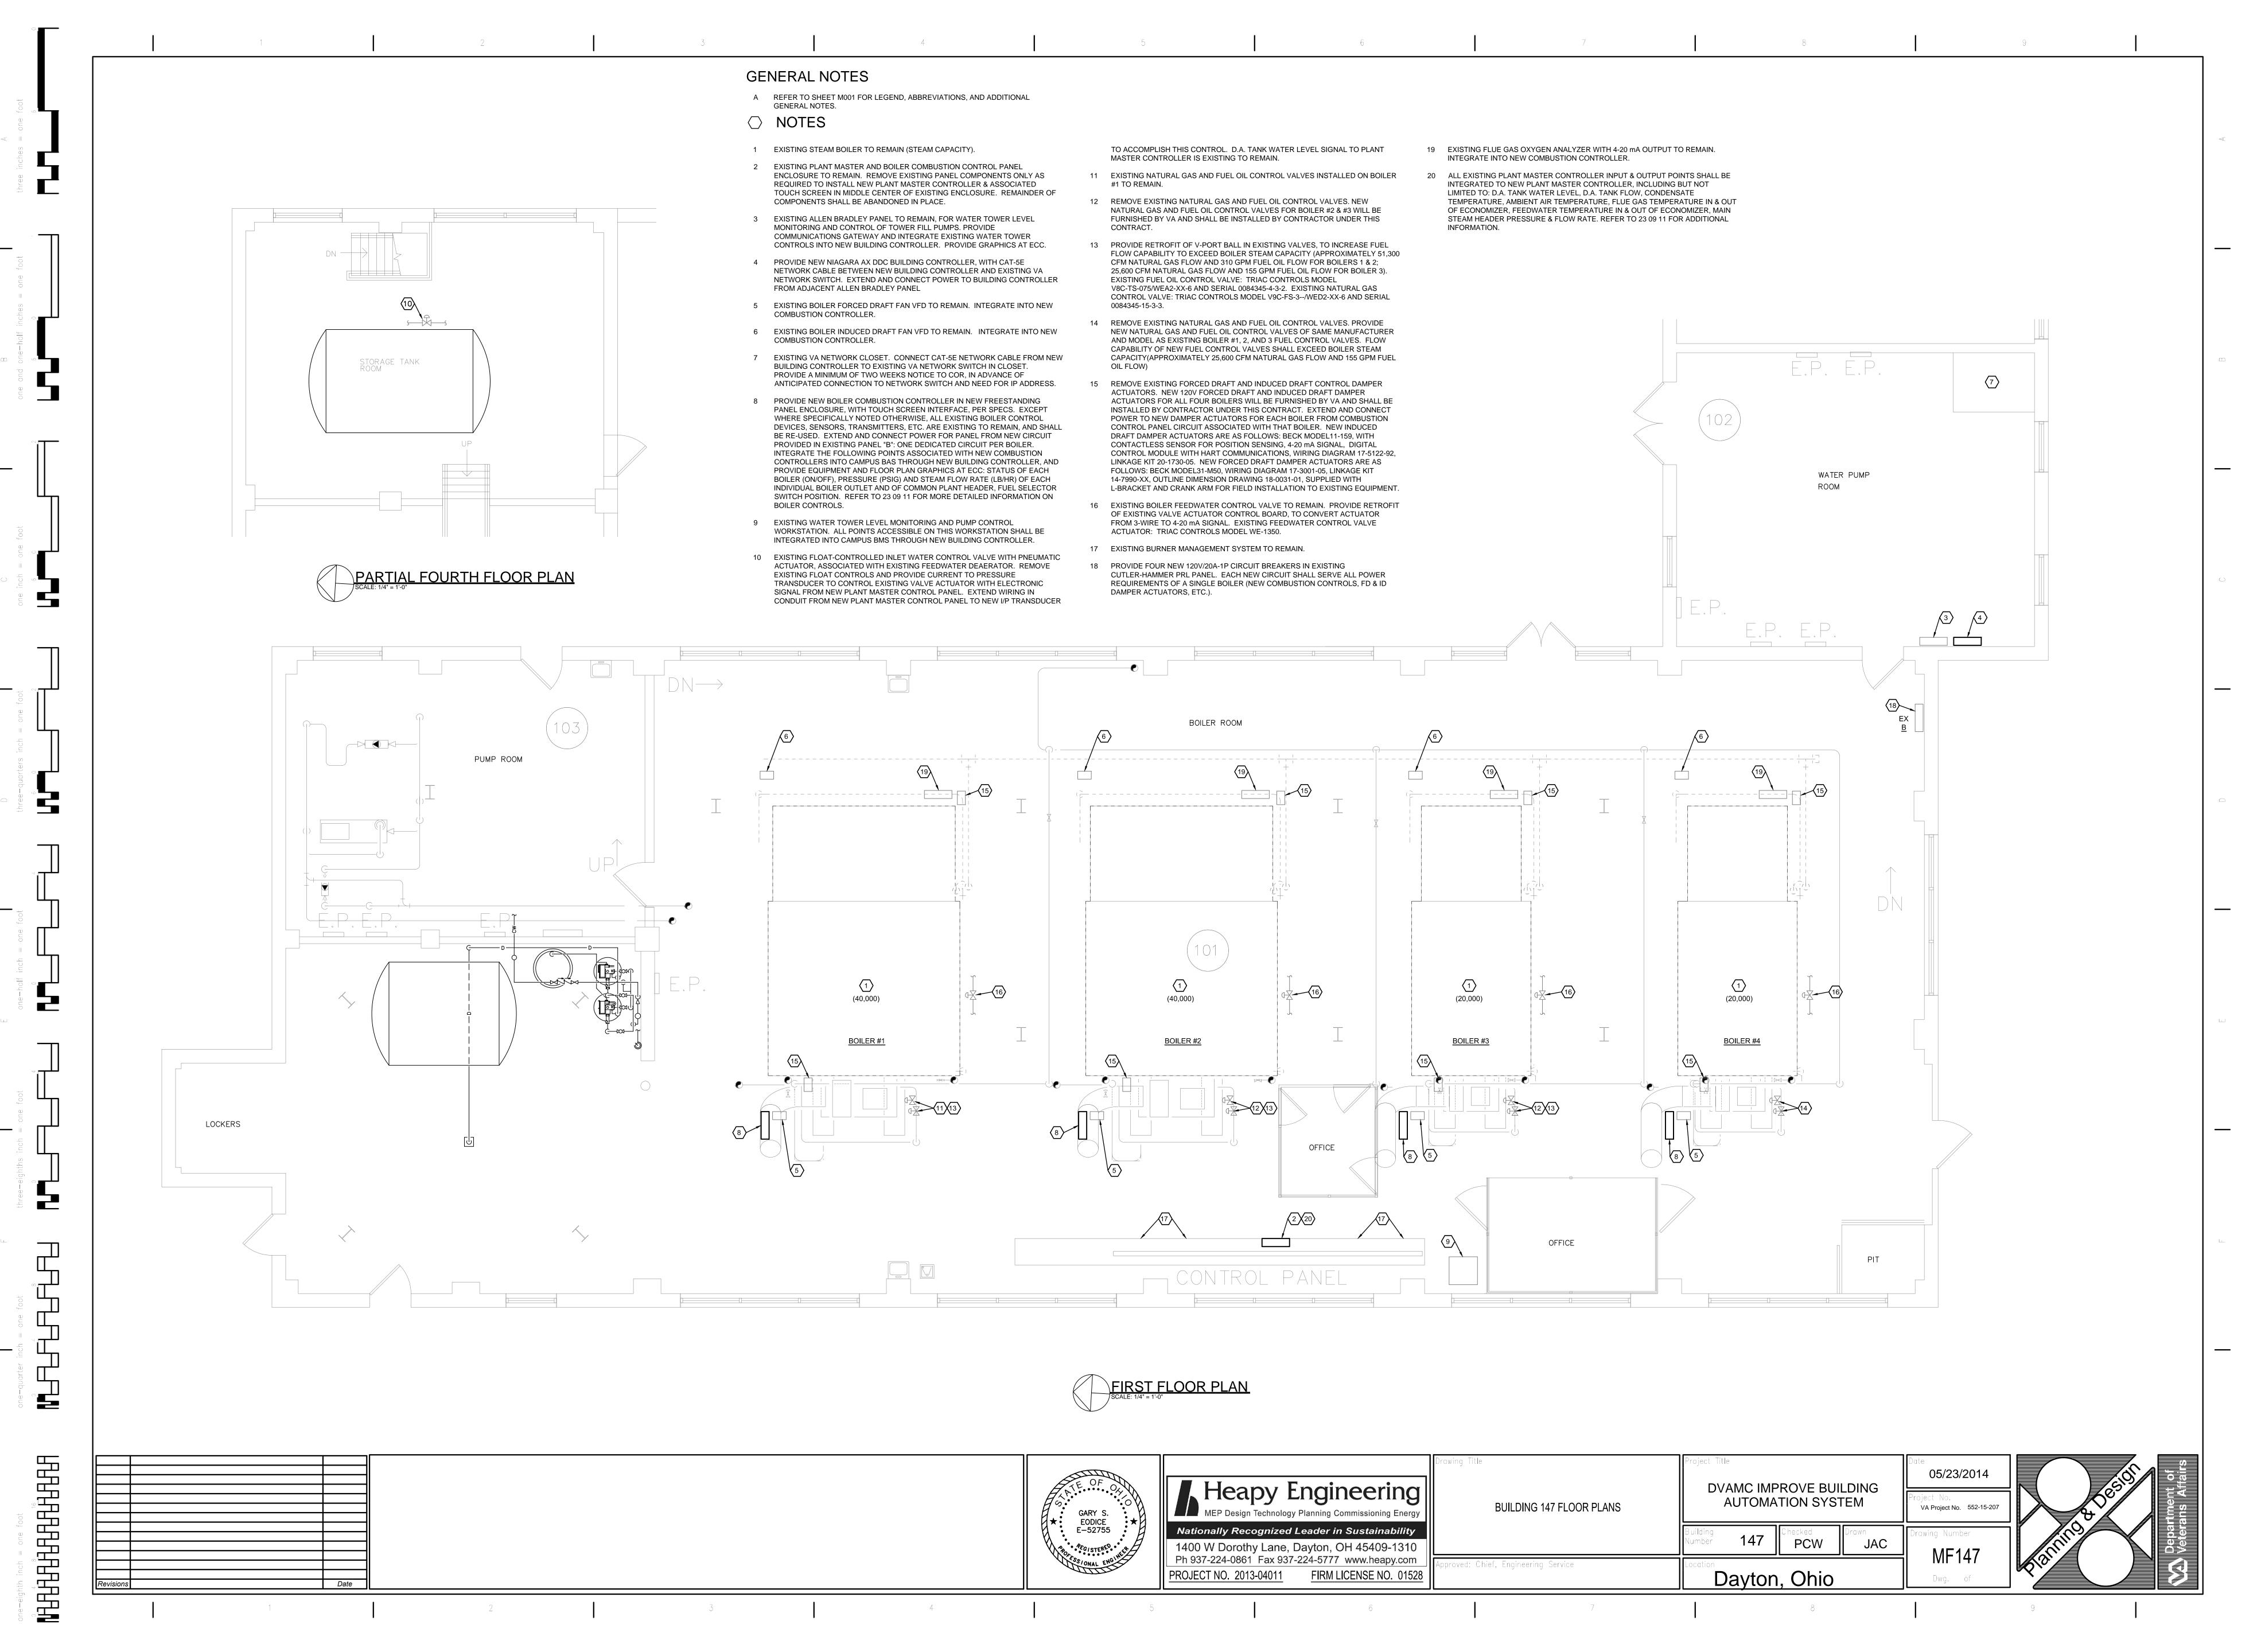


PROJECT NO. 2015-0 HEAPY ENGINEER DAYTON/COLUMBUS, OHIO MECHANICAL ELECTRICAL O

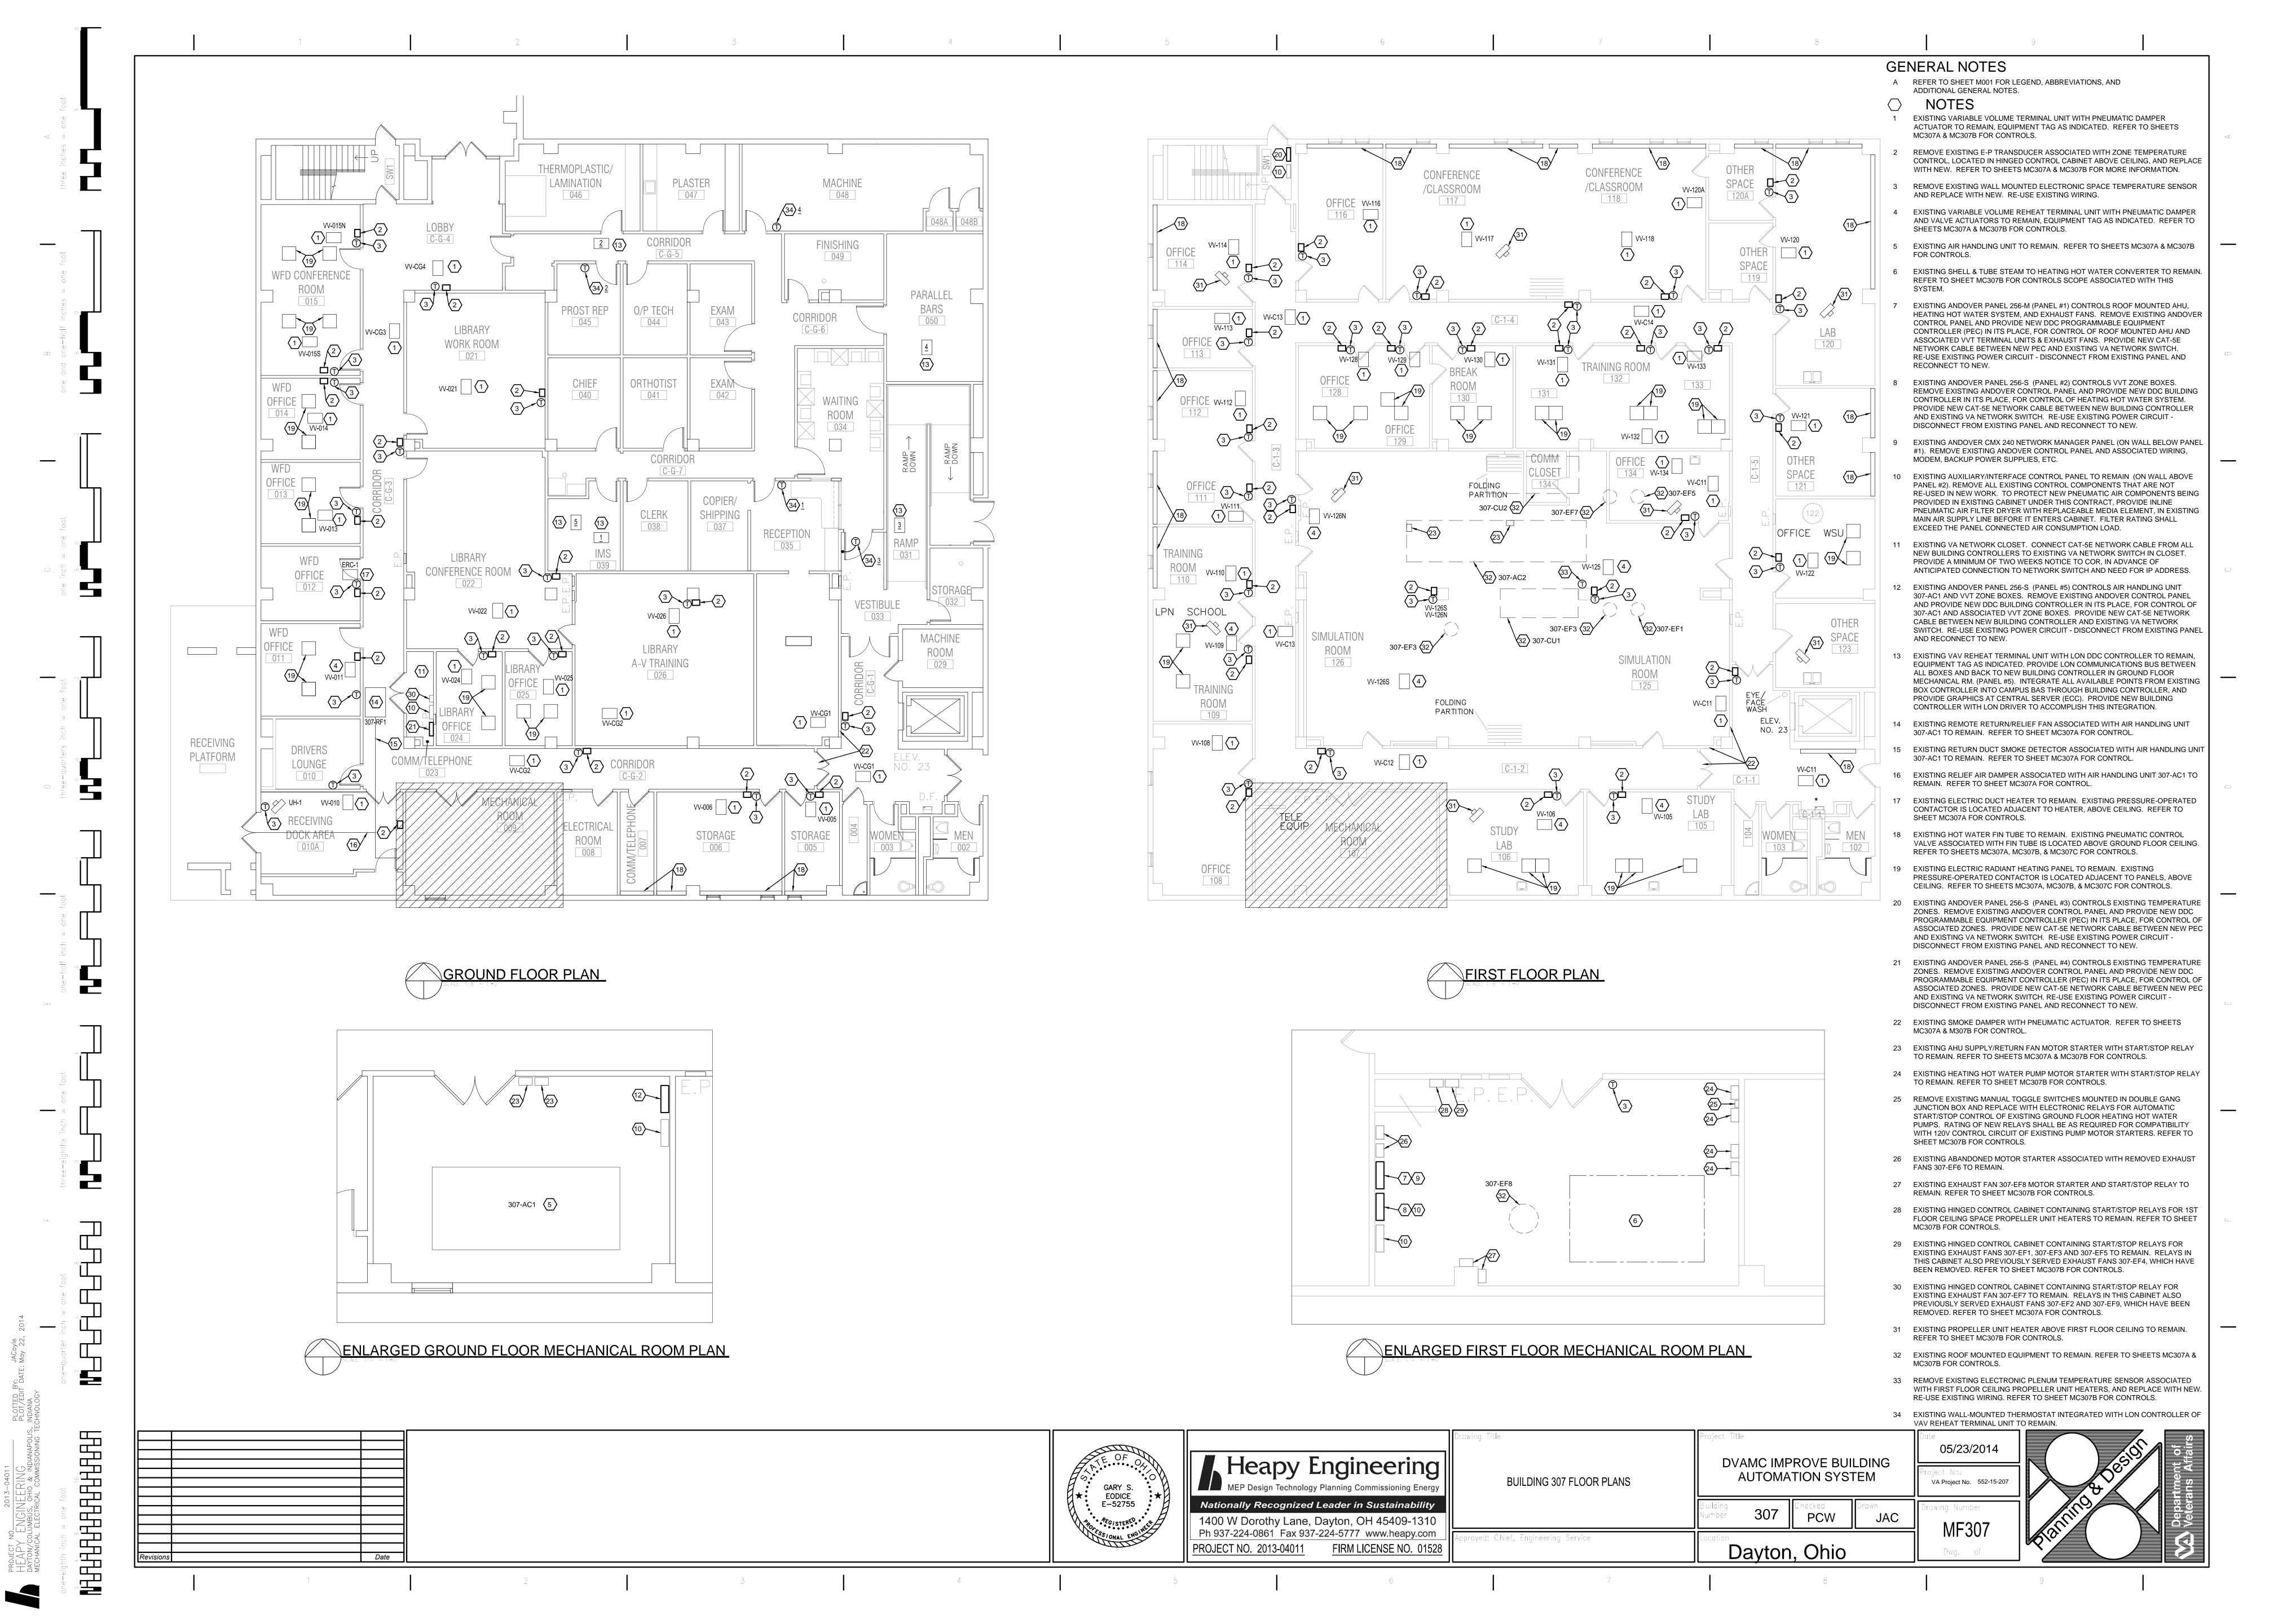

CONTROL PANEL ROOM 23A (PANEL #4)

	POINT	DEVICE	DEVICE	Р	OINT	TYI	Э Е
	ID	TAG	DESCRIPTION	D	DO	AI	AC
≣ 1)	1	T-10A	ROOM 010A SPACE TEMPERATURE			Х	
E 4)	2	С	EXHAUST FAN 307-EF7 STATUS CURRENT SWITCH	Х			
E 1)	3	T-012	ROOM 012 SPACE TEMPERATURE			Х	
E 1)	4	T-010	ROOM 010 SPACE TEMPERATURE			Х	
E 1)	5	T-011	ROOM 011 SPACE TEMPERATURE			Х	
E 1)	6	T-013	ROOM 013 SPACE TEMPERATURE			Х	
E 1)	7	T-014	ROOM 014 SPACE TEMPERATURE			Х	
E 1)	8	T-15S	ROOM 015 SOUTH SPACE TEMPERATURE			Х	
E 1)	9	T-15N	ROOM 015 NORTH SPACE TEMPERATURE			Х	
ΓE 1)	10	T-CG4	CORRIDOR C-G-4 SPACE TEMPERATURE			Х	
E 1)	11	T-021	ROOM 021 SPACE TEMPERATURE			Х	
E 1)	12	T-022	ROOM 022 SPACE TEMPERATURE			Х	
E 1)	13	T-024	ROOM 024 SPACE TEMPERATURE			Х	
∃ 1)	14	T-CG3	CORRIDOR C-G-3 SPACE TEMPERATURE			Х	
E 3)	A	S	ROOM 010A PROPELLER UNIT HEATER FAN START-STOP		X		
E 3)	В	S	GENERAL EXHAUST FAN 307-EF7 START-STOP		X		
E 2)	С	ERC	ROOM 012 ELECTRIC DUCT HEATER ENABLE		X		
E 2)	D	VV-010	ROOM 010 SPACE TEMPERATURE CONTROL				Х
E 2)	Е	VV-011	ROOM 011 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, ELECTRIC RADIANT PANELS)				Х
E 2)	F	VV-013	ROOM 013 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, ELECTRIC RADIANT PANELS)				Х
ΓE 2)	G	VV-014	ROOM 014 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, ELECTRIC RADIANT PANELS)				Х
ΓE 2)	Н	VV-15S	ROOM 015 SOUTH SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, ELECTRIC RADIANT PANELS)				Х
E 2)	I	VV-15N	ROOM 015 NORTH SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, ELECTRIC RADIANT PANELS)				Х
E 2)	J	VV-CG4	CORRIDOR C-G-4 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX)				Х
E 2)	K	VV-021	ROOM 021 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX)				Х
E 2)	L	VV-022	ROOM 022 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX)				Х
E 2)	М	VV-024	ROOM 024 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, ELECTRIC RADIANT PANELS)				Х
E 2)	N	VV-CG3	CORRIDOR C-G-3 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX)				Х

- REMOVE EXISTING WALL-MOUNTED ELECTRONIC SENSOR AND REPLACE WITH NEW. REFER TO 23 09 23 FOR NEW SENSOR SPECS. RE-USE EXISTING WIRING BETWEEN SENSOR LOCATION AND NEW PANEL #4.
- EXISTING ZONE LEVEL PNEUMATIC CONTROL DEVICE(S) TO REMAIN (VARIABLE VOLUME BOX DAMPER ACTUATORS, PRESSURE CONTACTORS FOR RADIANT PANELS AND ELECTRIC DUCT HEATER, FIN TUBE CONTROL VALVES, VARIABLE VOLUME BOX REHEAT COIL CONTROL VALVES, ETC.) PROVIDE NEW E/P TRANSDUCER WITHIN EXISTING CABINET AT EACH ROOM, TO REPLACE EXISTING TRANSDUCER. RE-USE EXISTING PNEUMATIC TUBING BETWEEN EXISTING PNEUMATIC DEVICES AND NEW E-P TRANSDUCER.
- 3 EXISTING ELECTRONIC RELAY TO REMAIN, SHALL BE RE-USED.
- 4 POINT DOES NOT CURRENTLY EXIST. PROVIDE POINT AS PART OF THIS PROJECT

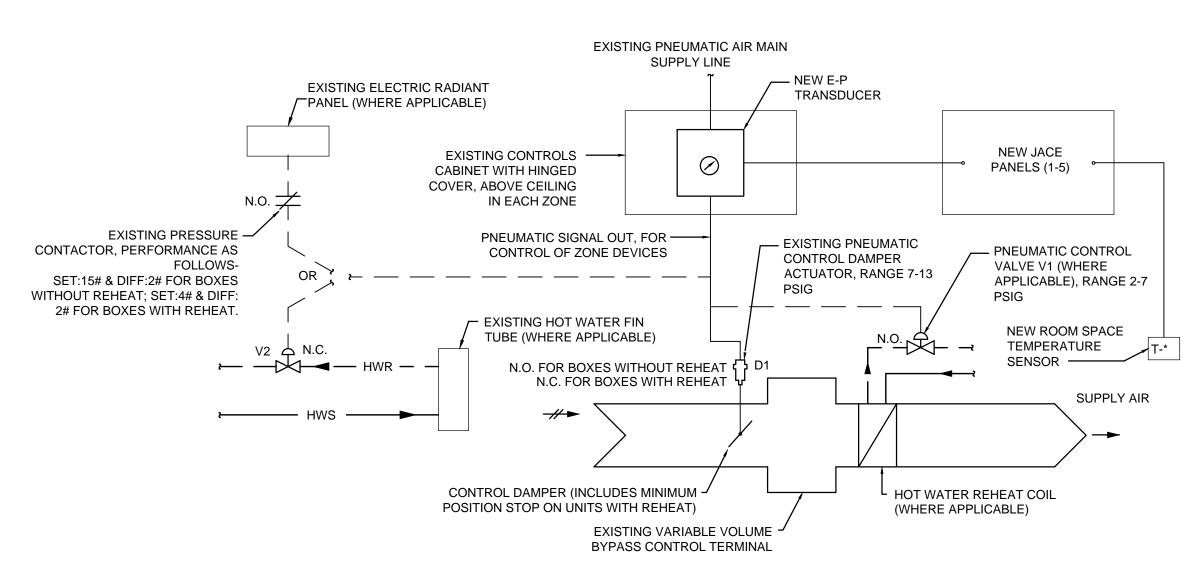

TYPICAL ZONE TEMPERATURE CONTROL

ZONE TEMPERATURE CONTROL SEQUENCES

NEW ZONE TEMPERATURE THERMOSTAT SHALL TRANSMIT SPACE TEMPERATURE TO NEW JACE CONTROLLERS 1 THRU 5, AS INDICATED IN POINTS LISTS.

WHEN ROOM TEMPERATURE AT T-* IS BELOW SETPOINT, THE NEW CONTROLLER (#1-#5) SHALL SEND ANALOG SIGNAL TO NEW ZONE E-P TRANSDUCER, TO:

- 1 MODULATE DAMPER D1 TO BYPASS EXCESS SUPPLY AIRFLOW INTO CEILING PLENUM, UNTIL BOX ROOM
- SUPPLY AIRFLOW IS REDUCED TO THE MINIMUM SETTING. 2 ONCE BOX AIRFLOW IS AT MINIMUM, CLOSE ELECTRIC RADIANT PANEL CONTACT (WHERE
- APPLICABLE). 3 MODULATE HOT WATER REHEAT CONTROL VALVE V1 OPEN (WHERE APPLICABLE). 4 MODULATE HOT WATER FIN TUBE CONTROL VALVE V2 OPEN (WHERE APPLICABLE).

THE REVERSE SHALL OCCUR ON A RISE IN SPACE TEMPERATURE ABOVE SETPOINT.

INITIAL ROOM SPACE TEMPERATURE SET POINT SHALL BE 72 DEG. F, AND SHALL BE ADJUSTABLE FROM THE FRONT END COMPUTER INTERFACE. COORDINATE AND ADJUST OCCUPANCY SCHEDULES AND TEMPERATURE RANGE WITH COR.

DURING UNOCCUPIED MODE OF AIR HANDLING UNITS 307-AC1 AND 307-AC2, ZONE TEMPERATURE SETPOINT SHALL BE RESET THROUGH THE ASSOCIATED CONTROLLER (#1-#5) TO 65 DEG. F (ADJ.).

EXISTING VAV REHEAT TERMINAL UNITS 1 THRU 4 WITH LON APPLICATION SPECIFIC CONTROLLERS, SERVE PROSTHETICS


DEPARTMENT ON GROUND FLOOR. EXISTING CONTROLS SHALL REMAIN, AND ALL CONTROL SETPOINTS AND PARAMETERS SHALL BE AVAILABLE AT ECC. THROUGH LON INTEGRATION TO NEW PANEL #5.

REFER TO POINTS LISTS ON SHEET MC307B FOR ZONE CONTROL POINTS ASSOCIATED WITH NEW CONTROL PANELS 1 AND 2. REFER TO POINTS LIST ON SHEET MC307C FOR ZONE CONTROL POINTS ASSOCIATED WITH NEW CONTROL PANEL #3.

PROPELLER UNIT HEATER **─ ─** HWR **─ −** HWS − ROOM THERMOSTAT START/STOP RELAY


ROOM 10A PROPELLER UNIT HEATER CONTROL

DDC ROOM THERMOSTAT T-10A SHALL CONTROL FAN MOTOR. ON A DROP IN TEMPERATURE BELOW SETPOINT, THERMOSTAT T-10A SHALL START FAN THROUGH EXISTING RELAY, TO MAINTAIN ROOM TEMPERATURE SETPOINT. INITIAL SETPOINT SHALL BE 70 DEG.F (ADJ.). FAN SHALL TURN OFF ONCE ROOM THERMOSTAT INDICATES 2 DEGREES ABOVE SETPOINT (ADJ.).

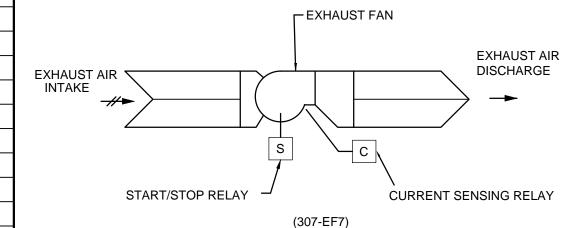

EXISTING GROUND FLOOR GENERAL EXHAUST FANS

- EXHAUST FAN CONTROLS
- 1.1 EXHAUST FAN SHALL BE STARTED AND STOPPED BY THE DCP OR REMOTELY AT THE ECC. FAN SHALL BE SOFTWARE INTERLOCKED TO OPERATE WITH AIR HANDLING UNIT 307-AC1, AND SHALL BE DISABLED DURING 307-AC1 UNOCCUPIED MODE.
- 1.2 PROVIDE CURRENT SENSOR ON EXISTING FAN POWER FEEDER TO INDICATE FAN STATUS TO DCP.

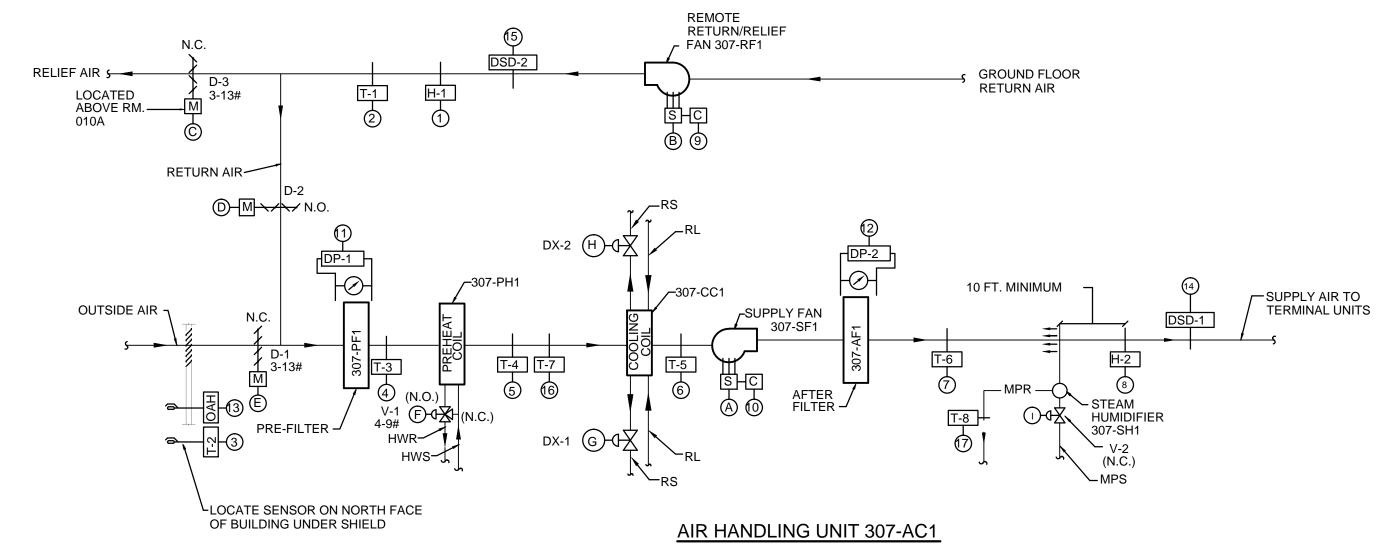

DDC ROOM THERMOSTAT T-012 SHALL CONTROL ENABLE/DISABLE OF EXISTING ELECTRIC DUCT HEATER. ON A DROP IN SPACE TEMPERATURE BELOW SETPOINT, NEW CONTROLLER #4 SHALL CLOSE PRESSURE CONTACTS TO ENABLE HEATER, THROUGH NEW ZONE E-P TRANSDUCER, TO MAINTAIN ROOM TEMPERATURE SETPOINT. INITIAL SETPOINT SHALL BE 72 DEG.F (ADJ.). PRESSURE CONTACTS SHALL OPEN TO DISABLE HEATER, ONCE ROOM THERMOSTAT INDICATES 2 DEGREES ABOVE SETPOINT (ADJ.). PRESSURE CONTACTS HAVE

FOLLOWING PERFORMANCE: T.R. 12#, START @ 3#.

ROOM 012 ELECTRIC DUCT HEATER CONTROL

TRANSMITS MOTOR CURRENT TO

TRANSMITS DIFFERENTIAL PRESSURE

DCP TO INDICATE STATUS OF

TO DCP TO INDICATE FILTER

CONTROLS OPERATION OF AIR

HANDLING UNIT IN ACCORDANCE

PROPORTIONS FLOW OF OUTSIDE

CLOSES WHEN SUPPLY FAN STOPS

PROPORTIONS FLOW OF RETURN

OPENS WHEN SUPPLY FAN STOPS

PROPORTIONS FLOW OF RELIEF

CLOSES WHEN SUPPLY FAN STOPS

PROVIDE SMOKE SIGNAL TO DCP

ENABLES/DISABLES STAGES OF DX

LOCATED IN BUILDING 310 MEZZANINE FOR

MONITORING OF SYSTEM OPERATIONS

ENABLES/DISABLES ROOM 012 ELECTRIC

DUCT HEATER IN RESPONSE TO DCP

SENSES AND TRANSMITS RETURN AIR

HUMIDITY TO DCP FOR CONTROL AND

SENSES AND TRANSMITS SUPPLY AIR

HUMIDITY TO DCP FOR CONTROL AND

SENSES AND TRANSMITS OUTSIDE

AIR HUMIDITY TO DCP FOR ENTHALPY

ENABLES/DISABLES SUPPLY, RETURN,

SENSES AND TRANSMITS RETURN

AIR DRY BULB TEMPERATURE TO

SENSES AND TRANSMITS OUTSIDE

AIR DRY BULB TEMPERATURE TO

SENSES AND TRANSMITS MIXED

AIR DRY BULB TEMPERATURE TO

DCP FOR CONTROL AND INDICATION

DCP FOR CONTROL AND INDICATION

SENSES AND TRANSMITS PREHEAT

DCP FOR CONTROL AND INDICATION

SENSES AND TRANSMITS COOLING

SENSES AND TRANSMITS SUPPLY

AIR DRY BULB TEMPERATURE TO

SHUTS DOWN SUPPLY FAN UPON

SENSING FREEZE CONDITION.

FOR CONTROL AND INDICATION

AND INDICATION

CONTROL DEVICES.

DCP FOR CONTROL AND INDICATION

SENSES AND TRANSMITS 307-SH1 JACKET

CONDENSATE TEMPERATURE TO DCP

SENSES AND TRANSMITS ZONE SPACE

TEMPERATURE TO DCP FOR CONTROL

PROPORTIONS FLOW OF HOT WATER

TO PREHEAT COIL IN RESPONSE

PROPORTIONS FLOW OF STEAM TO

TO MODULATE ZONE TEMPERATURE

SENDS ANALOG OUTPUT SIGNAL TO ZONE

E-P TRANSDUCERS IN RESPONSE TO DCP,

HUMIDIFIER IN RESPONSE TO DCP

TO DCP FOR INDICATION ONLY

COIL DISCHARGE AIR TEMPERATURE

AIR DRY BULB TEMPERATURE TO

DCP FOR INDICATION ONLY

EXHAUST, AND UNIT HEATER FANS IN

INDICATION

CALCULATION

RESPONSE TO DCP

COOLING IN RESPONSE TO DCP

AIR IN RESPONSE TO DCP AND

AIR IN RESPONSE TO DCP AND

AIR IN RESPONSE TO DCP AND

WITH THE SEQUENCE OF OPERATION

LEGEND (APPLIES TO AIR HANDLING UNIT 307-AC1)

DIFFERENTIAL PRESSURE SENSOR

DCP DIRECT DIGITAL CONTROL PANEL

MODULATING OUTSIDE AIR

MODULATING RELIEF AIR

D-2 MODULATING RETURN AIR

DSD DUCT SMOKE DETECTORS

DX-2 STOP RELAY

T-1 RETURN AIR

DX-1 DX CONDENSING UNIT START/

ECC ENGINEERING CONTROL CENTER

ERC ELECTRIC DUCT HEATER START/

H-1 RETURN AIR HUMIDITY SENSOR

H-2 SUPPLY AIR HUMIDITY SENSOR

OUTSIDE AIR HUMIDITY

FAN START/STOP RELAYS

TEMPERATURE SENSOR

MIXED AIR TEMPERATURE

PREHEAT COIL LEAVING AIR

TEMPERATURE SENSOR

SUPPLY AIR TEMPERATURE

307-SH1 JACKET CONDENSATE

TEMPERATURE SENSOR

T-### MISCELLANEOUS ZONE CONTROL

MODULATING HOT WATER

CONTROL VALVE

MODULATING STEAM

VV-### ZONE SPACE TEMPERATURE

CONTROL VALVE

CONTROL SIGNAL

SPACE TEMPERATURE SENSOR

COOLING COIL LEAVING

AIR TEMPERTURE

SENSOR

T-7 FREEZESTAT

OUTSIDE AIR TEMPERATURE

STOP RELAY

C CURRENT SENSING RELAY

NEW LON BUS FROM

(SEE PLANS)

EXISTING VAV REHEAT

TERMINAL UNITS 1 THRU 5

NEW DISTRIBUTED CONTROL PANEL (DCP/DDC) OUTPUT

CONTROL PANEL 307-AC1 (PANEL#5)

	POINT	DEVICE	DEVICE	PC	TNIC	ΤY
	ID	TAG	DESCRIPTION	DI	DO	AI
1)	1	H-1	RETURN AIR HUMIDITY SENSOR			Х
)	2	T-1	RETURN AIR TEMPERATURE SENSOR			Х
)	3	T-2	OUTSIDE AIR TEMPERATURE SENSOR (GLOBAL POINT)			Х
)	4	T-3	MIXED AIR TEMPERATURE SENSOR			Х
	5	T-4	PREHEAT COIL LEAVING AIR TEMPERATURE SENSOR			Х
	6	T-5	COOLING COIL LEAVING AIR TEMPERATURE SENSOR			Х
	7	T-6	SUPPLY AIR TEMPERATURE SENSOR			Х
	8	H-2	SUPPLY AIR HUMIDITY SENSOR (HIGH LIMIT)	Х		1
	9	С	RETURN FAN STATUS CURRENT SWITCH	Х		
	10	С	SUPPLY FAN STATUS CURRENT SWITCH	Х		
	11	DP-1	PRE FILTER PRESSURE DROP			Х
	12	DP-2	AFTER FILTER PRESSURE DROP			Х
	13	OAH	OUTSIDE AIR HUMIDITY (GLOBAL POINT)			Х
	14	DSD-1	SUPPLY AIR DUCT SMOKE DETECTOR (FIRE SYSTEM SHUTDOWN)	Х		
	15	DSD-2	RETURN AIR DUCT SMOKE DETECTOR (FIRE SYSTEM SHUTDOWN)	Х		
	16	T-7	FREEZESTAT	Х		
	17	T-8	HUMIDIFIER 31-SH1 STEAM JACKET CONDENSATE TEMPERATURE SENSOR	Х		
	18	T-005	ROOM 005 SPACE TEMPERATURE			Х
	19	T-006	ROOM 006 SPACE TEMPERATURE			Х
	20	T-CG2	CORRIDOR C-G-2 SPACE TEMPERATURE			Х
	21	T-025	ROOM 025 SPACE TEMPERATURE			Х
	22	T-026	ROOM 026 SPACE TEMPERATURE			Х
	23	T-CG1	CORRIDOR C-G-1 SPACE TEMPERATURE			Х
3)	A	S	SUPPLY FAN START-STOP		Х	
)	В	S	RETURN FAN START-STOP		Х	
)	С	D-3	MODULATING RELIEF AIR DAMPER			
	D	D-2	MODULATING RETURN AIR DAMPER			
)	Е	D-1	MODULATING OUTSIDE AIR DAMPER			
,	F	V-1	MODULATING PREHEAT COIL VALVE			
)	G	DX-1	CONDENSING UNIT CU-1 DX COOLING ENABLE (FIRST STAGE OF COOLING)		Х	
)	Н	DX-2	CONDENSING UNIT CU-1 DX COOLING ENABLE (FIRST STAGE OF COOLING)		Х	
	1	V-2	MODULATING STEAM HUMIDIFIER VALVE			
)	J	VV-005	ROOM 005 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, HOT WATER FIN TUBE)			
)	K	VV-006	ROOM 006 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, HOT WATER FIN TUBE)			
)	L	VV-CG2	CORRIDOR C-G-2 SPACE TEMPERATURE CONTROL (2 VARIABLE VOLUME BOXES)			
)	М	VV-025	ROOM 025 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, ELECTRIC RADIANT PANELS)			
·)	N	VV-026	ROOM 026 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, ELECTRIC RADIANT PANELS)		H	
7)	0	VV-CG1	CORRIDOR C-G-1 SPACE TEMPERATURE CONTROL (2 VARIABLE VOLUME BOXES)		П	

- REMOVE EXISTING ELECTRONIC SENSOR AND REPLACE WITH NEW. REFER TO 23 09 23 FOR NEW SENSOR SPECS. RE-USE EXISTING WIRING BETWEEN SENSOR LOCATION AND ZONE E-P TRANSDUCER.
- EXISTING SYSTEM LEVEL PNEUMATIC CONTROL DEVICE TO REMAIN. PROVIDE NEW E/P TRANSDUCER WITHIN NEW CONTROL CABINET. TO REPLACE EXISTING TRANSDUCER, AND RE-PIPE EXISTING PNEUMATIC DEVICE TO NEW E/P TRANSDUCER.
- 3 EXISTING ELECTRONIC RELAY TO REMAIN, SHALL BE RE-USED.
- REMOVE EXISTING DIFFERENTIAL PRESSURE FAN STATUS SWITCH AND REPLACE WITH CURRENT SWITCH ON POWER FEEDER TO FAN MOTOR, FOR FAN STATUS INDICATION. SEAL EXISTING DUCT OPENINGS.
- 5 POINT DOES NOT CURRENTLY EXIST. PROVIDE POINT AS PART OF THIS PROJECT.

RE-USE WIRING BETWEEN NEW CONTROL PANEL AND ZONE E-P TRANSDUCER.

- 6 EXISTING ELECTRONIC SENSOR TO REMAIN, SHALL BE RE-USED.
- EXISTING ZONE LEVEL PNEUMATIC CONTROL DEVICE(S) TO REMAIN (VARIABLE VOLUME BOX DAMPER ACTUATORS, PRESSURE CONTACTORS FOR RADIANT PANELS AND ELECTRIC DUCT HEATER, FIN TUBE CONTROL VALVES, VARIABLE VOLUME BOX REHEAT COIL CONTROL VALVES, ETC.) PROVIDE NEW E/P TRANSDUCER WITHIN EXISTING CABINET AT EACH ROOM, TO REPLACE EXISTING TRANSDUCER. RE-USE EXISTING PNEUMATIC TUBING BETWEEN EXISTING PNEUMATIC DEVICES AND NEW E-P TRANSDUCER, AND

GENERAL NOTES

- A COMPLETE SYSTEM OF AUTOMATIC TEMPERATURE CONTROLS SHALL BE INSTALLED UNDER THIS CONTRACT AS REQUIRED TO ACCOMPLISH THE SEQUENCE OF CONTROL FOR VARIOUS ITEMS OF EQUIPMENT AND SYSTEMS AS DESCRIBED HEREINAFTER. THE SYSTEM SHALL BE A DIRECT DIGITAL CONTROL SYSTEM UTILIZING PNEUMATIC ACTUATION.
- ALL CONTROL POWER SOURCES REQUIRED SHALL BE PROVIDED UNDER THE ATC WORK. THIS WORK SHALL INCLUDE BUT NOT BE LIMITED TO WIRING, CONDUIT.
 - POINTS LIST IS SHOWN AS AN AID TO THE CONTRACTOR INDICATING THE MINIMUM POINTS REQUIRED FOR CONTROL AND MONITORING. ALL INPUT AND OUTPUT POINTS, AND THEIR REQUIRED INTERFACE AND ACCESSORY HARDWARE, SHALL BE PROVIDED FOR A COMPLETE AND FUNCTIONAL CONTROL SYSTEM. IF OR WHEN ADDITIONAL POINTS ARE REQUIRED TO ACCOMPLISH THE SEQUENCES OF CONTROL SPECIFIED, THESE POINTS, ALONG WITH ADDITIONAL DIRECT DIGITAL CONTROL PANEL(S) (IF REQUIRED), SHALL ALSO BE PROVIDED.

SEQUENCE OF OPERATION FOR 307-AC1

1. <u>GENERAL</u>

1.1 UNIT IS NORMALLY STARTED AND STOPPED BY THE DCP OR REMOTELY AT THE ECC. H-O-A SWITCH SHALL BE KEPT IN THE "AUTO" POSITION. "HAND" AND "OFF" POSITIONS SHALL BE USED ONLY FOR MAINTENANCE.

1.2 WHEN THE UNIT IS "OFF", FOR ANY REASON, OUTSIDE AIR DAMPER D-1 AND RELIEF AIR DAMPER D-3 SHALL BE FULLY CLOSED, RETURN AIR DAMPER D-2 SHALL BE FULLY OPEN, AND SUPPLY AND RETURN FANS SHALL BE OFF.

1.3 WHEN THE UNIT IS "ON", SUPPLY AND RETURN FANS SHALL START, AND D-1, D-2 AND D-3 SHALL MODULATE IN ACCORDANCE WITH THE FOLLOWING SEQUENCE.

2. <u>TEMPERATURE CONTROL</u>

TRANSFORMERS, RELAYS AND FUSES.

2.1 SUPPLY AIR TEMPERATURE, SENSED BY T-6, SHALL BE MAINTAINED AT SETPOINT OF 54.5 DEG. F. (ADJ.) VIA DCP BY ENABLING STAGES OF DX COOLING (307-CU1), OR MODULATING ECONOMIZER DAMPERS D-1, D-2 AND D-3 OR PREHEAT COIL VALVE V-1, IN SEQUENCE. SEPARATE CONTROL LOOPS SHALL BE UTILIZED FOR ECONOMIZER COOLING, MECHANICAL COOLING, AND HEATING FUNCTION. DX COOLING SHALL BE DISABLED BEFORE PREHEAT COIL VALVE V-1 OPENS, AND VICE VERSA.

3. <u>ENTHALPY ECONOMIZER CONTROL</u>

3.1 OUTSIDE AIR TEMPERATURE AND HUMIDITY, AND RETURN AIR TEMPERATURE AND HUMIDITY SHALL BE MEASURED, AND THE ENTHALPY OF EACH DETERMINED. IF THE ENTHALPY OF THE OUTSIDE AIR IS LESS THAN THE ENTHALPY OF THE RETURN AIR, THE ECONOMIZER SHALL BE ENABLED. WHEN THE OUTSIDE AIR ENTHALPY IS HIGHER THAN THE RETURN AIR ENTHALPY AND MECHANICAL COOLING IS AVAILABLE, THE ECONOMIZER SHALL BE DISABLED.

4. <u>ECONOMIZER CYCLE</u>

4.1 WHEN THE UNIT OPERATES IN THE OCCUPIED MODE, MINIMUM OUTSIDE AIR SHALL BE PROVIDED BY OPENING OUTSIDE AIR DAMPERS D-1, RETURN AIR DAMPERS D-2, AND RELIEF AIR DAMPERS D-3 TO A POSITION DETERMINED BY AIRFLOW READINGS, TO SUPPLY MINIMUM OUTSIDE AIR VOLUME. THIS CONDITION IS THE NORMAL POSITION AND SHALL BE MAINTAINED DURING THE OCCUPIED MODE EXCEPT DURING THE "ECONOMIZER" CYCLE. DURING THE "ECONOMIZER" CYCLE, THE AMOUNT OF OUTSIDE AIR AND RELIEF AIR SHALL BE INCREASED AS REQUIRED TO MAINTAIN THE UNIT DISCHARGE AIR TEMPERATURE SETPOINT, AS SENSED BY T-6. PROVIDE A MIXED AIR SENSOR AND LOW LIMIT CONTROL (T-3) SET AT 50 DEGREES F. TO PREVENT OVER-OPENING OF THE ECONOMIZER OUTSIDE AIR DAMPERS. ALL CONTROL SETPOINTS SHALL BE FULLY ADJUSTABLE TO MEET JOB CONDITIONS. MINIMUM OUTSIDE AIR VOLUME SHALL BE 15% OF SUPPLY AIR VOLUME. SUPPLY AND RETURN AIRFLOW SHALL BE MEASURED PRIOR TO STARTING THIS WORK, AND SHALL BE NOTED ON AS-BUILT CONTROL DRAWINGS, ALONG WITH MINIMUM OUTSIDE AIR VOLUME

AIR FLOW CONTROL

5.1 EXISTING SUPPLY AND RETURN FAN MOTOR STARTERS SHALL RESPOND TO START/STOP COMMANDS AND ALL SAFETIES (FREEZE, SMOKE, ETC.) WHETHER IN THE HAND OR AUTOMATIC MODE.

6. <u>HUMIDITY CONTROL</u>

6.1 WHEN THE DCP IS NOT CALLING FOR HUMIDITY, SENSED BY RETURN AIR HUMIDITY SENSOR H-1, MODULATING HUMIDIFIER CONTROL VALVE V-2 SHALL REMAIN CLOSED. DCP SHALL ALSO CLOSE VALVE V-2 WHENEVER THE OUTSIDE AIR TEMPERATURE IS ABOVE 55 DEG. F, OR WHENEVER THE SUPPLY FAN IS OFF.

6.2 RETURN AIR HUMIDITY, SENSED BY H-1, SHALL BE MAINTAINED AT SETPOINT (30% RH, ADJUSTABLE) VIA DCP BY MODULATING HUMIDIFIER CONTROL VALVE V-2 TO MAINTAIN THE DESIRED HUMIDITY. THE DCP SHALL OVERRIDE THIS CONTROL TO MAINTAIN A MAXIMUM HUMIDITY LEVEL OF 80% AS SENSED BY H-2. VALVE V-2 SHALL BE INTERLOCKED WITH JACKET CONDENSATE TEMPERATURE SWITCH T-8, TO KEEP THE HUMIDIFIER OFF UNTIL JACKET CONDENSATE TEMPERATURE APPROACHES STEAM TEMPERATURE.

7. FREEZE PROTECTION

7.1 IF THE PREHEAT COIL DISCHARGE AIR TEMPERATURE AS SENSED BY T-4 FALLS BELOW 40 DEG.F, AN ALARM SIGNAL SHALL INDICATE AT THE DCP AND ECC. IF THE PREHEAT COIL DISCHARGE TEMPERATURE FALLS BELOW 35 DEG.F AS SENSED BY FREEZESTAT T-7, THE SUPPLY AND RETURN FANS SHALL SHUT DOWN AND A CRITICAL ALARM SHALL INDICATE AT THE DCP AND ECC. T-7 SHALL BE HARDWIRED TO THE SUPPLY FAN SAFETY CIRCUIT TO SHUT DOWN THE UNIT IN THE HAND OR AUTOMATIC MODE. T-7 SHALL REQUIRE MANUAL RESET AT THE DEVICE.

8. <u>AUTOMATIC SHUTDOWN / RESTART</u>

8.1 WHEN SMOKE IS DETECTED BY EITHER THE SUPPLY OR RETURN DUCT SMOKE DETECTOR, THE SUPPLY AND RETURN AIR FANS AND INTERLOCKED EXHAUST FAN 307-EF7 SHALL SHUT "OFF", REMOTE GROUND FLOOR SMOKE DAMPERS SHALL CLOSE, AND A SUPERVISORY SIGNAL SHALL BE TRANSMITTED TO THE FIRE ALARM SYSTEM, AND A SUPERVISORY SIGNAL SHALL INDICATE AT THE DCP AND ECC. SUPPLY AND RETURN FANS AND INTERLOCKED EXHAUST FANS SHALL RESTART AND SMOKE DAMPERS SHALL OPEN WHEN WHEN THE FIRE ALARM CIRCUIT IS RESET. REFER TO FLOOR PLANS FOR LOCATION OF EXISTING REMOTE SMOKE DAMPERS.

9. <u>DISCHARGE AIR RESET</u>

9.1 THE AIR HANDLING UNIT CONTROLS SHALL PROVIDE DISCHARGE AIR TEMPERATURE CONTROL BASED ON ZONE DEMAND DEVIATION FROM SETPOINT ALL ZONES SHALL BE SAMPLED AND THE ZONE FURTHEST FROM SETPOINT SHALL GOVERN. AS THE DEVIATION FROM SETPOINT DECREASES, THE DISCHARGE AIR SHALL BE RESET. 54.5 DEG. F AND 62 DEG. F SHALL BE THE LOW AND HIGH RESET LIMITS, RESPECTIVELY. ALL CONTROL SETPOINTS (INCLUDING HIGH AND LOW SET POINTS FOR DISCHARGE AIR TEMPERATURE) SHALL BE FULLY ADJUSTABLE TO MEET JOB CONDITIONS.

10. EXCESS FLOW BYPASS

10.1 EXISTING VAV TERMINAL UNIT 5, WITH LON CONTROLLER, IS INSTALLED IN BYPASS DUCT BETWEEN 307-AC1 SUPPLY AND RETURN MAINS, ABOVE ROOM 039, AND SERVES AS SYSTEM BYPASS DAMPER. BOX 5 OPERATES IN CONJUNCTION WITH ADJACENT SUPPLY DUCT PRESSURE SENSOR, TO BYPASS FLOW FROM SUPPLY MAIN TO RETURN MAIN, UPON RISE IN SUPPLY DUCT MAIN PRESSURE ABOVE SETPOINT. EXISTING SYSTEM BYPASS CONTROL THROUGH BOX 5 SHALL REMAIN, AND BYPASS CONTROL SETPOINTS AND PARAMETERS SHALL BE AVAILABLE AT ECC, THROUGH LON INTEGRATION TO NEW PANEL #5.

11. FILTER CONDITION MONITORING

11.1 NEW FILTER DIFFERENTIAL PRESSURE SENSORS DP-1 AND DP-2 SHALL INDICATE PRESSURE DIFFERENTIAL ACROSS FILTER BANKS AT ALL TIMES. WHEN PRESSURE RISES ABOVE VA'S RECOMMENDED CHANGEOVER PRESSURE DROP (0.66" FOR PREFILTERS, 0.68" FOR AFTER FILTERS), AN ALARM SHALL INDICATE AT THE DCP AND ECC. ALL SETPOINTS SHALL BE ADJUSTABLE.

12. <u>UNOCCUPIED MODE</u> 12.1 307-AC1 AND INTERLOCKED EXHAUST FANS SHALL BE ABLE TO BE SCHEDULED FOR OCCUPIED/UNOCCUPIED 7-DAY AND HOLIDAY OPERATION. PROVIDE START/STOP SOFTWARE INTERLOCK BETWEEN UNIT SUPPLY & RETURN FANS AND REMOTE EXHAUST FAN 307-EF7. DURING THE OCCUPIED MODE, THE TEMPERATURE CONTROLS SHALL FUNCTION AS SPECIFIED. DURING UNOCCUPIED MODE, THE AIR

HANDLING UNIT AND INTERLOCKED REMOTE EXHAUST FANS SHALL REMAIN OFF.

INITIAL SCHEDULE - UNIT SHALL OPERATE 7 DAYS A WEEK, 7:00 AM TO 5:00 PM. UNIT

SHALL BE OFF AFTER SCHEDULED HOURS. COORDINATE EXACT SCHEDULE WITH

UNIT SHALL INCLUDE MORNING WARM-UP AND COOL DOWN PROGRAMS, WITH OPTIMAL START. REFER TO 23 09 23 FOR MORE DETAILS ON THIS CONTROL.



Heapy Engineering MEP Design Technology Planning Commissioning Energy lationally Recognized Leader in Sustainabili 1400 W Dorothy Lane, Dayton, OH 45409-1310 Ph 937-224-0861 Fax 937-224-5777 www.heapy.com PROJECT NO. 2013-04011 FIRM LICENSE NO. 01528

BUILDING 307 CONTROLS AND AUTOMATION


ed: Chief, Engineering Service


DVAMC IMPROVE BUILDING **AUTOMATION SYSTEM**

Dayton, Ohio

VA Project No. 552-15-207

05/23/2014

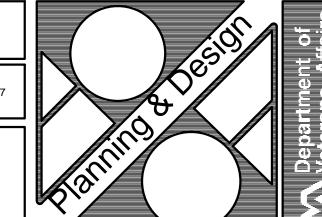

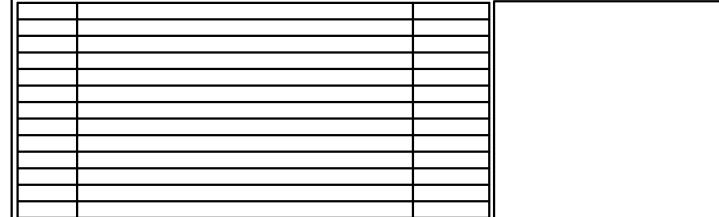


FIRST FLOOR MECHANICAL ROOM CONTROL PANEL (PANEL #2)

POINT	DEVICE	DEVICE	P	OIN	Т
ID	TAG	DESCRIPTION	DI	DC	2
1	T-9	HEATING HOT WATER SYSTEM SUPPLY TEMPERATURE			-
2	T-10	HEATING HOT WATER SYSTEM RETURN TEMPERATURE			
3	С	FIRST FLOOR HEATING HOT WATER SYSTEM PUMP #1 (307-P1) STATUS CURRENT SWITCH	Х		
4	С	FIRST FLOOR HEATING HOT WATER SYSTEM PUMP #2 (307-P2) STATUS CURRENT SWITCH	Х		
5	С	GROUND FLOOR HEATING HOT WATER SYSTEM PUMP #1 (307-P3) STATUS CURRENT SWITCH	Х		
6	С	GROUND FLOOR HEATING HOT WATER SYSTEM PUMP #2 (307-P4) STATUS CURRENT SWITCH	Х		
7	T-105	ROOM 105 SPACE TEMPERATURE			
8	T-106	ROOM 106 SPACE TEMPERATURE			
9	T-108	ROOM 108 SPACE TEMPERATURE		T	•
10	T-109	ROOM 109 SPACE TEMPERATURE		T	•
11	T-110	ROOM 110 SPACE TEMPERATURE		T	
12	T-111	ROOM 111 SPACE TEMPERATURE		T	٠
13	T-121	ROOM 121 SPACE TEMPERATURE		T	
14	T-125	ROOM 125 SPACE TEMPERATURE		T	
15	T-126	ROOM 126 SPACE TEMPERATURE		T	
16	T-C12	CORRIDOR C-1-2 SPACE TEMPERATURE		T	
17	T-C13	CORRIDOR C-1-3 SPACE TEMPERATURE		t	
18	T-134	ROOM 134 SPACE TEMPERATURE		T	
19	T-C11	CORRIDOR C-1-1 SPACE TEMPERATURE		T	
20	T-122	ROOM 122 SPACE TEMPERATURE		T	
				T	
Α	V-3	CONVERTER 307-C1 STEAM CONTROL VALVE		T	٠
В	S	FIRST FLOOR HEATING HOT WATER SYSTEM PUMP #1 (307-P1) START-STOP		X	,
С	S	FIRST FLOOR HEATING HOT WATER SYSTEM PUMP #2 (307-P2) START-STOP		X	
D	S	GROUND FLOOR HEATING HOT WATER SYSTEM PUMP #1 (307-P3) START-STOP		X	
Е	S	GROUND FLOOR HEATING HOT WATER SYSTEM PUMP #2 (307-P4) START-STOP		X	
F	VV-105	ROOM 105 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME REHEAT BOX, ELECTRIC RADIANT PANELS)		T	•
G	VV-106	ROOM 106 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME REHEAT BOX, ELECTRIC RADIANT PANELS)		T	
Н	VV-108	ROOM 108 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX)		Ī	
ļ	VV-109	ROOM 109 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME REHEAT BOX, ELECTRIC RADIANT PANELS)			
J	VV-110	ROOM 110 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, HOT WATER FIN TUBE)			
K	VV-111	ROOM 111 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, HOT WATER FIN TUBE)			
L	VV-121	ROOM 121 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, HOT WATER FIN TUBE)			
М	VV-125	ROOM 125 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME REHEAT BOX)			
N	VV-126	ROOM 126 SOUTH SPACE TEMPERATURE CONTROL (2 VARIABLE VOLUME REHEAT BOXES)			
0	VV-C12	CORRIDOR C-1-2 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX)		Γ	
Р	VV-C13	CORRIDOR C-1-3 SPACE TEMPERATURE CONTROL (2 VARIABLE VOLUME BOXES)			
Q	VV-134	ROOM 134 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX)			
R	VV-C11	CORRIDOR C-1-1 SPACE TEMPERATURE CONTROL (3 VARIABLE VOLUME BOXES)			
S	VV-122	ROOM 122 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, ELECTRIC RADIANT PANELS)			


- REMOVE EXISTING ELECTRONIC SENSOR AND REPLACE WITH NEW. REFER TO 23 09 23 FOR NEW SENSOR SPECS. RE-USE EXISTING WIRING BETWEEN SENSOR LOCATION AND ZONE E-P TRANSDUCER.
- EXISTING ZONE LEVEL PNEUMATIC CONTROL DEVICE(S) TO REMAIN (VARIABLE VOLUME BOX DAMPER ACTUATORS, PRESSURE CONTACTORS FOR RADIANT PANELS AND ELECTRIC DUCT HEATER, FIN TUBE CONTROL VALVES, VARIABLE VOLUME BOX REHEAT COIL CONTROL VALVES, ETC.) PROVIDE NEW E/P TRANSDUCER WITHIN EXISTING CABINET AT EACH ROOM, TO REPLACE EXISTING TRANSDUCER. RE-USE EXISTING PNEUMATIC TUBING BETWEEN EXISTING PNEUMATIC DEVICES AND NEW E-P TRANSDUCER, AND RE-USE WIRING BETWEEN NEW CONTROL PANEL AND ZONE E-P TRANSDUCER.
- EXISTING ELECTRONIC RELAY TO REMAIN, SHALL BE RE-USED.

- REMOVE EXISTING PIPE-MOUNTED FLOW SWITCH AND REPLACE WITH CURRENT SWITCH ON POWER FEEDER TO PUMP MOTORS, FOR PUMP STATUS INDICATION. CAP EXISTING PIPE SENSOR OPENING.
- EXISTING SYSTEM LEVEL PNEUMATIC CONTROL DEVICE TO REMAIN. PROVIDE NEW E/P TRANSDUCER WITHIN NEW CONTROL CABINET, TO REPLACE EXISTING TRANSDUCER, AND RE-PIPE EXISTING PNEUMATIC DEVICE TO NEW E/P TRANSDUCER.
- POINT DOES NOT CURRENTLY EXIST. PROVIDE POINT AS PART OF THIS PROJECT.

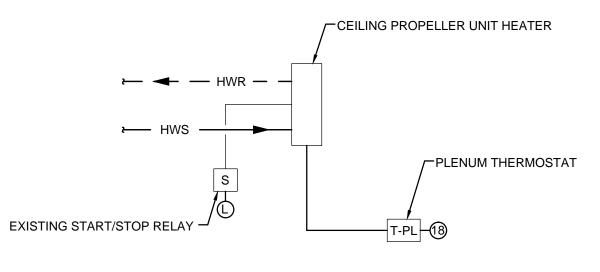


1ST FLOOR CEILING PROPELLER UNIT HEATER CONTROL


DDC PLENUM THERMOSTAT T-PL SHALL CONTROL FAN MOTORS. ON A DROP IN CEILING PLENUM TEMPERATURE BELOW SETPOINT, THERMOSTAT T-PL SHALL START FANS THROUGH EXISTING RELAY, TO MAINTAIN PLENUM TEMPERATURE SETPOINT. INITIAL SETPOINT SHALL BE 68 DEG.F (ADJ.). FAN SHALL TURN OFF ONCE PLENUM THERMOSTAT INDICATES 2 DEGREES ABOVE SETPOINT.

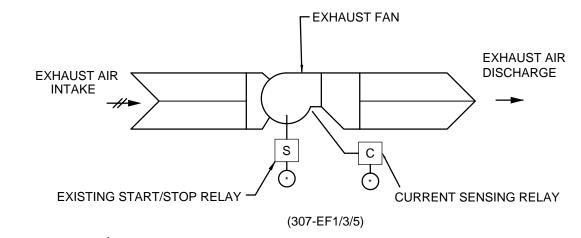

- FIRST FLOOR GENERAL EXHAUST FANS
- EXHAUST FAN CONTROLS
- 1.1 FIRST FLOOR EXHAUST FANS 307-EF1, 307-EF3 & 307-EF5: EXHAUST FANS SHALL BE STARTED AND STOPPED BY THE DCP OR REMOTELY AT THE ECC.
- 1.2 FANS SHALL BE SOFTWARE INTERLOCKED TO OPERATE WITH AIR HANDLING UNIT 307-AC2, AND SHALL BE DISABLED DURING 307-AC2 UNOCCUPIED MODE.
- 1.3 FAN STATUS INPUTS ARE EXISTING FOR EXHAUST FANS 307-EF3 IN ROOMS 105 & 106. PROVIDE CURRENT SENSORS ON EXISTING FAN POWER FEEDERS FOR 307-EF1 AND 307-EF5, TO INDICATE STATUS OF FANS TO DCP.

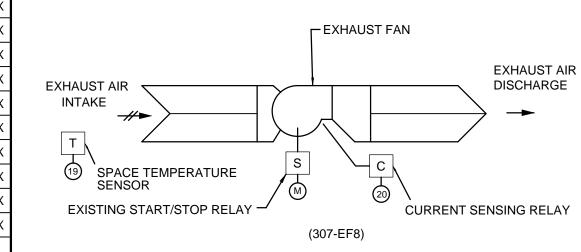

- FIRST FLOOR MECHANICAL ROOM EXHAUST FAN
- 1 EXHAUST FAN CONTROLS
- 1.1 EXHAUST FAN SHALL BE STARTED AND STOPPED BY THE DCP OR REMOTELY AT THE ECC.
- 1.2 WHEN MECHANICAL ROOM SPACE TEMPERATURE SENSOR DETECTS TEMPERATURE IN EXCESS OF 80 DEG. F (ADJUSTABLE), EXHAUST FAN 307-EF8 SHALL START. WHEN TEMPERATURE IN MECHANICAL ROOM DROPS BELOW 75 DEG. F (ADJUSTABLE), EXHAUST FAN 307-EF8 SHALL STOP. FAN SHALL START AND RUN FOR TEN MINUTES ONCE PER DAY, AT THE SAME TIME EVERY DAY.
- PROVIDE CURRENT SENSOR ON EXISTING FAN POWER FEEDER TO INDICATE STATUS OF FAN TO DCP.

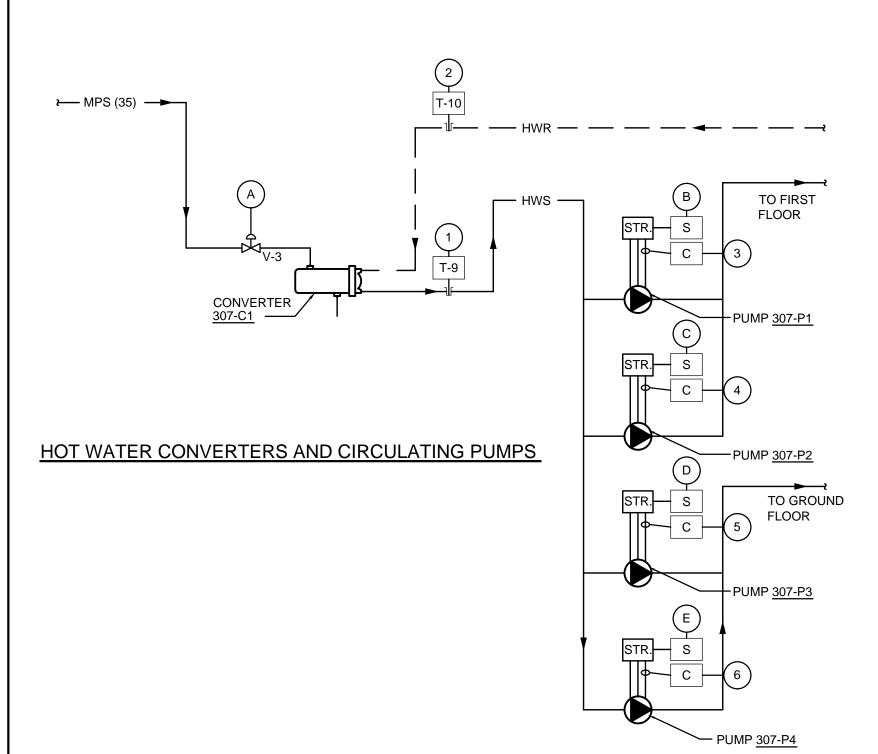


- HOT WATER CONVERTER AND PUMP CONTROL SEQUENCE
- 1.1 SEQUENCE SHALL HAVE THE ABILITY TO BE INITIATED BY THE DCP OR REMOTELY AT
- 2 HOT WATER CIRCULATING PUMPS
- 2.1 THE LEAD HOT WATER PUMPS 307-P1 (FIRST FLOOR) AND 307-P3 (GROUND FLOOR) SHALL RUN CONTINUOUSLY IN CONJUNCTION WITH HOT WATER CONVERTER 307-C1 TO PROVIDE YEAR-ROUND HOT WATER FOR SPACE TEMPERATURE CONTROL (REHEAT). START STANDBY PUMP 307-P2 UPON FAILURE OF LEAD FIRST FLOOR PUMP 307-P1, AND START STANDBY PUMP 307-P4 UPON FAILURE OF LEAD GROUND FLOOR PUMP 307-P1. A SEQUENCE PROGRAM SHALL REVERSE THE LEAD AND STANDBY PUMPS ON A MONTHLY BASIS.
- 2.2 EACH PUMP SHALL RECEIVE A CURRENT SENSING RELAY AS PART OF THIS POJECT, WHICH SHALL BE UTILIZED TO INDICATE PUMP STATUS. 3 HOT WATER CONVERTER

3.1 MODULATING STEAM CONTROL VALVE V-3 IS ASSOCIATED WITH THE HOT WATER HEATING SYSTEM. THE STEAM CONTROL VALVE SHALL FAIL CLOSED. VALVE V-3 SHALL BE CONTROLLED FROM OUTDOOR AIR TEMPERATURE AND LEAVING WATER TEMPERATURE SENSOR T-9 TO DELIVER SUPPLY WATER VARYING AS FOLLOWS:

60 DEG. F

HOT WATER TEMP 200 DEG. F 100 DEG. F.

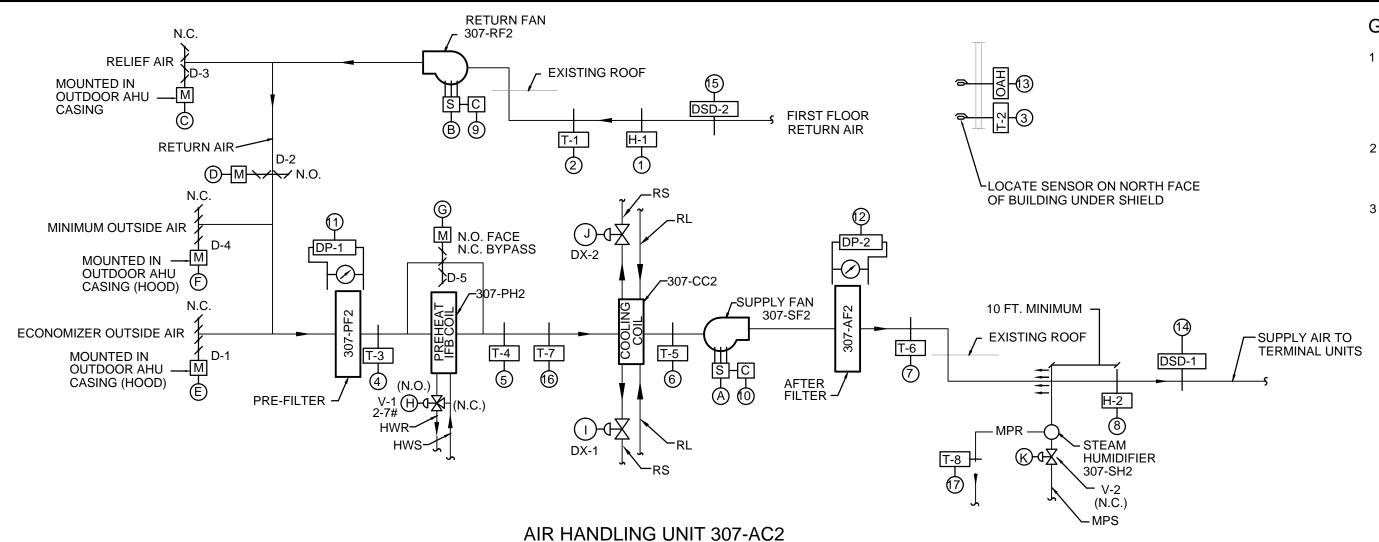

LEGEND (APPLIES TO PANELS 1 & 2)

C CURRENT SENSING RELAY

FANS/PUMPS. DIFFERENTIAL PRESSURE SENSOR TRANSMITS DIFFERENTIAL PRESSURE TO DCP TO INDICATE FILTER

MODULATING OUTSIDE AIR DAMPER (ECONOMIZER)

D-2 MODULATING RETURN AIR

DCP DIRECT DIGITAL CONTROL PANEL

DAMPER

FACE & BYPASS DAMPER

MODULATING RELIEF AIR

MINIMUM OUTSIDE AIR

D-5 MODULATING PREHEAT COIL

DSD DUCT SMOKE DETECTORS

DX-1 DX CONDENSING UNIT START/ DX-2 STOP RELAY ECC ENGINEERING CONTROL CENTER

H-1 RETURN AIR HUMIDITY SENSOR

H-2 SUPPLY AIR HUMIDITY SENSOR

OAH OUTSIDE AIR HUMIDITY

S FAN & PUMP START/STOP RELAYS

RETURN AIR TEMPERATURE SENSOR

T-2 OUTSIDE AIR TEMPERATURE SENSOR

> MIXED AIR TEMPERATURE SENSOR PREHEAT COIL LEAVING AIR

TEMPERATURE SENSOR COOLING COIL LEAVING AIR TEMPERTURE

T-6 SUPPLY AIR TEMPERATURE SENSOR

T-7 FREEZESTAT T-8 307-SH2 JACKET CONDENSATE

HEATING HOT WATER SUPPLY TEMPERATURE SENSOR T-10 HEATING HOT WATER RETURN

TEMPERATURE SENSOR

T-### MISCELLANEOUS ZONE CONTROL

TEMPERATURE SENSOR

SENSES AND TRANSMITS CEILING T-PL FIRST FLOOR CEILING PLENUM PLENUM TEMPERATURE TO DCP FOR TEMPERATURE SENSOR

SPACE TEMPERATURE SENSOR TWO-POSITION HOT WATER CONTROL VALVE

MODULATING STEAM HUMDIFIER CONTROL VALVE MODULATING STEAM CONVERTER CONTROL VALVE VV-### ZONE SPACE TEMPERATURE

CONTROL SIGNAL

TRANSMITS MOTOR CURRENT TO DCP TO INDICATE STATUS OF

CONDITION CONTROLS OPERATION OF AIR HANDLING UNIT IN ACCORDANCE

WITH THE SEQUENCE OF OPERATION PROPORTIONS FLOW OF OUTSIDE AIR IN RESPONSE TO DCP AND CLOSES WHEN SUPPLY FAN STOPS

PROPORTIONS FLOW OF RETURN

AIR IN RESPONSE TO DCP AND

OPENS WHEN SUPPLY FAN STOPS PROPORTIONS FLOW OF RELIEF AIR IN RESPONSE TO DCP AND **CLOSES WHEN SUPPLY FAN STOPS**

PROPORTIONS FLOW OF OUTSIDE AIR IN RESPONSE TO DCP AND CLOSES WHEN SUPPLY FAN STOPS PROPORTIONS FLOW OF AIR THROUGH PREHEAT COIL IN RESPONSE TO DCP TEMPERATURE CONTROL AND

FREEZE PROTECTION

INDICATION

PROVIDE SMOKE SIGNAL TO DCP **ENABLES/DISABLES STAGES OF DX** COOLING IN RESPONSE TO DCP

LOCATED IN BUILDING 310 MEZZANINE FOR MONITORING OF SYSTEM OPERATIONS SENSES AND TRANSMITS RETURN AIR HUMIDITY TO DCP FOR CONTROL AND

SENSES AND TRANSMITS SUPPLY AIR HUMIDITY TO DCP FOR CONTROL AND INDICATION SENSES AND TRANSMITS OUTSIDE

AIR ENTHALPY TO DCP FOR CONTROL AND INDICATION ENABLES/DISABLES SUPPLY, RETURN, EXHAUST, AND UNIT HEATER FANS, AND HEATING HOT WATER PUMPS IN

RESPONSE TO DCP SENSES AND TRANSMITS RETURN AIR DRY BULB TEMPERATURE TO DCP FOR INDICATION ONLY SENSES AND TRANSMITS OUTSIDE

DCP FOR CONTROL AND INDICATION SENSES AND TRANSMITS MIXED AIR DRY BULB TEMPERATURE TO DCP FOR CONTROL AND INDICATION

AIR DRY BULB TEMPERATURE TO

SENSES AND TRANSMITS PREHEAT AIR DRY BULB TEMPERATURE TO DCP FOR CONTROL AND INDICATION SENSES AND TRANSMITS COOLING COIL DISCHARGE AIR TEMPERATURE TO DCP FOR INDICATION ONLY

SENSES AND TRANSMITS SUPPLY AIR DRY BULB TEMPERATURE TO DCP FOR CONTROL AND INDICATION

(NOTE 3)

SHUTS DOWN SUPPLY FAN UPON SENSING FREEZE CONDITION.

SENSES AND TRANSMITS 307-SH2 JACKET CONDENSATE TEMPERATURE TO DCP FOR CONTROL AND INDICATION SENSES AND TRANSMITS HEATING HOT WATER SUPPLY TEMPERATURE TO

DCP FOR CONTROL AND INDICATION SENSES AND TRANSMITS HEATING HOT WATER RETURN TEMPERATURE TO DCP FOR CONTROL AND INDICATION

CONTROL AND INDICATION SENSES AND TRANSMITS ZONE SPACE TEMPERATURE TO DCP FOR CONTROL

AND INDICATION DIRECTS FLOW OF HOT WATER THROUGH PREHEAT COIL IN RESPONSE

PROPORTIONS FLOW OF STEAM TO HUMIDIFIER IN RESPONSE TO DCP PROPORTIONS FLOW OF STEAM TO CONVERTER IN RESPONSE TO DCP SENDS ANALOG OUTPUT SIGNAL TO ZONE E-P TRANSDUCERS IN RESPONSE TO DCP, TO MODULATE ZONE TEMPERATURE CONTROL DEVICES.

NEW DISTRIBUTED CONTROL PANEL (DCP/DDC)

CONTROL PANEL 307-AC2 (PANEL#1)

POINT	DEVICE	DEVICE	P	TNIC	TY	PΕ
ID	TAG	DESCRIPTION	DI	DO	ΑI	ΑC
1	H-1	RETURN AIR HUMIDITY SENSOR			Х	
2	T-1	RETURN AIR TEMPERATURE SENSOR			Х	
3	T-2	OUTSIDE AIR TEMPERATURE SENSOR (GLOBAL POINT)			Χ	
4	T-3	MIXED AIR TEMPERATURE SENSOR			Х	
5	T-4	PREHEAT COIL LEAVING AIR TEMPERATURE SENSOR			Х	
6	T-5	COOLING COIL LEAVING AIR TEMPERATURE SENSOR			Χ	
7	T-6	SUPPLY AIR TEMPERATURE SENSOR			Χ	
8	H-2	SUPPLY AIR HUMIDITY SENSOR (HIGH LIMIT)	Х			Γ
9	С	RETURN FAN STATUS CURRENT SWITCH	Х			
10	С	SUPPLY FAN STATUS CURRENT SWITCH	Х			
11	DP-1	PRE FILTER PRESSURE DROP			Х	
12	DP-2	AFTER FILTER PRESSURE DROP			Х	
13	OAH	OUTSIDE AIR HUMIDITY (GLOBAL POINT)			Χ	
14	DSD-1	SUPPLY AIR DUCT SMOKE DETECTOR (FIRE SYSTEM SHUTDOWN)	X			
15	DSD-2	RETURN AIR DUCT SMOKE DETECTOR (FIRE SYSTEM SHUTDOWN)	X			
16	T-7	FREEZESTAT	X			
17	T-8	HUMIDIFIER 31-SH2 STEAM JACKET CONDENSATE TEMPERATURE SENSOR	X			
18	T-PL	1ST FLOOR CEILING PLENUM TEMPERATURE			Χ	
19	T-107	MECHANICAL ROOM 107 SPACE TEMPERATURE			Х	Г
20	С	EXHAUST FAN 307-EF8 STATUS CURRENT SWITCH	T _X			
21	С	EXHAUST FAN 307-EF1 STATUS CURRENT SWITCH	X			
22	С	EXHAUST FAN 307-EF3 (ROOM 105) STATUS CURRENT SWITCH	+			
23	С	EXHAUST FAN 307-EF3 (ROOM 106) STATUS CURRENT SWITCH	T_x			
24	С	EXHAUST FAN 307-EF5 STATUS CURRENT SWITCH	X			
Α	S	SUPPLY FAN START-STOP		Х		
В	S	RETURN FAN START-STOP		Х		
С	D-3	MODULATING RELIEF AIR DAMPER				Х
D	D-2	MODULATING RETURN AIR DAMPER				Х
Е	D-1	MODULATING OUTSIDE AIR DAMPER				Х
F	D-4	TWO-POSITION OUTSIDE AIR DAMPER		Х		
G	D-5	MODULATING PREHEAT COIL FACE & BYPASS DAMPER				Х
Н	V-1	TWO POSITION, THREE-WAY PREHEAT COIL VALVE		Х		
I	DX-1	CONDENSING UNIT CU-2 DX COOLING ENABLE (FIRST STAGE OF COOLING)		Х		
J	DX-2	CONDENSING UNIT CU-2 DX COOLING ENABLE (FIRST STAGE OF COOLING)		Х		
K	V-2	MODULATING STEAM HUMIDIFIER VALVE				Х
L	S	1ST FLOOR CEILING SPACE HEATERS START-STOP		Х		
	<u> </u>					\vdash

REMOVE EXISTING ELECTRONIC SENSOR AND REPLACE WITH NEW. REFER TO 23 09 23 FOR NEW SENSOR SPECS. RE-USE EXISTING WIRING BETWEEN SENSOR LOCATION AND ZONE E-P TRANSDUCER.

EXISTING SYSTEM LEVEL PNEUMATIC CONTROL DEVICE TO REMAIN. PROVIDE NEW E/P TRANSDUCER WITHIN NEW CONTROL CABINET, TO REPLACE EXISTING TRANSDUCER, AND RE-PIPE EXISTING PNEUMATIC DEVICE TO NEW E/P TRANSDUCER.

3 EXISTING ELECTRONIC RELAY TO REMAIN, SHALL BE RE-USED.

REMOVE EXISTING DIFFERENTIAL PRESSURE FAN STATUS SWITCH AND REPLACE WITH CURRENT SWITCH ON POWER FEEDER TO FAN MOTOR, FOR FAN STATUS INDICATION. SEAL EXISTING DUCT OPENINGS.

5 POINT DOES NOT CURRENTLY EXIST. PROVIDE POINT AS PART OF THIS PROJECT

(NOTE 3) M S ROOM 107 SPACE TEMPERATURE CONTROL (EXHAUST FAN 307-EF8 START-STOP)

N S FIRST FLOOR EXHAUST FANS (307-EF1, 307-EF5) START-STOP

(NOTE 3) OSS FIRST FLOOR EXHAUST FANS 307-EF3 (QTY. 2) START-STOP

6 EXISTING ELECTRONIC SENSOR TO REMAIN, SHALL BE RE-USED.

7 EXISTING ZONE LEVEL PNEUMATIC CONTROL DEVICE(S) TO REMAIN (VARIABLE VOLUME BOX DAMPER ACTUATORS, PRESSURE CONTACTORS FOR RADIANT PANELS AND ELECTRIC DUCT HEATER, FIN TUBE CONTROL VALVES, VARIABLE VOLUME BOX REHEAT COIL CONTROL VALVES, ETC.) PROVIDE NEW E/P TRANSDUCER WITHIN EXISTING CABINET AT EACH ROOM, TO REPLACE EXISTING TRANSDUCER. RE-USE EXISTING PNEUMATIC TUBING BETWEEN EXISTING PNEUMATIC DEVICES AND NEW E-P TRANSDUCER, AND RE-USE WIRING BETWEEN NEW CONTROL PANEL AND ZONE E-P TRANSDUCER.

GENERAL NOTES

- A COMPLETE SYSTEM OF AUTOMATIC TEMPERATURE CONTROLS SHALL BE INSTALLED UNDER THIS CONTRACT AS REQUIRED TO ACCOMPLISH THE SEQUENCE OF CONTROL FOR VARIOUS ITEMS OF EQUIPMENT AND SYSTEMS AS DESCRIBED HEREINAFTER. THE SYSTEM SHALL BE A DIRECT DIGITAL CONTROL SYSTEM UTILIZING PNEUMATIC ACTUATION.
- ALL CONTROL POWER SOURCES REQUIRED SHALL BE PROVIDED UNDER THE ATC WORK. THIS WORK SHALL INCLUDE BUT NOT BE LIMITED TO WIRING, CONDUIT, TRANSFORMERS, RELAYS AND FUSES.

POINTS LIST IS SHOWN AS AN AID TO THE CONTRACTOR INDICATING THE MINIMUM POINTS REQUIRED FOR CONTROL AND MONITORING. ALL INPUT AND OUTPUT POINTS AND THEIR REQUIRED INTERFACE AND ACCESSORY HARDWARE, SHALL BE PROVIDED FOR A COMPLETE AND FUNCTIONAL CONTROL SYSTEM. IF OR WHEN ADDITIONAL POINTS ARE REQUIRED TO ACCOMPLISH THE SEQUENCES OF CONTROL SPECIFIED, THESE POINTS, ALONG WITH ADDITIONAL DIRECT DIGITAL CONTROL PANEL(S) (IF REQUIRED), SHALL ALSO BE PROVIDED.

SEQUENCE OF OPERATION FOR 307-AC2

1. <u>GENERAL</u>

1.1 UNIT IS NORMALLY STARTED AND STOPPED BY THE DCP OR REMOTELY AT THE ECC. H-O-A SWITCH SHALL BE KEPT IN THE "AUTO" POSITION. "HAND" AND "OFF" POSITIONS SHALL BE USED ONLY FOR MAINTENANCE.

1.2 WHEN THE UNIT IS "OFF", FOR ANY REASON, OUTSIDE AIR DAMPERS D-1 & D-4, AND RELIEF AIR DAMPER D-3 SHALL BE FULLY CLOSED, RETURN AIR DAMPER D-2 SHALL BE FULLY OPEN, AND SUPPLY AND RETURN FANS SHALL BE OFF.

1.3 WHEN THE UNIT IS "ON", SUPPLY AND RETURN FANS SHALL START, AND D-1, D-2, D-3, AND D-4 SHALL MODULATE IN ACCORDANCE WITH THE FOLLOWING SEQUENCE.

2. <u>TEMPERATURE CONTROL</u> 2.1 SUPPLY AIR TEMPERATURE, SENSED BY T-6, SHALL BE MAINTAINED AT SETPOINT OF 54.5 DEG. F. (ADJ.) VIA DCP BY ENABLING STAGES OF DX COOLING (307-CU2), OR MODULATING ECONOMIZER DAMPERS D-2 D-3, AND D-4, OR PREHEAT COIL VALVE V-1 AND FACE & BYPASS DAMPERS, IN SEQUENCE. SEPARATE CONTROL LOOPS SHALL BE UTILIZED FOR ECONOMIZER COOLING, MECHANICAL COOLING, AND HEATING

FUNCTION. DX COOLING SHALL BE DISABLED BEFORE PREHEAT COIL VALVE V-1

OPENS, AND VICE VERSA. ENTHALPY ECONOMIZER CONTROL

3.1 OUTSIDE AIR TEMPERATURE AND HUMIDITY, AND RETURN AIR TEMPERATURE AND HUMIDITY SHALL BE MEASURED, AND THE ENTHALPY OF EACH DETERMINED. IF THE ENTHALPY OF THE OUTSIDE AIR IS LESS THAN THE ENTHALPY OF THE RETURN AIR, THE ECONOMIZER SHALL BE ENABLED. WHEN THE OUTSIDE AIR ENTHALPY IS HIGHER THAN THE RETURN AIR ENTHALPY AND MECHANICAL COOLING IS AVAILABLE THE ECONOMIZER SHALL BE DISABLED.

4.1 WHEN THE UNIT OPERATES IN THE OCCUPIED MODE, MINIMUM OUTSIDE AIR SHALL BE PROVIDED BY OPENING MINIMUM OUTSIDE AIR DAMPER D-4 AND RETURN AIR DAMPERS D-2, TO A POSITION DETERMINED BY AIR BALANCE, TO PROVIDE MINIMUM OUTSIDE AIR VOLUME. RELIEF AIR DAMPERS D-3 SHALL REMAIN CLOSED THIS CONDITION IS THE NORMAL POSITION AND SHALL BE MAINTAINED DURING THE OCCUPIED MODE EXCEPT DURING THE "ECONOMIZER" CYCLE. DURING THE "ECONOMIZER" CYCLE, THE AMOUNT OF OUTSIDE AIR AND RELIEF AIR SHALL BE INCREASED AS REQUIRED BY MODULATING ECONOMIZER DAMPERS D-1 TO MAINTAIN THE UNIT DISCHARGE AIR TEMPERATURE SETPOINT, AS SENSED BY T-6. PROVIDE A MIXED AIR SENSOR AND LOW LIMIT CONTROL (T-3) SET AT 50 DEGREES F. TO PREVENT OVER-OPENING OF THE ECONOMIZER OUTSIDE AIR DAMPERS. ALL CONTROL SETPOINTS SHALL BE FULLY ADJUSTABLE TO MEET JOB CONDITIONS. MINIMUM OUTSIDE AIR VOLUME SHALL BE 15% OF SUPPLY AIR VOLUME. SUPPLY AND RETURN AIRFLOW SHALL BE MEASURED PRIOR TO STARTING THIS WORK, AND SHALL BE NOTED ON AS-BUILT CONTROL DRAWINGS, ALONG WITH MINIMUM OUTSIDE

AIR FLOW CONTROL

5.1 EXISTING SUPPLY AND RETURN FAN MOTOR STARTERS SHALL RESPOND TO START/STOP COMMANDS AND ALL SAFETIES (FREEZE, SMOKE, ETC.) WHETHER IN THE HAND OR AUTOMATIC MODE.

6. <u>HUMIDITY CONTROL</u>

6.1 WHEN THE DCP IS NOT CALLING FOR HUMIDITY, SENSED BY RETURN AIR HUMIDITY SENSOR H-1, MODULATING HUMIDIFIER CONTROL VALVE V-2 SHALL REMAIN CLOSED. DCP SHALL ALSO CLOSE VALVE V-2 WHENEVER THE OUTSIDE AIR TEMPERATURE IS ABOVE 55 DEG. F, OR WHENEVER THE SUPPLY FAN IS OFF.

6.2 RETURN AIR HUMIDITY, SENSED BY H-1, SHALL BE MAINTAINED AT SETPOINT (30% RH, ADJUSTABLE) VIA DCP BY MODULATING HUMIDIFIER CONTROL VALVE V-2 TO MAINTAIN THE DESIRED HUMIDITY. THE DCP SHALL OVERRIDE THIS CONTROL TO MAINTAIN A MAXIMUM HUMIDITY LEVEL OF 80% AS SENSED BY H-2. VALVE V-2 SHALL BE INTERLOCKED WITH JACKET CONDENSATE TEMPERATURE SWITCH T-8, TO KEEP THE HUMIDIFIER OFF UNTIL JACKET CONDENSATE TEMPERATURE APPROACHES STEAM TEMPERATURE.

7. FREEZE PROTECTION

7.1 UPON CALL FOR HEAT, 3-WAY, 2-POSITION PREHEAT COIL VALVE V-1 SHALL OPEN TO THE COIL AND CLOSE TO THE BYPASS, AND PREHEAT COIL FACE & BYPASS DAMPERS SHALL MODULATE TO MAINTAIN UNIT DISCHARGE AIR TEMPERATURE SETPOINT.

7.2 IF THE PREHEAT COIL DISCHARGE AIR TEMPERATURE AS SENSED BY T-4 FALLS BELOW 40 DEG.F, AN ALARM SIGNAL SHALL INDICATE AT THE DCP AND ECC. IF THE PREHEAT COIL DISCHARGE TEMPERATURE FALLS BELOW 35 DEG.F AS SENSED BY FREEZESTAT T-7, THE SUPPLY AND RETURN FANS SHALL SHUT DOWN AND A CRITICAL ALARM SHALL INDICATE AT THE DCP AND ECC. T-7 SHALL BE HARDWIRED TO THE SUPPLY FAN SAFETY CIRCUIT TO SHUT DOWN THE UNIT IN THE HAND OR AUTOMATIC MODE. T-7 SHALL REQUIRE MANUAL RESET AT THE DEVICE.

8. <u>AUTOMATIC SHUTDOWN / RESTART</u>

8.1 WHEN SMOKE IS DETECTED BY EITHER THE SUPPLY OR RETURN DUCT SMOKE DETECTOR, THE SUPPLY AND RETURN AIR FANS AND INTERLOCKED EXHAUST FANS 307-EF1, 307-EF3, AND 307-EF5 SHALL SHUT "OFF", REMOTE FIRST FLOOR SMOKE DAMPERS SHALL CLOSE, AND A SUPERVISORY SIGNAL SHALL BE TRANSMITTED TO THE FIRE ALARM SYSTEM, AND A SUPERVISORY SIGNAL SHALL INDICATE AT THE DCP AND ECC. SUPPLY AND RETURN FANS AND INTERLOCKED EXHAUST FANS SHALL RESTART AND SMOKE DAMPERS SHALL OPEN WHEN WHEN THE FIRE ALARM CIRCUIT IS RESET. REFER TO FLOOR PLANS FOR LOCATION OF EXISTING REMOTE SMOKE DAMPERS.

DISCHARGE AIR RESET

9.1 THE AIR HANDLING UNIT CONTROLS SHALL PROVIDE DISCHARGE AIR TEMPERATURE CONTROL BASED ON ZONE DEMAND DEVIATION FROM SETPOINT. ALL ZONES SHALL BE SAMPLED AND THE ZONE FURTHEST FROM SETPOINT SHALL GOVERN. AS THE DEVIATION FROM SETPOINT DECREASES, THE DISCHARGE AIR SHALL BE RESET. 54.5 DEG. F AND 62 DEG. F SHALL BE THE LOW AND HIGH RESET LIMITS, RESPECTIVELY. ALL CONTROL SETPOINTS (INCLUDING HIGH AND LOW SET POINTS FOR DISCHARGE AIR TEMPERATURE) SHALL BE FULLY ADJUSTABLE TO MEET JOB CONDITIONS.


10. <u>FILTER CONDITION MONITORING</u>

10.1 NEW FILTER DIFFERENTIAL PRESSURE SENSORS DP-1 AND DP-2 SHALL INDICATE PRESSURE DIFFERENTIAL ACROSS FILTER BANKS AT ALL TIMES. WHEN PRESSURE RISES ABOVE VA'S RECOMMENDED CHANGEOVER PRESSURE DROP (0.66" FOR PREFILTERS, 0.68" FOR AFTER FILTERS), AN ALARM SHALL INDICATE AT THE DCP AND ECC. ALL SETPOINTS SHALL BE ADJUSTABLE.

11. <u>UNOCCUPIED MODE</u>

11.1 307-AC2 AND INTERLOCKED EXHAUST FANS SHALL BE ABLE TO BE SCHEDULED FOR OCCUPIED/UNOCCUPIED 7-DAY AND HOLIDAY OPERATION. PROVIDE START/STOP SOFTWARE INTERLOCK BETWEEN UNIT SUPPLY & RETURN FANS AND REMOTE EXHAUST FANS 307-EF1, 307-EF3, AND 307-EF5. DURING THE OCCUPIED MODE, THE TEMPERATURE CONTROLS SHALL FUNCTION AS SPECIFIED. DURING UNOCCUPIED MODE, THE AIR HANDLING UNIT AND INTERLOCKED REMOTE EXHAUST FANS SHALL REMAIN OFF INITIAL SCHEDULE - UNIT SHALL OPERATE 7 DAYS A WEEK, 7:00 AM TO 5:00 PM. UNIT

SHALL BE OFF AFTER SCHEDULED HOURS. COORDINATE EXACT SCHEDULE WITH UNIT SHALL INCLUDE MORNING WARM-UP AND COOL DOWN PROGRAMS, WITH OPTIMAL START. REFER TO 23 09 23 FOR MORE DETAILS ON THIS CONTROL.

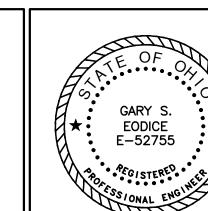

Heapy Engineering

Nationally Recognized Leader in Sustainabilit 1400 W Dorothy Lane, Dayton, OH 45409-1310 Ph 937-224-0861 Fax 937-224-5777 www.heapy.com PROJECT NO. 2013-04011 FIRM LICENSE NO. 01528 **BUILDING 307 CONTROLS AND AUTOMATION**


ed: Chiet, Engineering Service


DVAMC IMPROVE BUILDING **AUTOMATION SYSTEM** 307 PCW

Dayton, Ohio

VA Project No. 552-15-207 JAC

05/23/2014

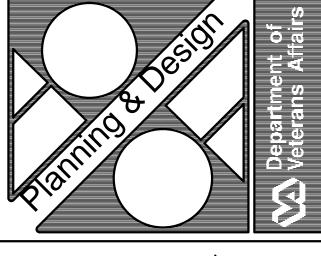

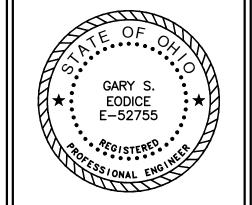

LEGEND (APPLIES TO PANEL #3)

DCP DIRECT DIGITAL CONTROL PANEL

ECC ENGINEERING CONTROL CENTER

SPACE TEMPERATURE SENSOR

T-### MISCELLANEOUS ZONE CONTROL

VV-### ZONE SPACE TEMPERATURE CONTROL SIGNAL

CONTROLS OPERATION OF AIR HANDLING UNIT IN ACCORDANCE WITH THE SEQUENCE OF OPERATION LOCATED IN BUILDING 310 MEZZANINE FOR MONITORING OF SYSTEM OPERATIONS

SENDS ANALOG OUTPUT SIGNAL TO ZONE E-P TRANSDUCERS IN RESPONSE TO DCP, TO MODULATE ZONE TEMPERATURE CONTROL DEVICES.


SENSES AND TRANSMITS ZONE SPACE

TEMPERATURE TO DCP FOR CONTROL

AND INDICATION

GENERAL NOTES


- 1 A COMPLETE SYSTEM OF AUTOMATIC TEMPERATURE CONTROLS SHALL BE INSTALLED UNDER THIS CONTRACT AS REQUIRED TO ACCOMPLISH THE SEQUENCE OF CONTROL FOR VARIOUS ITEMS OF EQUIPMENT AND SYSTEMS AS DESCRIBED HEREINAFTER. THE SYSTEM SHALL BE A DIRECT DIGITAL CONTROL SYSTEM UTILIZING PNEUMATIC ACTUATION.
- 2 ALL CONTROL POWER SOURCES REQUIRED SHALL BE PROVIDED UNDER THE ATC WORK. THIS WORK SHALL INCLUDE BUT NOT BE LIMITED TO WIRING, CONDUIT, TRANSFORMERS, RELAYS AND FUSES.
- 3 POINTS LIST IS SHOWN AS AN AID TO THE CONTRACTOR INDICATING THE MINIMUM POINTS REQUIRED FOR CONTROL AND MONITORING. ALL INPUT AND OUTPUT POINTS, AND THEIR REQUIRED INTERFACE AND ACCESSORY HARDWARE, SHALL BE PROVIDED FOR A COMPLETE AND FUNCTIONAL CONTROL SYSTEM. IF OR WHEN ADDITIONAL POINTS ARE REQUIRED TO ACCOMPLISH THE SEQUENCES OF CONTROL SPECIFIED, THESE POINTS, ALONG WITH ADDITIONAL DIRECT DIGITAL CONTROL PANEL(S) (IF REQUIRED), SHALL ALSO BE PROVIDED.

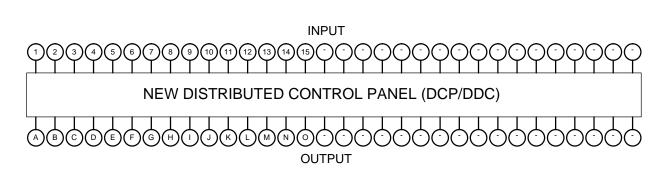

NORTH STAIRWELL CONTROL PANEL (PANEL #3)

			OM SW1 ZONE CONTROL PANEL POINTS LIST (PANEL#3	′ 			
	POINT ID	DEVICE TAG	DEVICE DESCRIPTION	<u> </u>		AI	
NOTE 1)	1	T-112	ROOM 112 SPACE TEMPERATURE		╪	X	F
NOTE 1)	2	T-113	ROOM 113 SPACE TEMPERATURE		+	X	
NOTE 1)	3	T-114	ROOM 114 SPACE TEMPERATURE	-+	+	X	┢
NOTE 1)	4	T-116	ROOM 116 SPACE TEMPERATURE		+	Х	-
NOTE 1)	5	T-117	ROOM 117 SPACE TEMPERATURE		+	Х	H
NOTE 1)	6	T-118	ROOM 118 SPACE TEMPERATURE		\dagger	Х	
NOTE 1)	7	T-C14	CORRIDOR C-1-4 SPACE TEMPERATURE		+	Х	T
NOTE 1)	8	T-120A	ROOM 120A SPACE TEMPERATURE		T	Х	
NOTE 1)	9	T-120	ROOM 120 SPACE TEMPERATURE		T	Х	
NOTE 1)	10	T-128	ROOM 128 SPACE TEMPERATURE		+	Х	
NOTE 1)	11	T-129	ROOM 129 SPACE TEMPERATURE		1	Х	T
NOTE 1)	12	T-130	ROOM 130 SPACE TEMPERATURE		1	Х	
NOTE 1)	13	T-131	ROOM 131 SPACE TEMPERATURE		1	Х	
NOTE 1)	14	T-132	ROOM 132 SPACE TEMPERATURE		1	Х	
NOTE 1)	15	T-133	ROOM 133 SPACE TEMPERATURE		\bot	Х	
NOTE 2)	A	VV-112	ROOM 112 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, HOT WATER FIN TUBE)		+		X
NOTE 2)	В	VV-113	ROOM 113 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, HOT WATER FIN TUBE)		1	\Box	Х
NOTE 2)	С	VV-114	ROOM 114 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, HOT WATER FIN TUBE)		1	\Box	Х
NOTE 2)	D	VV-116	ROOM 116 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, HOT WATER FIN TUBE)		1	\Box	Х
NOTE 2)	Е	VV-117	ROOM 117 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, HOT WATER FIN TUBE)		1	\Box	Х
NOTE 2)	F	VV-118	ROOM 118 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, HOT WATER FIN TUBE)			\Box	Х
NOTE 2)	G	VV-C14	CORRIDOR C-1-4 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX)		1		Х
NOTE 2)	Н	VV-120A	ROOM 120A SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, HOT WATER FIN TUBE)		1		Х
NOTE 2)	ı	VV-120	ROOM 120 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, HOT WATER FIN TUBE)				Х
NOTE 2)	J	VV-128	ROOM 128 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, ELECTRIC RADIANT PANELS)				Х
NOTE 2)	K	VV-129	ROOM 129 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, ELECTRIC RADIANT PANELS)				Х
NOTE 2)	L	VV-130	ROOM 130 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, ELECTRIC RADIANT PANELS)				Х
NOTE 2)	М	VV-131	ROOM 131 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, ELECTRIC RADIANT PANELS)				Х
NOTE 2)	N	VV-132	ROOM 132 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, ELECTRIC RADIANT PANELS)				Х
NOTE 2)	0	VV-133	ROOM 133 SPACE TEMPERATURE CONTROL (VARIABLE VOLUME BOX, ELECTRIC RADIANT PANELS)		1		Х

- 1 REMOVE EXISTING ELECTRONIC SENSOR AND REPLACE WITH NEW. REFER TO 23 09 23 FOR NEW SENSOR SPECS. RE-USE EXISTING WIRING BETWEEN SENSOR LOCATION AND ZONE E-P TRANSDUCER.
- 2 EXISTING ZONE LEVEL PNEUMATIC CONTROL DEVICE(S) TO REMAIN (VARIABLE VOLUME BOX DAMPER ACTUATORS, PRESSURE CONTACTORS FOR RADIANT PANELS AND ELECTRIC DUCT HEATER, FIN TUBE CONTROL VALVES, VARIABLE VOLUME BOX REHEAT COIL CONTROL VALVES, ETC.) PROVIDE NEW E/P TRANSDUCER WITHIN EXISTING CABINET AT EACH ROOM, TO REPLACE EXISTING TRANSDUCER. RE-USE EXISTING PNEUMATIC TUBING BETWEEN EXISTING PNEUMATIC DEVICES AND NEW E-P TRANSDUCER, AND RE-USE WIRING BETWEEN NEW CONTROL PANEL AND ZONE E-P TRANSDUCER.

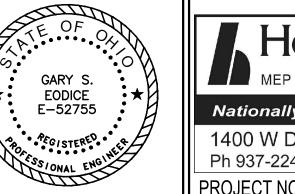


Heapy Engineering Nationally Recognized Leader in Sustainabilit 1400 W Dorothy Lane, Dayton, OH 45409-1310 Ph 937-224-0861 Fax 937-224-5777 www.heapy.com PROJECT NO. 2013-04011 FIRM LICENSE NO. 01528


BUILDING 307 CONTROLS AND AUTOMATION

DVAMC IMPROVE BUILDING **AUTOMATION SYSTEM**

VA Project No. 552-15-207

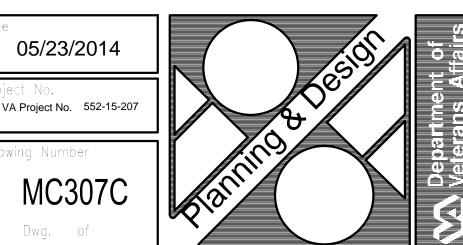

ved: Chief, Engineering Service Dayton, Ohio

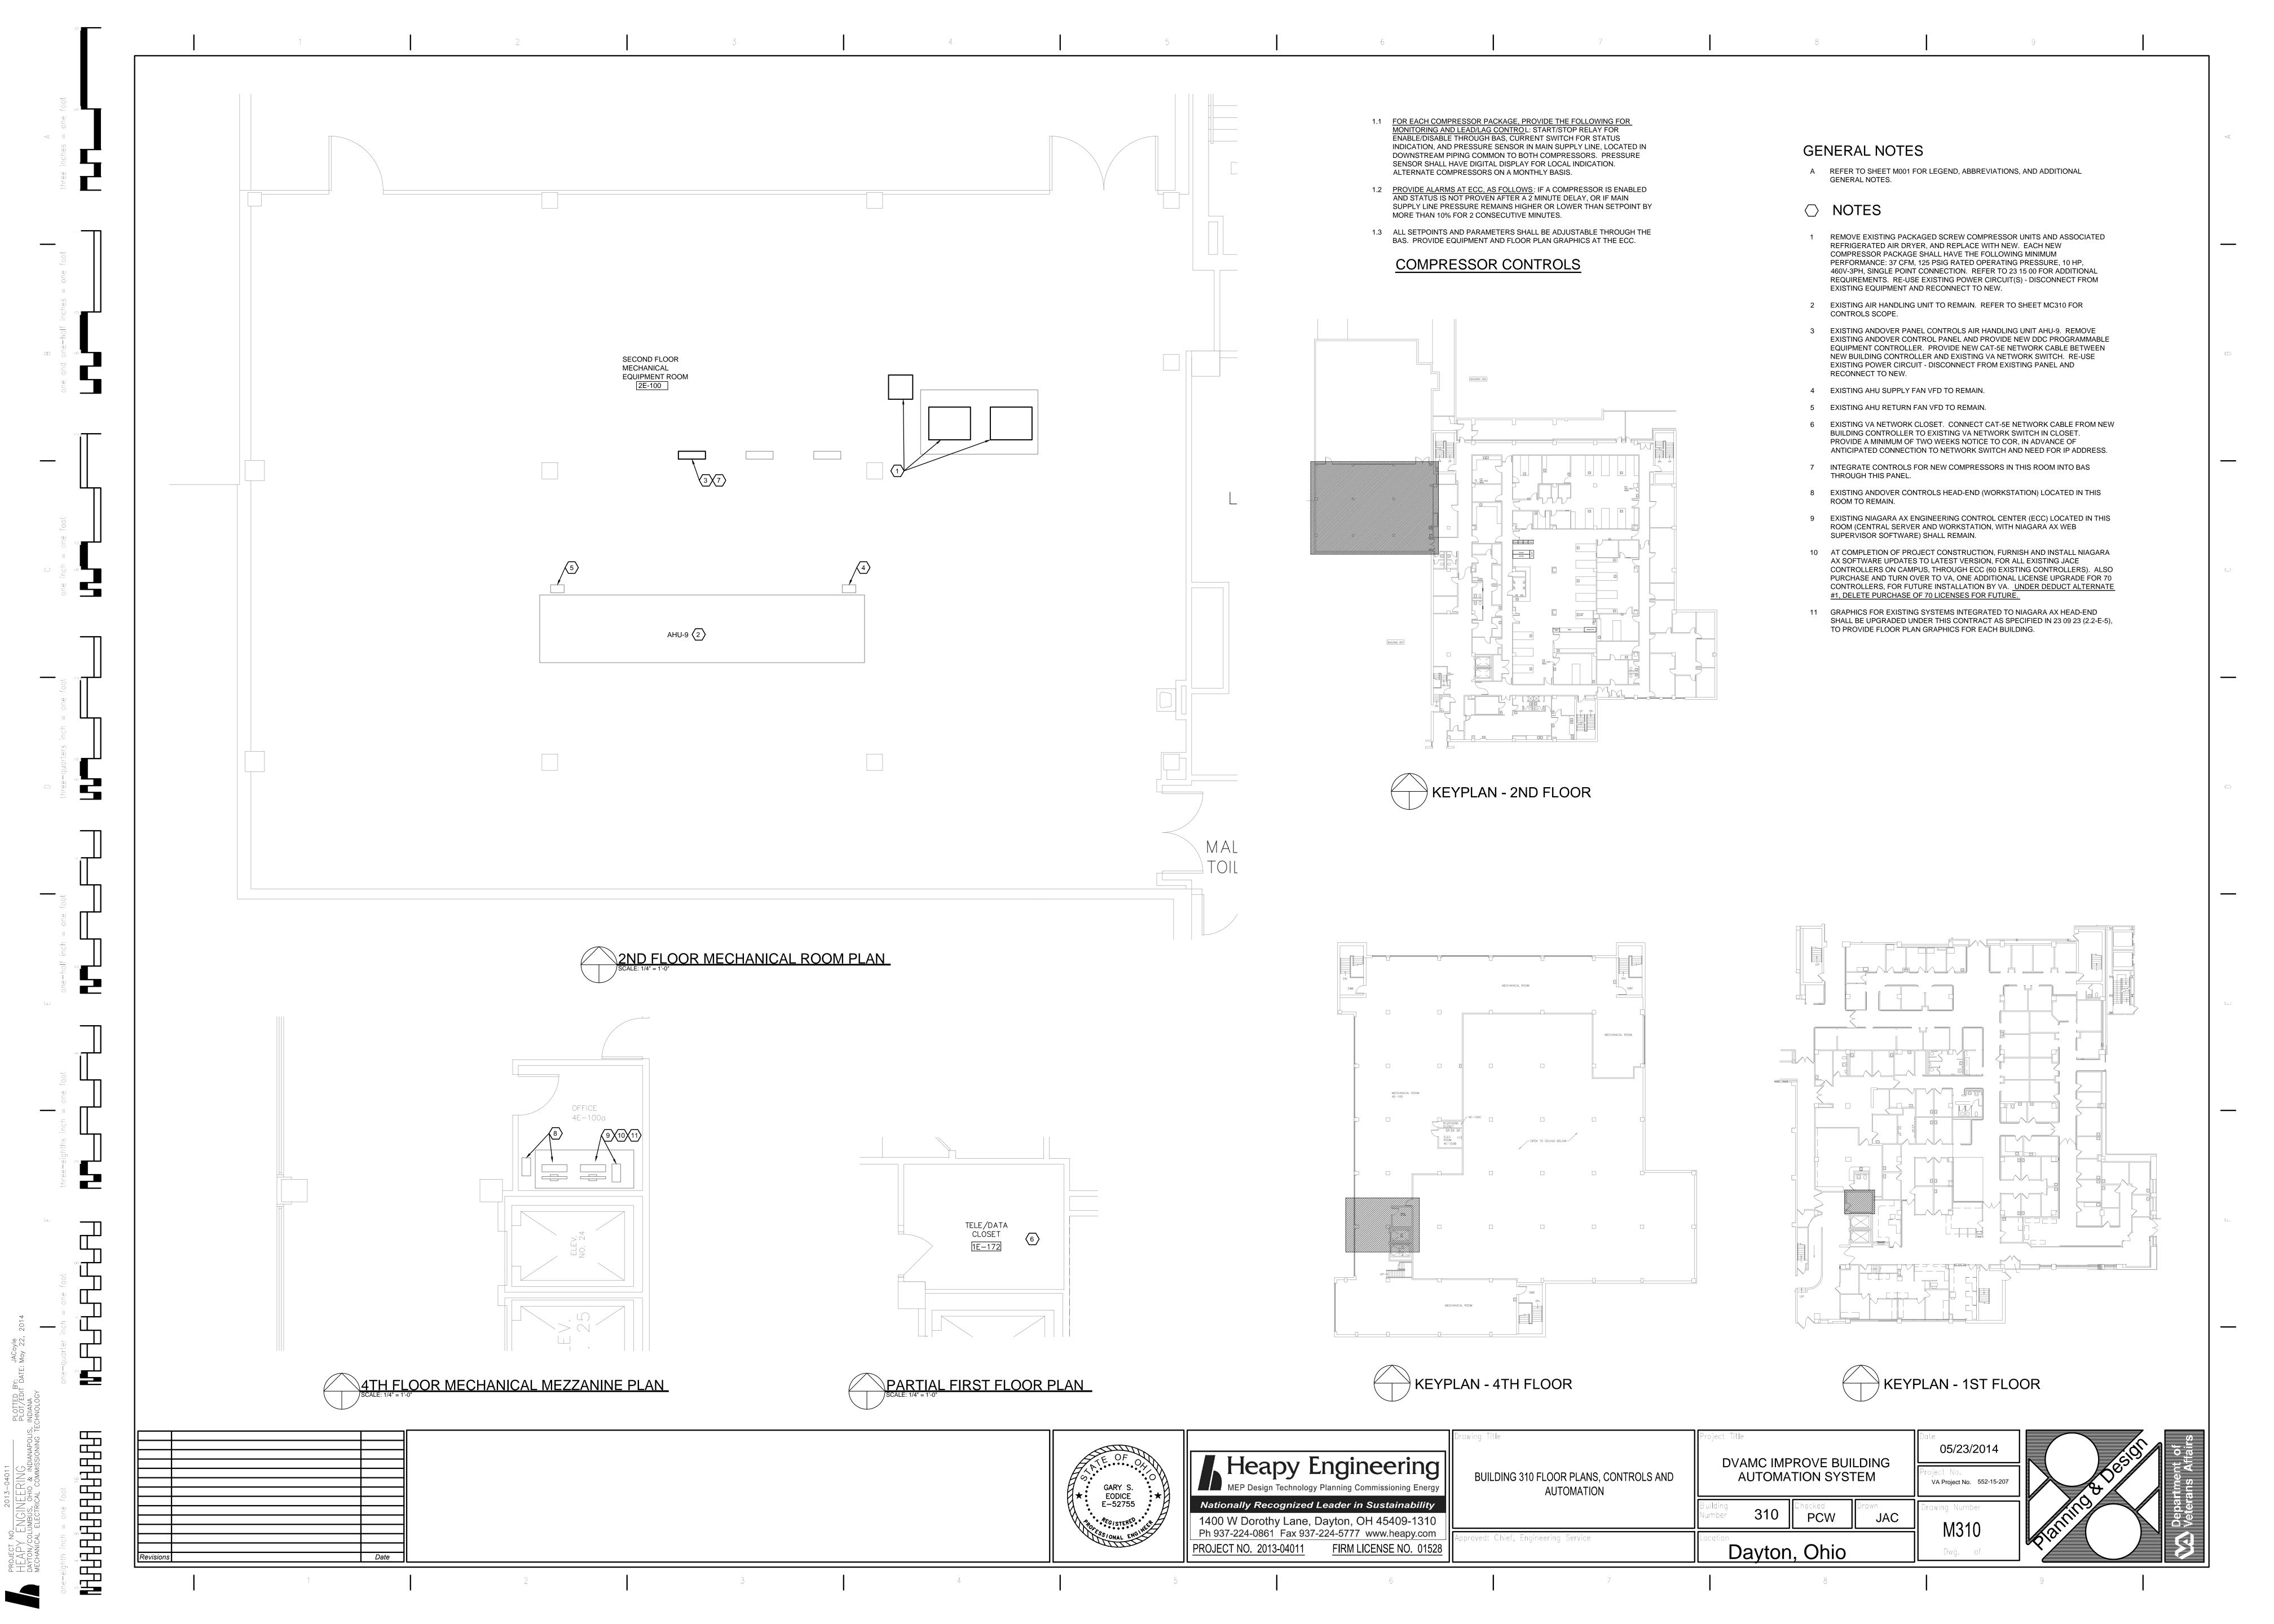

MECHANICAL EQUIPMENT SEQUENCES OF OPERATION

- A. THE NEW PROGRAMMABLE EQUIPMENT CONTROLLER (PEC) SHALL PROVIDE MASTER SCHEDULING FOR ALL EQUIPMENT SO NOTED HEREIN. THIS TIMECLOCK FUNCTION SHALL PROVIDE THE ABILITY TO SCHEDULE EVENTS 24 HOURS PER DAY, 7 DAYS PER WEEK, 365 DAYS PER YEAR (AND 366 FOR LEAP YEARS) BASED UPON A REAL-TIME CLOCK, AND SHALL PROVIDE TIMESTAMP ABILITY FOR ALL EVENTS (LOGS, ALARMS, ETC.). ALL TIMECLOCK FUNCTIONS OF THE PEC SHALL BE REAL-CALENDAR AND REAL-TIME BASED, AND SOFTWARE FUNCTIONS SHALL IN NO WAY BE AFFECTED BY THE 4-DIGIT VALUE OF
- B. WHEREVER IN THE FOLLOWING SEQUENCES OF OPERATION THE PHRASES "LOG AN ALARM OR MESSAGE", OR "SEND A MESSAGE TO THE PEC", OR SIMILAR PHRASES ARE USED, THIS SHALL MEAN THAT THE INFORMATION SHALL BE STORED IN MEMORY OF THE PEC, AND TRANSMITTED TO THE CENTRAL SYSTEM SERVER, AND THAT APPROPRIATE ALARM MESSAGES MAY BE AUTOMATICALLY TRANSMITTED AND PRINTED.
- C. SYSTEM CONCEPTS: THE EXISTING HVAC SYSTEM (ER-AHU-2) IS VARIABLE-AIR-VOLUME, CONSTANT SUPPLY AIR TEMPERATURE, WITH TERMINAL REHEAT (VAVRH). SUPPLY AND RETURN FAN MOTORS ARE VARIABLE SPEED, CONTROLLED BY VARIABLE FREQUENCY DRIVES. CHILLED WATER COOLING COILS, STEAM PREHEAT COILS, STEAM HUMIDIFIERS, PREFILTERS AND FINAL FILTERS ARE MOUNTED IN THE AHU LOCATED IN THE PENTHOUSE. HOT WATER REHEAT COILS ARE LOCATED IN THE EXISTING VAV AIR TERMINAL UNITS (ATU) SUPPLYING EACH SPACE; EACH ATU/COIL IS CONTROLLED BY ONE ROOM THERMOSTAT/SENSOR. STEAM AND CHILLED WATER ARE PROVIDED TO THE AHU FROM THE EXISTING CENTRAL STEAM AND CHW SYSTEMS. REHEAT HOT WATER IS PROVIDED FROM THE EXISTING REHEAT HOT WATER SYSTEM.
- 1.2. EXISTING AIR HANDLING UNIT ER-AHU-2
- A. THE EXISTING AIR HANDLING UNIT (ER-AHU-2) CONSISTS OF ONE SUPPLY FAN (WITH VFD), ONE RETURN FAN (WITH VFD), 30% PREFILTERS, 95% FINAL FILTERS, CHILLED WATER COOLING COILS, STEAM PREHEAT COILS (INTEGRAL FACE/BYPASS), STEAM HUMIDIFIER, AND OUTSIDE AIR, RETURN AIR AND RELIEF AIR DAMPERS. THE SUPPLY AND RETURN AIR FANS HAVE AIRFLOW MEASURING DEVICES

B. VENTILATION:

1. THE OUTSIDE AIR (OA) CFM SHALL REMAIN A FIXED QUANTITY (SETPOINT ADJUSTABLE) THROUGHOUT THE RANGE OF OPERATION OF THE VAV AHU. FAN SPEEDS AND DAMPER POSITIONS ACCOMPLISH THIS WERE ESTABLISHED DURING ORIGINAL TESTING AND BALANCING OF AHU, AND SHALL BE NOTED PRIOR TO REMOVAL OF EXISTING CONTROLS. INCORPORATE FAN SPEEDS AND DAMPER POSITIONS INTO NEW CONTROL SEQUENCES. AIR FLOW MEASUREMENT STATIONS (AFMS) MOUNTED IN THE SUPPLY AND RETURN AIR FAN INLETS SHALL BE USED TO DETERMINE THE INSTANTANEOUS OA BY READING/CALCULATING THE SUPPLY AIR CFM, READING/CALCULATING THE RETURN AIR CFM, AND SUBTRACTING THE TWO QUANTITIES. THE PEC SHALL THEN MODULATE THE OUTSIDE AIR (OA), RETURN AIR (RA), AND RELIEF AIR (RLFA) DAMPERS AS NECESSARY TO RESULT IN THE SETPOINT VOLUME OF OA. THE PEC SHALL CONTROL THE VARIABLE FREQUENCY DRIVES (VFD) OF THE RETURN FANS TO MAINTAIN THE NECESSARY TRACKING OF THE RETURN FANS WITH THE SUPPLY FANS. THE RETURN AIR FANS SHALL BE BALANCED AND CONTROLLED TO PROVIDE A CFM EQUAL TO THE SUPPLY CFM MINUS THE OA CFM PLUS RELIEF AIR AT ANY GIVEN INSTANT. THE PEC SHALL CONTROL THE SUPPLY FAN VFD TO MAINTAIN SETPOINT OF STATIC PRESSURE IN THE SUPPLY DUCTS, BASED UPON EXISTING DUCT STATIC PRESSURE SENSOR.

2. ECONOMIZER MODE: IN THE ECONOMIZER MODE, THE PEC SHALL MODULATE THE OUTSIDE AIR (OA). RETURN AIR (RA), AND RELIEF AIR (RLFA) DAMPERS TO MAINTAIN THE SUPPLY AIR TEMPERATURE SETPOINT (ADJUSTABLE). ECONOMIZER ACTIVATION SHALL BE BASED UPON AN ALGORITHM IN THE PEC, COMPARING THE ENTHALPY OF OA VERSUS RETURN AIR (RA), WHENEVER THE OA DRY BULB TEMPERATURE IS BELOW THE ECONOMIZER ACTIVATION DRY BULB TEMPERATURE SETPOINT (ADJUSTABLE). THE PEC ENTHALPY DETERMINATION SHALL BE BASED UPON SENSORS READING DRY BULB TEMPERATURE AND RELATIVE HUMIDITY OF THE OA AND RA, AND SHALL INITIATE ECONOMIZER OPERATION WHEN OA ENTHALPY IS LESS THAN RA ENTHALPY. THE OA, RA, AND RLFA DAMPERS SHALL BE UNDER THE CONTROL OF THE ECONOMIZER FUNCTIONS, SO LONG AS THE RESULTANT OA VOLUME EXCEEDS THE DESIGN OA CFM SETPOINT. THE OA SETPOINT (WHEN THE AHU IS IN A GIVEN MODE) SHALL BE UTILIZED AS THE MINIMUM PERMISSIBLE (LOWER LIMIT) VENTILATION QUANTITY, AND THE ECONOMIZER MODE SHALL BE OVERRIDDEN IF ITS OPERATION SHOULD RESULT IN AN OA QUANTITY LOWER THAN THE MINIMUM OA SETPOINT DESCRIBED UNDER NORMAL OPERATION. ALL EXISTING OA, RA, AND RLFA DAMPER ACTUATORS INCLUDE POSITION FEEDBACK POTENTIOMETERS TO CONFIRM

THEIR POSITIONS DURING THE OPERATING SEQUENCES DESCRIBED A. ECONOMIZER OPERATION SHALL FUNCTION AS "FIRST STAGE" COOLING, AND SHALL BE CONTROLLED UP TO MAXIMUM (FULL OPEN) POSITIONS PRIOR TO INITIATING CHILLED WATER VALVE MODULATION. WHENEVER THE ECONOMIZER FUNCTION IS CAPABLE OF MAINTAINING SUPPLY AIR TEMPERATURE SETPOINT THE CHILLED WATER VALVE SHALL BE CLOSED.

3. FREEZE PROTECTION: AIR TEMPERATURE LOW-LIMIT (LL) SENSORS SHALL OVERRIDE ALL OTHER CONTROL SEQUENCES AND INITIATE CONTROL SEQUENCES TO PREVENT FREEZING OF COILS WHENEVER THE AVERAGE BULK MIXED AIR TEMPERATURE DOWNSTREAM OF THE PREHEAT COIL (PHC LAT) FALLS BELOW THE LL SETPOINT (ADJUSTABLE).

A. ACTIVATION DURING NORMAL OPERATION, UNOCCUPIED MODE, OR ECONOMIZER: UPON A DECREASE IN AVERAGE AIR TEMPERATURE (PHC LAT) BELOW THE LL SETPOINT, THE PEC SHALL: 1) LOG AN "AIR TEMPERATURE LOW-LIMIT CONDITION; AHU INITIATING VENTILATION DECREASE SEQUENCE" ALARM MESSAGE, ALONG WITH: TIME-OF-ALARM/DATE; ALL AIR TEMPERATURES (OA, RA, MIXED, PREHEAT COIL LAT); LL SETPOINT; THE POSITIONS OF THE OA, RA, AND RLFA DAMPERS, THE PREHEAT COIL FACE/BYPASS DAMPERS, AND PREHEAT STEAM CONTROL VALVE; THE OA, SA, AND RA CFM, THE STATUS OF ALL FANS;

2) MODULATE THE OA AND RLFA DAMPERS TOWARD CLOSED AND THE RA DAMPER TOWARD OPEN, AND SPEED UP THE RA FANS (THROUGH CONTROL OF VFD'S) TO DECREASE THE AMOUNT OF OA (INCREASE THE AMOUNT OF RA) UNTIL THE AVERAGE PHC LAT EXCEEDS THE LL SETPOINT. RA FAN SPEED SHALL BE INCREASED TO PROVIDE UP TO MAXIMUM POSSIBLE RA CFM (NOT TO EXCEED SUPPLY AIR CFM IN EITHER OCCUPIED OR UNOCCUPIED MODE); RA CFM AND FAN SPEED SETPOINTS CORRESPONDING TO THIS CONDITION WAS VERIFIED DURING ORIGINAL TESTING AND BALANCING OF UNIT TO SIMULATE BOTH OCCUPIED AND UNOCCUPIED MODES, AND SHALL BE NOTED PRIOR TO REMOVAL OF EXISTING CONTROLS, AND INCORPORATED INTO NEW CONTROL SEQUENCES.

3) REPORT THE FINAL VALUES AND POSITIONS OF ALL ITEMS LISTED IN 1), ABOVE, AFTER AIR TEMPERATURE RISES ABOVE LL. REPORT THE MESSAGE "VENTILATION CFM BELOW SETPOINT/AIR TEMPERATURE ABOVE LOW LIMIT". 4) IF AIR TEMPERATURE REMAINS BELOW LL SETPOINT AFTER THE PEC HAS COMPLETED 2) AND 3), (TAKING DAMPER ACTUATORS' STROKE TIME INTO CONSIDERATION), THEN THE PEC SHALL INITIATE A TOTAL AHU SHUTDOWN SEQUENCE TO STOP ALL FANS, CLOSE THE RA DAMPERS, AND SEND ALARM MESSAGES INDICATING "AHU SHUTDOWN ON AIR TEMPERATURE LOW-LIMIT". REPORT FINAL VALUES AND POSITIONS OF ALL ITEMS LISTED IN 1), ABOVE. NOTE: PREHEAT VALVE SHALL REMAIN UNDER THERMOSTATIC CONTROL FOR FREEZE PROTECTION DURING

1. NORMAL OPERATION (OCCUPIED OR UNOCCUPIED MODE): THE TOTAL SUPPLY AIR QUANTITY SHALL VARY FROM MAXIMUM AS A RESULT OF SUPPLY FAN VFD, WHICH SHALL BE CONTROLLED BY THE

PEC IN RESPONSE TO EXISTING STATIC PRESSURE SENSOR REMOTELY MOUNTED IN THE SUPPLY AIR DISTRIBUTION DUCTWORK. A. THE SUPPLY AIR STATIC PRESSURE SETPOINT SHALL BE NOTED PRIOR TO REMOVAL OF EXISTING CONTROLS, AND INCORPORATED INTO NEW CONTROL SEQUENCES. SETPOINT SHALL ALSO BE RECORDED IN DOCUMENTATION.

B. EXISTING STATIC PRESSURE HIGH-LIMIT (SPHL) SENSOR (SETPOINT ADJUSTABLE) IS LOCATED IN THE MAIN SUPPLY AIR CHAMBER OF THE AHU, AND SHALL PROVIDE EMERGENCY STOP CONTROL OF THE SUPPLY AND RETURN FANS, TO PREVENT DUCTWORK DAMAGE. UPON ACTIVATION, THE SPHL FUNCTION SHALL SEND APPROPRIATE ALARM MESSAGES (SIMILAR TO THOSE DESCRIBED UNDER FREEZE PROTECTION, HEREIN) TO THE CONTROL PANEL, AND CENTRAL SYSTEM SERVER, AND SHALL ALSO BE ENTERED IN THE ALARM LOG. FINAL SETPOINT PRESSURE FOR SPHL WAS DETERMINED DURING ORIGINAL TESTING AND BALANCING OF AHU, AND SHALL BE NOTED PRIOR TO REMOVAL OF EXISTING CONTROLS, AND INCORPORATED INTO NEW CONTROL SEQUENCES. C. STATIC PRESSURE LOW-LIMIT (SPLL): SEE DESCRIPTION UNDER RETURN AIR CONTROL.

2. AIR TEMPERATURE CONTROL:

SHUTDOWN.

A. SUPPLY AIR TEMPERATURE AVERAGING SENSORS SHALL, THROUGH THE PEC, MODULATE THE CHILLED WATER VALVE(S) OF THE COOLING COIL TO MAINTAIN A CONSTANT SUPPLY AIR TEMPERATURE SETPOINT (SATSP; ADJUSTABLE) WHENEVER THE MIXED AIR TEMPERATURE (MAT) EXCEEDS THE SATSP. THE PEC SHALL PROVIDE THE CAPABILITY TO RESET THE SATSP BASED UPON

A RESET SCHEDULE OF SATSP VERSUS OUTSIDE AIR TEMPERATURE. B. IN ECONOMIZER MODE, THE OA, RA, AND RELIEF DAMPERS SHALL MODULATE TO MAINTAIN THE SATSP AS DESCRIBED UNDER THE "ECONOMIZER MODE" OF "VENTILATION", HEREIN.

C. WHEN THE MAT FALLS BELOW THE SATSP, THE PREHEAT COIL FACE/BYPASS DAMPERS AND STEAM CONTROL VALVE SHALL MODULATE TO RAISE THE AIR TEMPERATURE TO SATSP: 1) THE PEC SHALL OPEN THE STEAM CONTROL VALVE ON THE PREHEAT COIL, THEN SEQUENCE THE INTERNAL FACE AND BYPASS DAMPERS TO MAINTAIN THE PREHEAT COIL LEAVING AIR TEMPERATURE AT SETPOINT. WHENEVER THE OUTSIDE AIR TEMPERATURE IS BELOW 40 F (ADJUSTABLE), THE PREHEAT COIL VALVE SHALL BE FULLY OPEN. THE PEC SHALL MODULATE THE FACE AND BYPASS DAMPERS TO MAINTAIN TEMPERATURE AT SETPOINT.

2) WHEN THE OUTDOOR TEMPERATURE IS ABOVE A PREDETERMINED VALUE (SETPOINT ADJUSTABLE), THE DAMPERS SHALL RETURN TO THE MINIMUM POSITION (FULL BYPASS). THE PREHEAT COIL FACE/BYPASS DAMPERS SHALL BE IN THE FULL OPEN-TO-BYPASS POSITION WHENEVER THE COOLING COIL IS ACTIVE. THE PREHEAT COIL VALVE SHALL PROVIDE FLOW TO THE COIL ONLY WHEN THE OA TEMPERATURE IS BELOW A SPECIFIED VALUE (SETPOINT ADJUSTABLE). EXISTING PROGRAMMED SETPOINT SHALL BE NOTED PRIOR TO REMOVAL OF EXISTING CONTROLS, AND INCORPORATED INTO NEW CONTROL SEQUENCES.

3) EXISTING PREHEAT COIL CONTROL VALVE ACTUATOR AND FACE/BYPASS DAMPER ACTUATOR INCLUDE POSITION FEEDBACK POTENTIOMETERS TO CONFIRM THEIR POSITIONS DURING THE OPERATING SEQUENCES DESCRIBED.

D. RETURN AIR:

1. NORMAL OPERATION (OCCUPIED OR UNOCCUPIED MODE): THE RETURN AIR (RA) QUANTITY SHALL VARY FROM MAXIMUM AS A RESULT OF THE RETURN FAN VFD, WHICH SHALL BE CONTROLLED IN RESPONSE TO THE RA AIR FLOW MEASURING STATION (AFMS), AND IN CONJUNCTION WITH THE CONTROL OF OA, RA, AND RLFA DAMPERS AS DISCUSSED UNDER "VENTILATION", HEREIN. A. THE CONTROL OF THE RA FAN SHALL BE SUCH THAT IT SHALL TRACK THE SUPPLY FAN'S OPERATION (CFM VARIATIONS) AT ALL OPERATING CONDITIONS. THE RETURN AIR FAN SHALL BE BALANCED AND CONTROLLED TO PROVIDE A CFM EQUAL TO THE SUPPLY CFM MINUS THE OA CFM PLUS RELIEF AIR AT ANY GIVEN INSTANT. THE PE SHALL CONTROL THE VARIABLE FREQUENCY DRIVE (VFD) OF

THE RETURN FAN TO MAINTAIN THE PROPER CFM. SEE "FREEZE PROTECTION" FOR ADDITIONAL CONTROL SEQUENCES REQUIRED FOR THE RETURN FAN. B. EXISTING STATIC PRESSURE LOW-LIMIT (SPLL) SENSOR (SETPOINT ADJUSTABLE) IS LOCATED IN THE MAIN RETURN AIR CHAMBER OF THE AHU, AND SHALL PROVIDE EMERGENCY STOP CONTROL OF THE SUPPLY FAN AND RETURN FANS, TO PREVENT DUCTWORK DAMAGE. UPON ACTIVATION, THE SPLL FUNCTION SHALL CAUSE APPROPRIATE ALARM MESSAGES (SIMILAR TO THOSE DESCRIBED UNDER FREEZE PROTECTION, HEREIN) TO BE ENTERED IN THE ALARM LOG. FINAL SETPOINT PRESSURE FOR SPLL WAS DETERMINED DURING ORIGINAL TESTING AND BALANCING OF AHU, AND SHALL BE NOTED PRIOR TO REMOVAL OF EXISTING CONTROLS, AND INCORPORATED INTO NEW CONTROL SEQUENCES. NOTE: PEC SHALL BE CAPABLE OF DISTINGUISHING BETWEEN SPHL AND SPLL ALARMS (A COMMON "SAFETY" POINT SHALL NOT BE SHARED).

E. SMOKE/FIRE ALARM MODE: THE PEC SHALL BE INTERLOCKED WITH THE FACILITY'S FIRE ALARM SYSTEM. DUCT SMOKE DETECTORS AT ER-AHU-2: EXISTING SMOKE DETECTORS, WHEN ACTIVATED, SHALL TURN OFF THE AHU FANS, CLOSE ALL AHU DAMPERS, AND SEND AN ALARM SIGNAL AND MESSAGE TO THE PEC WHEN SMOKE IS DETECTED IN THE AIR STREAM.

F. SYSTEM RELATIVE HUMIDITY CONTROL: EXISTING HUMIDIFIER IN ER-AHU-2 IS CONNECTED TO THE LOW PRESSURE STEAM SUPPLY FROM THE EXISTING STEAM SYSTEM. THE PEC SHALL CONTROL THE HUMIDIFIER IN ER-AHU-2 BASED UPON THE AVERAGE READING OF THE RELATIVE HUMIDITY SENSOR (RH) LOCATED IN THE RETURN AIR DUCT. THE RH READING SHALL BE COMPARED TO RH SETPOINT (SETPOINT ADJUSTABLE IN THE PEC, INITIALLY SET AT 30%) TO DETERMINE THE NEED FOR HUMIDIFICATION IN THE SPACES. UPON A CALL FOR HUMIDIFICATION, THE PEC SHALL CONTROL THE STEAM HUMIDIFIER CONTROL VALVE TO INJECT STEAM INTO THE SUPPLY AIR STREAM. EXISTING RH HIGH-LIMIT SENSOR (INITIAL SETPOINT 85%, ADJUSTABLE) IS LOCATED IN THE SUPPLY AIR OF THE AHU, AND SHALL OVERRIDE THE HUMIDIFIER CONTROL TO PREVENT SUPPLY AIR FROM RISING ABOVE 85% RH (SETPOINT ADJUSTABLE) TO PREVENT CONDENSATION IN THE SA DUCT. EXISTING HUMIDIFIER STEAM CONTROL VALVE ACTUATOR INCLUDES POSITION FEEDBACK POTENTIOMETER TO CONFIRM ITS POSITIONS DURING THE OPERATING SEQUENCES DESCRIBED

G. COMPONENTS' STATUS AND MAINTENANCE INDICATION: 1. EXISTING DIFFERENTIAL PRESSURE SENSORS AND TRANSDUCERS (DPT) ARE MOUNTED ACROSS THE AHU FILTER BANKS. THROUGH THE PEC, THE DPT SHALL TRANSMIT "FILTER MAINTENANCE REQUIRED" ALARM MESSAGES IF THE DP ACROSS FILTER BANKS INDICATE FILTERS SHOULD BE REPLACED (ALARM SETPOINTS ADJUSTABLE; SEPARATE SETPOINTS FOR PREFILTERS AND FINAL FILTERS ARE EXISTING, AND SHALL BE NOTED PRIOR TO REMOVAL OF EXISTING CONTROLS, AND INCORPORATED INTO NEW CONTROL SEQUENCES).

A. THE PEC SHALL BE ABLE TO ACCESS AND DISPLAY THE ACTUAL DP FROM EACH DPT. B. THE "CLEAN" FILTERS' DP WAS NOTED AT THE TIME OF ORIGINAL AHU TESTING AND BALANCING, AND SHALL BE NOTED PRIOR TO REMOVAL OF EXISTING CONTROLS, AND INCORPORATED INTO NEW

CONTROL SEQUENCES. CLEAN FILTER VALUE SHALL BE DISPLAYED FOR COMPARISON TO THE ACTUAL INSTANTANEOUS READING FROM THE DPT'S. 2. EXISTING ADJUSTABLE CURRENT SENSORS (ACS) SHALL MONITOR ALL SUPPLY FANS', RETURN FANS', BOOSTER FANS', AND EXHAUST FANS' STATUS BY READING THE AMPS DRAWN BY THEIR MOTORS. ACS SHALL BE CAPABLE OF, AND SHALL BE CONFIGURED TO, DISTINGUISH BETWEEN A BROKEN FAN BELT CONDITION AND NORMAL FAN OPERATION. THROUGH THE PEC, THE ACS SHALL INDICATE THE RUN STATUS OF THE FANS.

1.3. SPACE TEMPERATURE CONTROL; VAV AND CAV REHEAT AIR TERMINAL UNITS: EXISTING PRESSURE INDEPENDENT VAVRH ATU WITH ANDOVER INFINET II 12866-V DIRECT DIGITAL CONTROLLERS ON AND A ROOM TEMPERATURE SENSOR (THERMOSTAT) TO REMAIN. INTEGRATE EXISTING ATU CONTROLLERS INTO NEW TRIDIUM JACE. PROVIDE JACE WITH ANDOVER DRIVER AS REQUIRED FOR THIS INTEGRATION. COORDINATE DRIVER REQUIREMENTS WITH ENGINEER PRIOR TO ORDERING.

1.4. RETURN AIR BOOSTER FAN ER-F-3: FAN ER-F-3 SHALL BE CONSTANT VOLUME, SHALL RUN CONTINUOUSLY, AND SHALL HAVE A KEYED SWITCH, WITH PILOT LIGHT RUN INDICATION, TO START/STOP THE FAN.

A. ER-F-3 FAN MOTOR CONTROL SHALL ALSO BE INTERLOCKED WITH THE SUPPLY AIR FAN MOTOR CONTROL OF EXISTING AIR HANDLING UNIT ER-AHU-1, AND SHALL START AND STOP IN ACCORDANCE WITH THE STATUS OF THE SUPPLY FAN. ER-F-3 FAN MOTOR SHALL BE SHUT OFF IF THE AHU SUPPLY FAN IS SHUT OFF FOR ANY REASON (EITHER BY SAFETIES, OR CONTROLS OR FIRE ALARM INTERFACE, OR MANUAL SWITCHING, ETC.).

1.7. EXHAUST FAN SYSTEMS:

A. EXISTING EXHAUST FANS ER-F-1, ER-F-2: EACH SHALL HAVE A KEYED SWITCH, WITH PILOT LIGHT RUN INDICATION, TO START/STOP EACH FAN. B. EXISTING EXHAUST FANS ER-F-1 (DECONTAMINATION ROOM) AND ER-F-2 (ISOLATION ROOMS) SHALL BE CONSTANT VOLUME, SHALL NORMALLY RUN CONTINUOUSLY, AND SHALL HAVE START/STOP CAPABILITY PROVIDED THROUGH THE DDC SYSTEM. EXISTING ADJUSTABLE CURRENT SENSOR SHALL BE USED FOR RUN STATUS INDICATION THROUGH THE PEC. C. EXISTING ADJUSTABLE CURRENT SENSORS (ACS) SHALL BE USED TO MONITOR FANS' STATUS BY READING THE AMPS DRAWN BY THEIR MOTORS. ACS SHALL BE CAPABLE OF, AND SHALL BE CONFIGURED TO, DISTINGUISH BETWEEN A BROKEN FAN BELT CONDITION AND NORMAL FAN OPERATION. THROUGH THE PEC, THE ACS SHALL INDICATE THE RUN STATUS OF THE FANS. D. EACH EXHAUST FAN IS EQUIPPED WITH A MOTORIZED ANTI-BACKFLOW DAMPER. THIS DAMPER SHALL OPEN WHEN THE FAN IS TURNED ON AND CLOSE WHEN THE FAN IS OFF. FOR FANS EQUIPPED WITH MOTORIZED DAMPERS, THE DAMPERS' ELECTRIC ACTUATORS ARE POWERED DIRECTLY FROM THE MOTOR POWER SUPPLY, WHICH SHALL OPEN THE DAMPERS WHEN FANS ARE STARTED. 1. EXHAUST FAN ER-F-1 HAS A MOTORIZED ANTI-BACKFLOW DAMPER IN THE DUCT ON THE DISCHARGE SIDE.

1.8. ISOLATION ROOM DIFFERENTIAL PRESSURE MONITOR A. ROOM DIFFERENTIAL PRESSURE MONITORS FOR EACH ISOLATION ROOM ARE EXISTING TO REMAIN.

2. EXHAUST FAN ER-F-2 HAS A MOTORIZED ANTI-BACKFLOW DAMPER IN THE DUCT ON THE INLET SIDE.

LEGEND (APPLIES TO AIR HANDLING UNIT ER-AHU-2)

CURRENT SENSING RELAY TRANSMITS MOTOR CURRENT TO DCP TO INDICATE STATUS OF TRANSMITS DIFFERENTIAL PRESSURE TO DCP TO INDICATE FILTER DIRECT DIGITAL CONTROL PANEL CONTROLS OPERATION OF AIR HANDLING UNIT IN ACCORDANCE WITH THE SEQUENCE OF OPERATION MODULATING OUTSIDE AIR PROPORTIONS FLOW OF OUTSIDE DAMPER AIR IN RESPONSE TO DCP AND CLOSES WHEN SUPPLY FAN STOPS MODULATING RETURN AIR PROPORTIONS FLOW OF RETURN AIR IN RESPONSE TO DCP AND DAMPER OPENS WHEN SUPPLY FAN STOPS PROPORTIONS FLOW OF RELIEF MODULATING RELIEF AIR AIR IN RESPONSE TO DCP AND CLOSES WHEN SUPPLY FAN STOPS MODULATING PREHEAT COIL PROPORTIONS FLOW OF AIR THROUGH PREHEAT COIL IN RESPONSE TO DCP FACE & BYPASS DAMPER TEMPERATURE CONTROL AND FREEZE PROTECTION

DSD DUCT SMOKE DETECTORS PROVIDE SMOKE SIGNAL TO DCP ECC ENGINEERING CONTROL CENTER LOCATED IN B310 4TH FLOOR MEZZANINE FOR MONITORING OF SYSTEM OPERATIONS

RETURN AIR HUMIDITY SENSOR SENSES AND TRANSMITS RETURN AIR HUMIDITY TO DCP FOR CONTROL AND INDICATION SENSES AND TRANSMITS SUPPLY AIR H-2 SUPPLY AIR HUMIDITY SENSOR HUMIDITY TO DCP FOR CONTROL AND (HIGH LIMIT)

INDICATION

SENSES AND TRANSMITS DUCT

AIR DRY BULB TEMPERATURE TO

DCP FOR CONTROL AND INDICATION

PROPORTIONS FLOW OF CHILLED

VELOCITY PRESSURE TO DCP

OUTSIDE AIR HUMIDITY SENSES AND TRANSMITS OUTSIDE AIR HUMIDITY TO DCP FOR ENTHALPY CALCULATION.

SENSES AND TRANSMITS DUCT STATIC SPS-1 SUPPLY DUCT STATIC PRESSURE PRESSURE TO DCP FOR CONTROL AND SENSOR INDICATION

SPS-2 SUPPLY DUCT HIGH LIMIT SENSES AND TRANSMITS DUCT STATIC PRESSURE SENSOR STATIC PRESSURE NEAR SUPPLY FAN TO DCP

SPS-3 RETURN DUCT HIGH LIMIT

TEMPERATURE SENSOR

MODULATING CHILLED WATER

STATIC PRESSURE NEAR RETURN STATIC PRESSURE SENSOR FAN TO DCP SENSES AND TRANSMITS SUPPLY SUPPLY AIR TEMPERATURE AIR DRY BULB TEMPERATURE TO DCP FOR CONTROL AND INDICATION

OUTSIDE AIR TEMPERATURE SENSES AND TRANSMITS OUTSIDE AIR DRY BULB TEMPERATURE TO SENSOR DCP FOR CONTROL AND INDICATION

SENSES AND TRANSMITS PREHEAT PREHEAT COIL LEAVING AIR LOW LIMIT TEMPERATURE AIR DRY BULB TEMPERATURE TO SENSOR (FREEZESTAT) DCP FOR CONTROL AND INDICATION SENSES AND TRANSMITS RETURN RETURN AIR


DCP FOR INDICATION ONLY SENSES AND TRANSMITS MIXED MIXED AIR TEMPERATURE AIR DRY BULB TEMPERATURE TO SENSOR

SENSES AND TRANSMITS COOLING COOLING COIL LEAVING AIR TEMPERTURE COIL DISCHARGE AIR TEMPERATURE TO DCP FOR INDICATION ONLY

CONTROL VALVE WATER TO COOLING COIL IN RESPONSE PROPORTIONS FLOW OF STEAM MODULATING STEAM CONTROL VALVE TO PREHEAT COIL IN RESPONSE

PROPORTIONS FLOW OF STEAM TO MODULATING STEAM HUMIDIFIER IN RESPONSE TO DCP CONTROL VALVE VPS VELOCITY PRESSURE SENSOR SENSES AND TRANSMITS


FOR AIRFLOW MEASUREMENT CONTROLS SUPPLY AND VSMC VARIABLE SPEED MOTOR **RETURN FAN MOTOR SPEEDS** CONTROLLER WITH MOTOR IN RESPONSE TO DCP

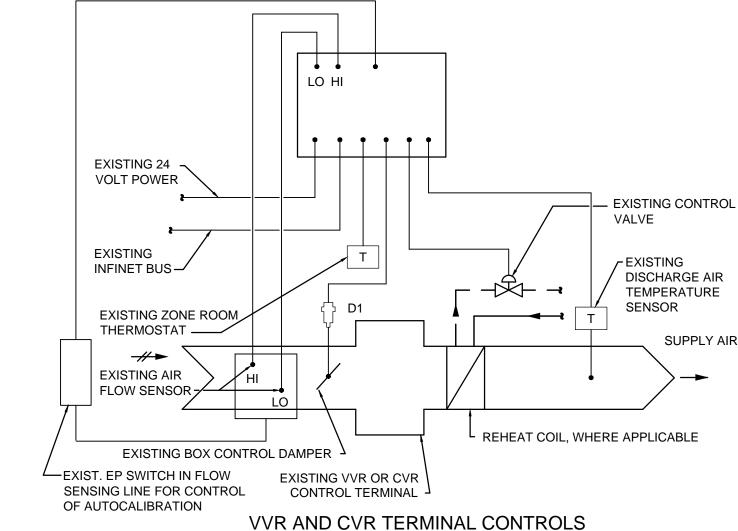


TO AIR HANDLING UNIT CONTROL SEQUENCE FOR OPERATION.

GENERAL NOTES

- 1 A COMPLETE SYSTEM OF AUTOMATIC TEMPERATURE CONTROLS SHALL BE INSTALLED UNDER THIS CONTRACT AS REQUIRED TO ACCOMPLISH THE SEQUENCE OF CONTROL FOR VARIOUS ITEMS OF EQUIPMENT AND SYSTEMS AS DESCRIBED HEREINAFTER. THE SYSTEM SHALL BE A DIRECT DIGITAL CONTROL SYSTEM UTILIZING PNEUMATIC
- ALL CONTROL POWER SOURCES REQUIRED SHALL BE PROVIDED UNDER THE ATC WORK. THIS WORK SHALL INCLUDE BUT NOT BE LIMITED TO WIRING, CONDUIT, TRANSFORMERS, RELAYS AND FUSES.
- POINTS LIST IS SHOWN AS AN AID TO THE CONTRACTOR INDICATING THE MINIMUM POINTS REQUIRED FOR CONTROL AND MONITORING. ALL INPUT AND OUTPUT POINTS, AND THEIR REQUIRED INTERFACE AND ACCESSORY HARDWARE, SHALL BE PROVIDED FOR A COMPLETE AND FUNCTIONAL CONTROL SYSTEM. IF OR WHEN ADDITIONAL POINTS ARE REQUIRED TO ACCOMPLISH THE SEQUENCES OF CONTROL SPECIFIED, THESE POINTS, ALONG WITH ADDITIONAL DIRECT DIGITAL CONTROL PANEL(S) (IF REQUIRED), SHALL ALSO BE PROVIDED.

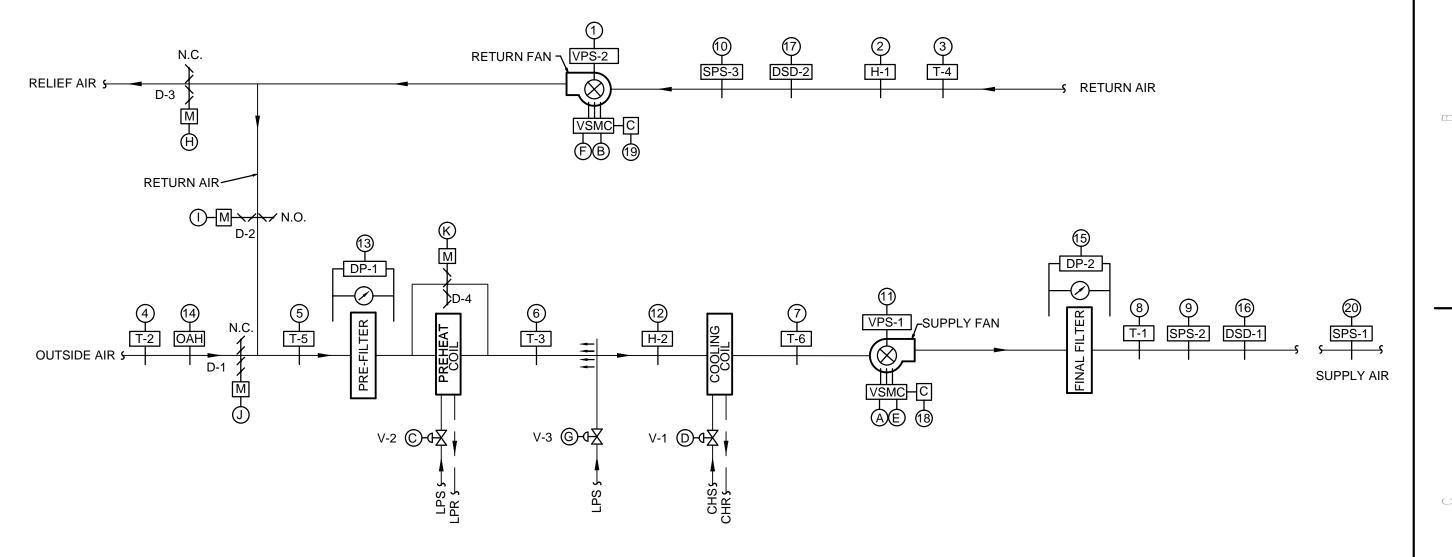

AIR HANDLING UNIT ER-AHU-2

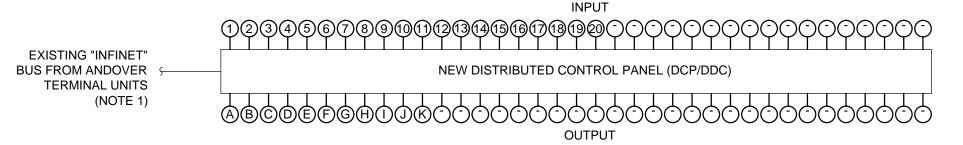

CONTROL PANEL ER-AHU-2


	D∪INIT	DEVICE	DEVICE	P	OIN	٦
	ID	TAG	DESCRIPTION	DI	DO	- ک
(NOTE 2)	1	VPS-2	RETURN AIR FLOW MEASURING STATION			-
(NOTE 2)	2	H-1	RETURN AIR HUMIDITY SENSOR		T	_
(NOTE 2)	3	T-4	RETURN AIR TEMPERATURE SENSOR		T	-
(NOTE 2)	4	T-2	OUTSIDE AIR TEMPERATURE SENSOR (GLOBAL POINT)		T	_
(NOTE 2)	5	T-5	MIXED AIR TEMPERATURE SENSOR		Ī	
(NOTE 2)	6	T-3	PREHEAT COIL LEAVING AIR LOW LIMIT TEMPERATURE SENSOR (FREEZESTAT)	Х	T	-
(NOTE 2)	7	T-6	COOLING COIL LEAVING AIR TEMPERATURE SENSOR		T	-
(NOTE 2)	8	T-1	SUPPLY AIR TEMPERATURE SENSOR		ı	_
(NOTE 2)	9	SPS-2	SUPPLY DUCT HIGH STATIC SAFETY	Х		_
(NOTE 2)	10	SPS-3	RETURN DUCT HIGH STATIC SAFETY	Х		_
(NOTE 2)	11	VPS-1	SUPPLY AIR FLOW MEASURING STATION			_
(NOTE 2)	12	H-2	SUPPLY AIR HUMIDITY SENSOR (HIGH LIMIT)	Х		_
(NOTE 2)	13	DP-1	PRE FILTER PRESSURE DROP			
(NOTE 2)	14	OAH	OUTSIDE AIR HUMIDITY (GLOBAL POINT)			_
(NOTE 2)	15	DP-2	FINAL FILTER PRESSURE DROP			_
(NOTE 2)	16	DSD-1	SUPPLY AIR DUCT SMOKE DETECTOR (FIRE SYSTEM SHUTDOWN)	Х		
(NOTE 2)	17	DSD-2	RETURN AIR DUCT SMOKE DETECTOR (FIRE SYSTEM SHUTDOWN)	Х		
(NOTE 2)	18	С	SUPPLY FAN STATUS CURRENT SWITCH	Х		
(NOTE 2)	19	С	RETURN FAN STATUS CURRENT SWITCH	Х		
(NOTE 2)	20	SPS-1	SUPPLY AIR STATIC PRESSURE SENSOR			_
(NOTE 2)	Α	VSMC	SUPPLY FAN START-STOP		X	_
(NOTE 2)	В		RETURN FAN START-STOP		X	_
(NOTE 2)	С	V-2	MODULATING PREHEAT COIL VALVE		Ħ	_
(NOTE 2)	D	V-1	MODULATING COOLING COIL VALVE		t	_
(NOTE 2)	E	VSMC	SUPPLY FAN VARIABLE SPEED MOTOR CONTROLLER		T	_
(NOTE 2)	F		RETURN FAN VARIABLE SPEED MOTOR CONTROLLER		T	-
(NOTE 2)	G	V-3	MODULATING STEAM HUMIDIFIER VALVE		t	_
(NOTE 2)	Н	D-3	MODULATING RELIEF AIR DAMPER		T	-
(NOTE 2)	ı	D-2	MODULATING RETURN AIR DAMPER		T	-
(NOTE 2)	J	D-1	MODULATING OUTSIDE AIR DAMPER		t	-
(NOTE 2)	K	D-4	MODULATING PREHEAT COIL FACE & BYPASS DAMPER			_

DDC ZONE CONTROL IS EXISTING ANDOVER TERMINAL UNIT CONTROLLERS - REFER TO VVR AND CVR CONTROL TERMINAL DIAGRAM ON THIS SHEET. INTEGRATE EXISTING ANDOVER ZONE CONTROLS INTO NEW NIAGARA AX PROGRAMMABLE EQUIPMENT CONTROLLER. PROVIDE EQUIPMENT AND FLOOR PLAN GRAPHICS AT ECC.

PCW

Dayton, Ohio

2 EXISTING ELECTRONIC SENSOR/RELAY/DEVICE TO REMAIN, SHALL BE RE-USED.

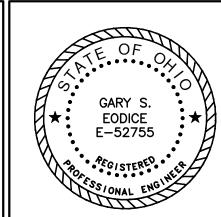

Heapy Engineering MEP Design Technology Planning Commissioning Energy lationally Recognized Leader in Sustainabil 1400 W Dorothy Lane, Dayton, OH 45409-1310 Ph 937-224-0861 Fax 937-224-5777 www.heapy.com PROJECT NO. 2013-04011 FIRM LICENSE NO. 01528


BUILDING 310 CONTROLS AND AUTOMATION

ed: Chief, Engineering Service

DVAMC IMPROVE BUILDING **AUTOMATION SYSTEM**

05/23/2014 VA Project No. 552-15-207

MC310

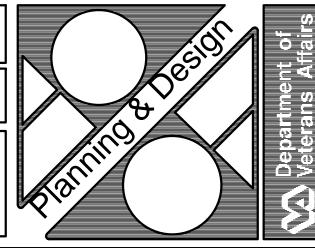

GENERAL NOTES A REFER TO SHEET M001 FOR LEGEND, ABBREVIATIONS, AND ADDITIONAL GENERAL NOTES. ○ NOTES 1 REMOVE EXISTING PACKAGED SCREW COMPRESSOR UNITS AND ASSOCIATED REFRIGERATED AIR DRYER AND COALESCING FILTER, AND FURNISH AND INSTALL NEW. EACH NEW COMPRESSOR PACKAGE SHALL HAVE THE FOLLOWING MINIMUM PERFORMANCE: 31 CFM, 150 PSIG RATED OPERATING PRESSURE, 7.5 HP, 460V-3PH, SINGLE POINT CONNECTION. REFER TO 23 15 00 FOR ADDITIONAL REQUIREMENTS. RE-USE EXISTING POWER CIRCUIT(S) -DISCONNECT FROM EXISTING EQUIPMENT AND RECONNECT TO NEW. 2 EXISTING TRIDIUM NIAGRA AX JACE PANEL TO REMAIN. INTEGRATE CONTROLS FOR NEW COMPRESSORS IN THIS ROOM INTO BAS THROUGH THIS PANEL. 1.1 FOR EACH COMPRESSOR PACKAGE, PROVIDE THE FOLLOWING FOR MONITORING AND LEAD/LAG CONTRO L: START/STOP RELAY FOR ENABLE/DISABLE THROUGH BAS, CURRENT SWITCH FOR STATUS INDICATION, AND PRESSURE SENSOR IN MAIN SUPPLY LINE, LOCATED IN DOWNSTREAM PIPING COMMON TO BOTH COMPRESSORS. PRESSURE SENSOR SHALL HAVE DIGITAL DISPLAY FOR LOCAL INDICATION. ALTERNATE COMPRESSORS ON A MONTHLY BASIS. 1.2 <u>PROVIDE ALARMS AT ECC, AS FOLLOWS</u>: IF A COMPRESSOR IS ENABLED AND STATUS IS NOT PROVEN AFTER A 2 MINUTE DELAY, OR IF MAIN SUPPLY LINE PRESSURE REMAINS HIGHER OR LOWER THAN SETPOINT BY MORE THAN 10% FOR 2 CONSECUTIVE MINUTES. MECHANICAL ROOM 1.3 ALL SETPOINTS AND PARAMETERS SHALL BE ADJUSTABLE THROUGH THE BAS. PROVIDE EQUIPMENT AND FLOOR PLAN GRAPHICS AT THE ECC. **COMPRESSOR CONTROLS** MECHANICAL ROOM FLOOR PLAN KEYPLAN - 1ST FLOOR 05/23/2014 Heapy Engineering **DVAMC IMPROVE BUILDING** BUILDING 320 FLOOR PLANS, CONTROLS AND AUTOMATION **AUTOMATION SYSTEM** VA Project No. 552-15-207 GARY S. EODICE E-52755 Nationally Recognized Leader in Sustainabilit PCW 1400 W Dorothy Lane, Dayton, OH 45409-1310 Ph 937-224-0861 Fax 937-224-5777 www.heapy.com ved: Chief, Engineering Service PROJECT NO. 2013-04011 FIRM LICENSE NO. 01528 Dayton, Ohio

